




 



Glenwood Media Cabinet


ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting. When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

PARTS INVENTORY		
ID	DESCRIPTION	QTY
1	CABINET	1
2	SIDE LEGS	2
3	MIDDLE LEG	1


HARDWARE INVENTORY				
ID	IMAGE	DESCRIPTION	SIZE	QTY
A		ALLEN BOLT	M8 x 30mm	8
B		LOCK WASHER	14 x 9mm	8
C		FLAT WASHER	19 x 9mm	8
D		ALLEN WRENCH	5mm	1
E		LEVELING GLIDE	M8 x 35mm	5
F		SHELF PIN	5mm	8
G		SCREW	M4 x 15mm	8

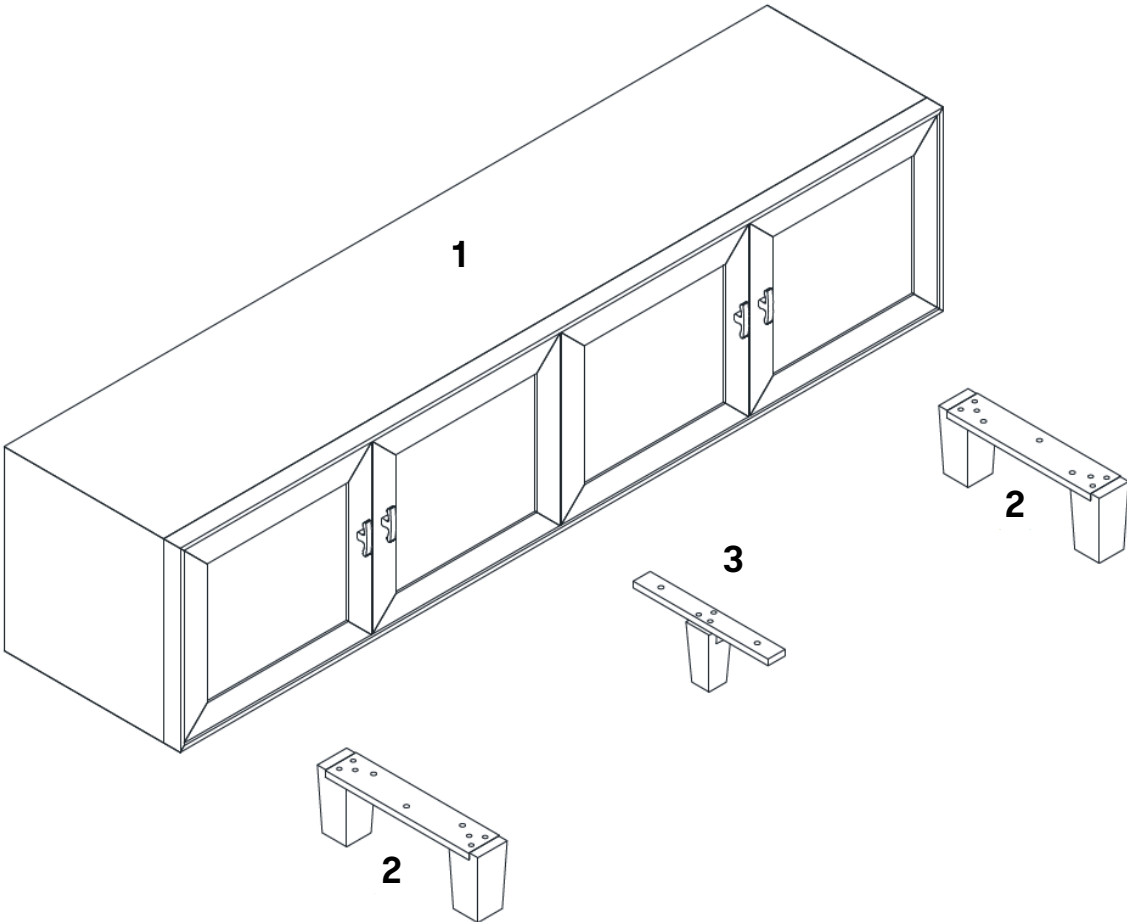

JOON LOLOI


STEP 1

Place the **CABINET (1)** on its back so that the bottom can be easily accessed. Slide **LOCK WASHER (B)** and then **FLAT WASHER (C)** onto **ALLEN BOLT (A)**. Align the bolt holes on the legs and attach them to the bottom of the cabinet using **ALLEN WRENCH (D)** to screw in **ALLEN BOLT (A)**. Do this for all 8 bolts for both **SIDE LEGS (2)** and the **MIDDLE LEG (3)**.

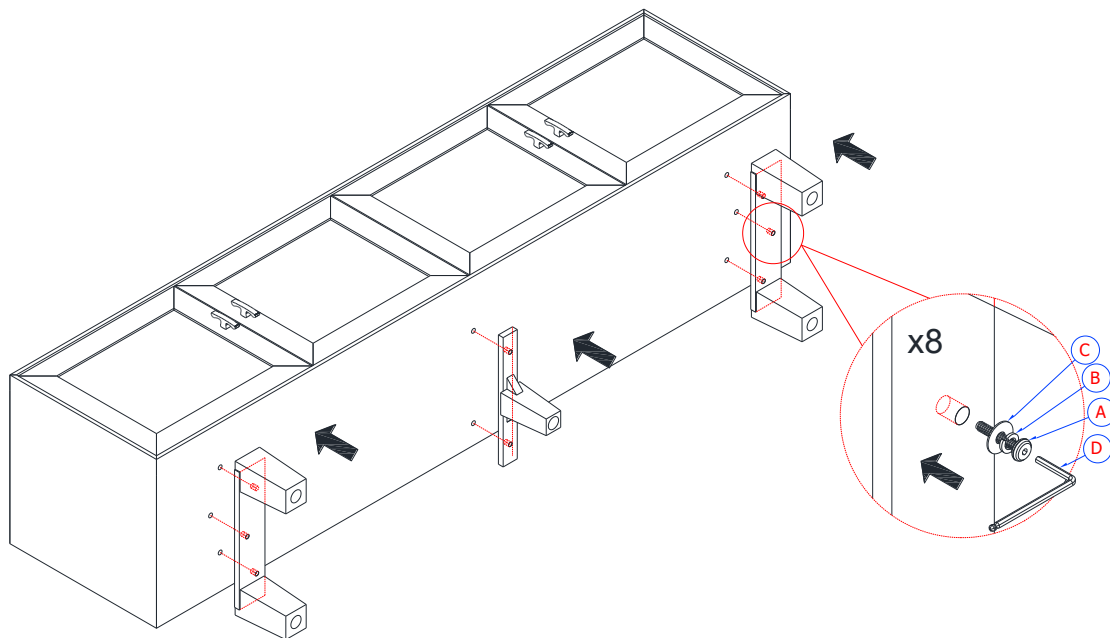


STEP 2

The **LEVELING GLIDE (E)** is located at the bottom of the **CABINET (1)**. When you place the furniture in the desired position, you can adjust the leveling glides depending on the surface. Make sure it is level and stable. Once your cabinet is level, the assembly is complete.

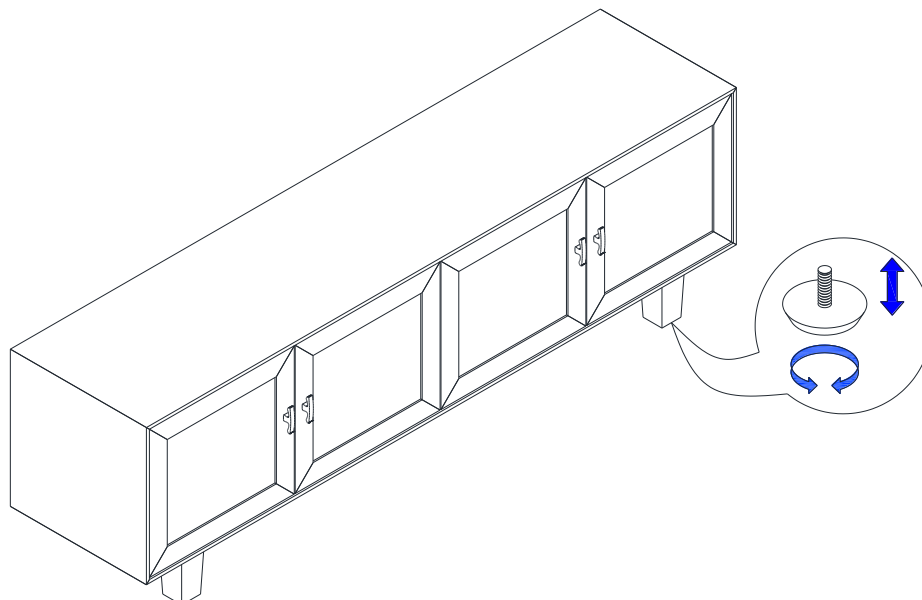

STEP 3


The wood adjustable shelf is attached to the **SHELF PIN (F)** for shipping. To change the position of the shelf, first remove the **SCREWS (G)** from the **SHELF PIN (F)**. Remove the shelf and relocate the **SHELF PIN (F)** to another set of pre-bored holes. Reinstall the shelf.

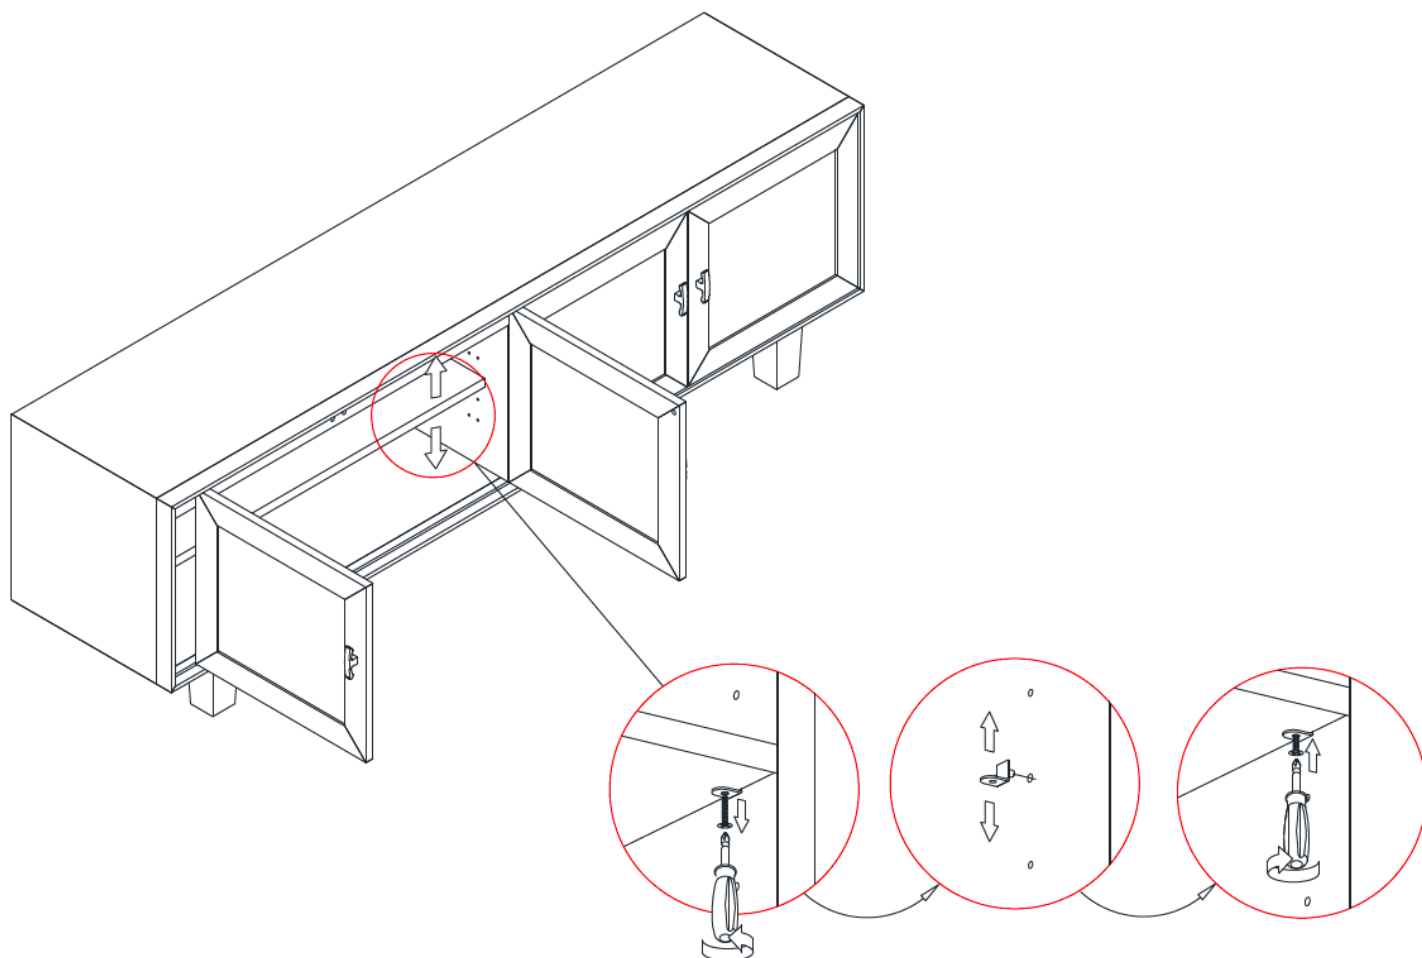

OPERATING INSTRUCTIONS

This unit has been designed to support the maximum load as shown.

Exceeding these load limits could cause sagging, instability, product collapse, and/or injury.

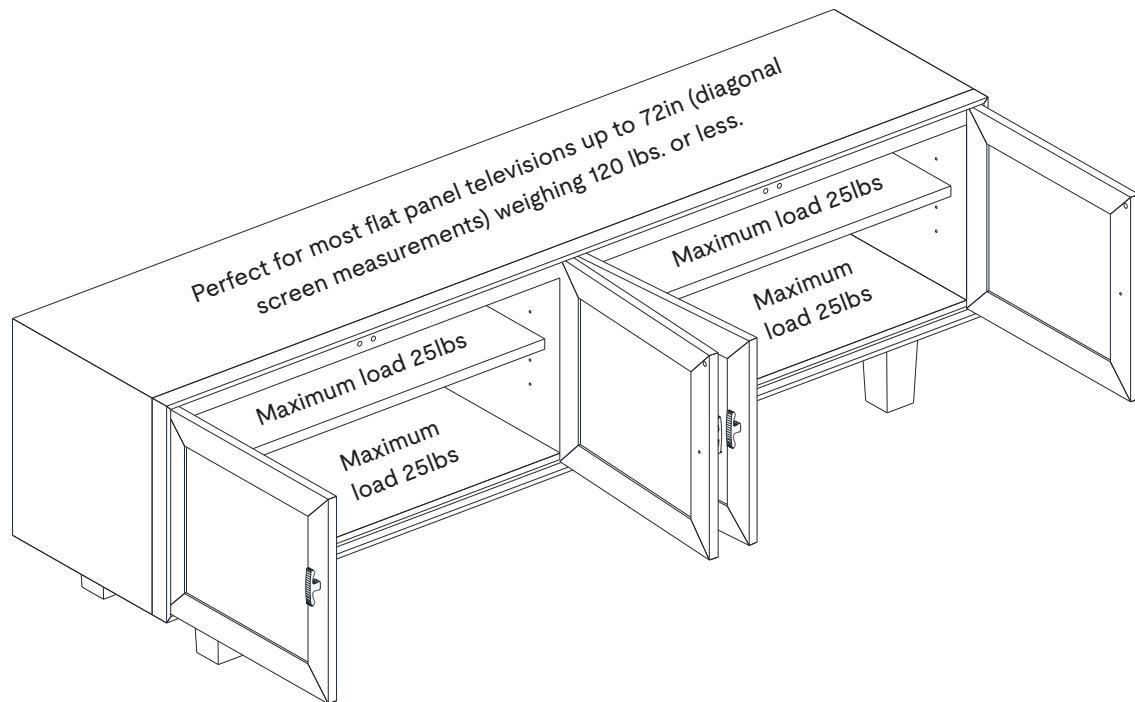

WARNING! Death or serious injury may occur when children climb on audio and/or video equipment furniture.

A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over onto the child.

WARNING! Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

CARE AND MAINTENANCE

- Use a soft, clean cloth that will not scratch the surface when dusting
- Using any kind of solvent on your furniture may damage the surface
- Never use water to clean your furniture as it may cause damage to the finish
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spills gently. To avoid abrasion, wipe surface gently
- Make sure all bolts/screws are tightly fastened before the unit is used, check bolts/screws periodically and tighten them if necessary
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture