

ASSEMBLY INSTRUCTIONS

Edwin Table Lamp

LIGHTING

⚠ SAFETY INSTRUCTIONS

These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lamp. This lamp has been rated for up to one (1) E26 150-watt maximum light bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage. This lamp is meant for indoor use. DRY LOCATION ONLY. **SAVE THESE INSTRUCTIONS.**


⚠ WARNING

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK OR PERSONAL INJURY, ALWAYS TURN OFF AND UNPLUG THE LAMP AND ALLOW IT TO COOL PRIOR TO REPLACING THE LIGHT BULB. DO NOT TOUCH BULB WHEN THE LAMP IS TURNED ON. DO NOT LOOK DIRECTLY AT LIT BULB. KEEP FLAMMABLE MATERIALS AWAY FROM LIT BULB.

ASSEMBLY INSTRUCTIONS

Remove all parts and hardware from box along with any plastic protective packaging. Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.


PARTS INVENTORY		
ID	DESCRIPTION	QTY
A	FINIAL	1
B	SHADE	1
C	HARP	1
D	BULB (NOT INCLUDED)	1
E	SADDLE	1
F	FIXTURE ASSEMBLY	1
G	CORD	1

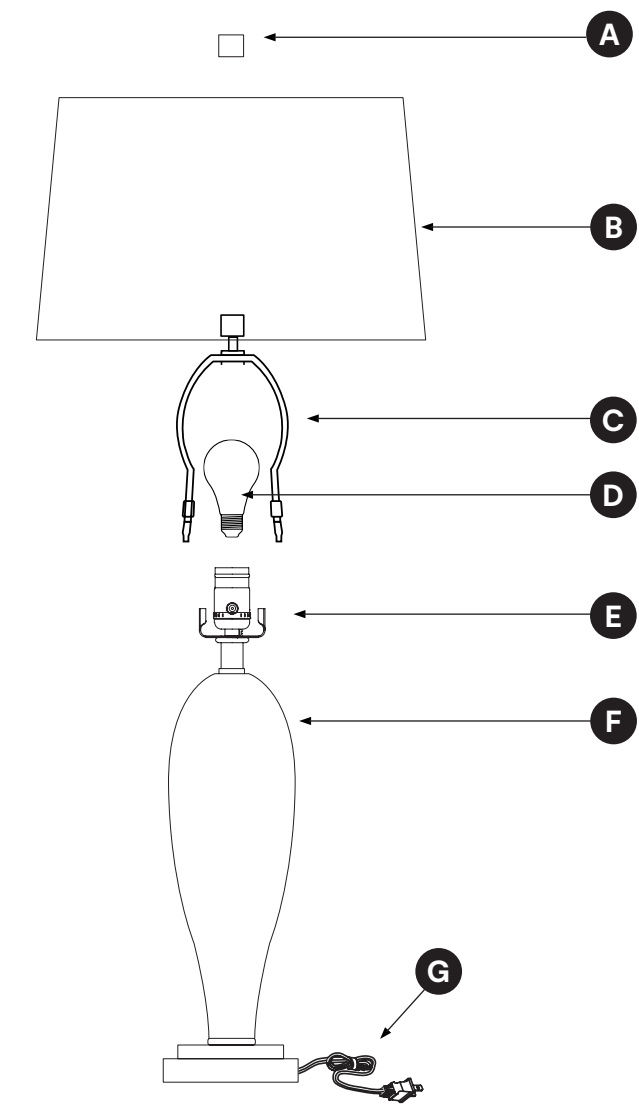

JOON LOLOI


STEP 1

Insert the **HARP (C)** by squeezing the sides and placing on the **SADDLE (E)** of the **FIXTURE ASSEMBLY (F)**.

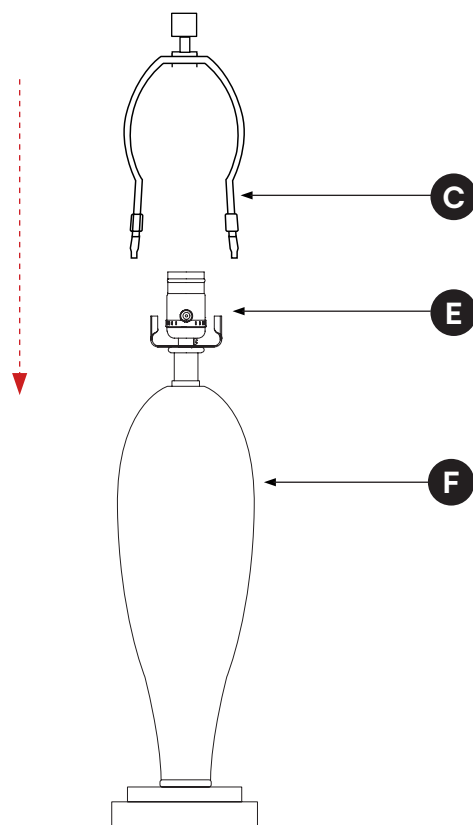

STEP 2


Install the **BULB (D)** into the socket. **THIS FIXTURE IS RATED FOR MAX 150 WATT LED TYPE E26 BULB. DO NOT EXCEED THE RECOMMENDED WATTAGE!**

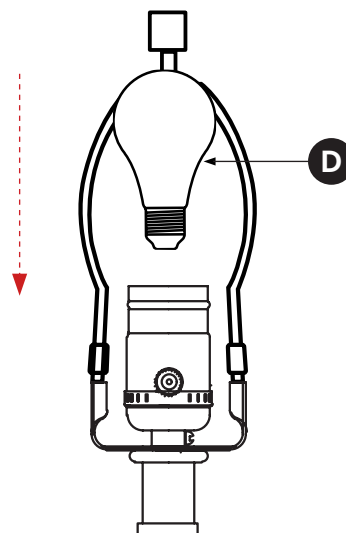

JOON LOLOI


STEP 3

Carefully remove the protective covering from the **SHADE (B)**, then place it over the **HARP (C)** and secure it with the **FINIAL (A)**.

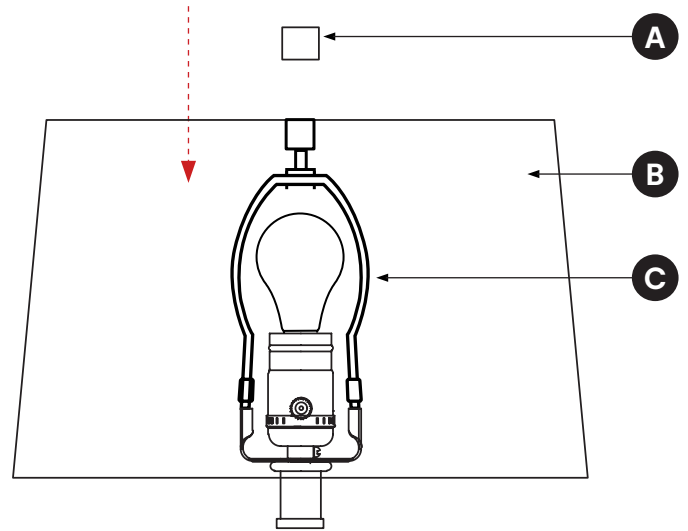

STEP 4

Plug the **CORD (G)** into the wall outlet. Use the switch on the socket to turn the fixture on and off.

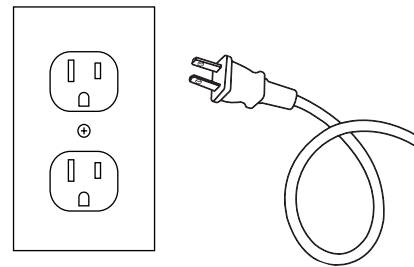

CARE INSTRUCTIONS

Wipe clean with a soft, dry cloth or static duster.

Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the lamp's finish.