

Atwood Accent Table

ASSEMBLY INSTRUCTIONS


JOON LOLOI

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting. When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

PARTS INVENTORY		
ID	DESCRIPTION	QTY
1	TOP	1
2	LEG	3
3	SHELF	1


HARDWARE INVENTORY				
ID	IMAGE	DESCRIPTION	SIZE	QTY
A		ALLEN BOLT	M6 x 16mm	12
B		FLAT WASHER	16 x 8mm	12
C		ALLEN WRENCH	4mm	1

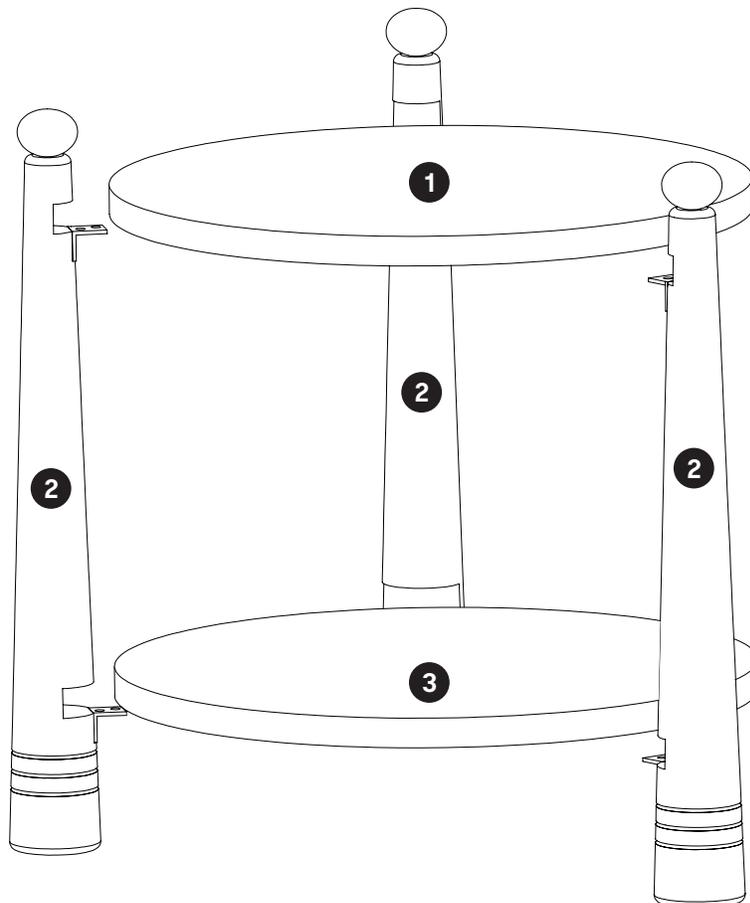

JOON LOLOI

STEP 1


Place one **LEG (2)** on its side, then position the **TOP (1)** and **SHELF (3)** into the grooves, ensuring all bolt holes are aligned with the metal clips.

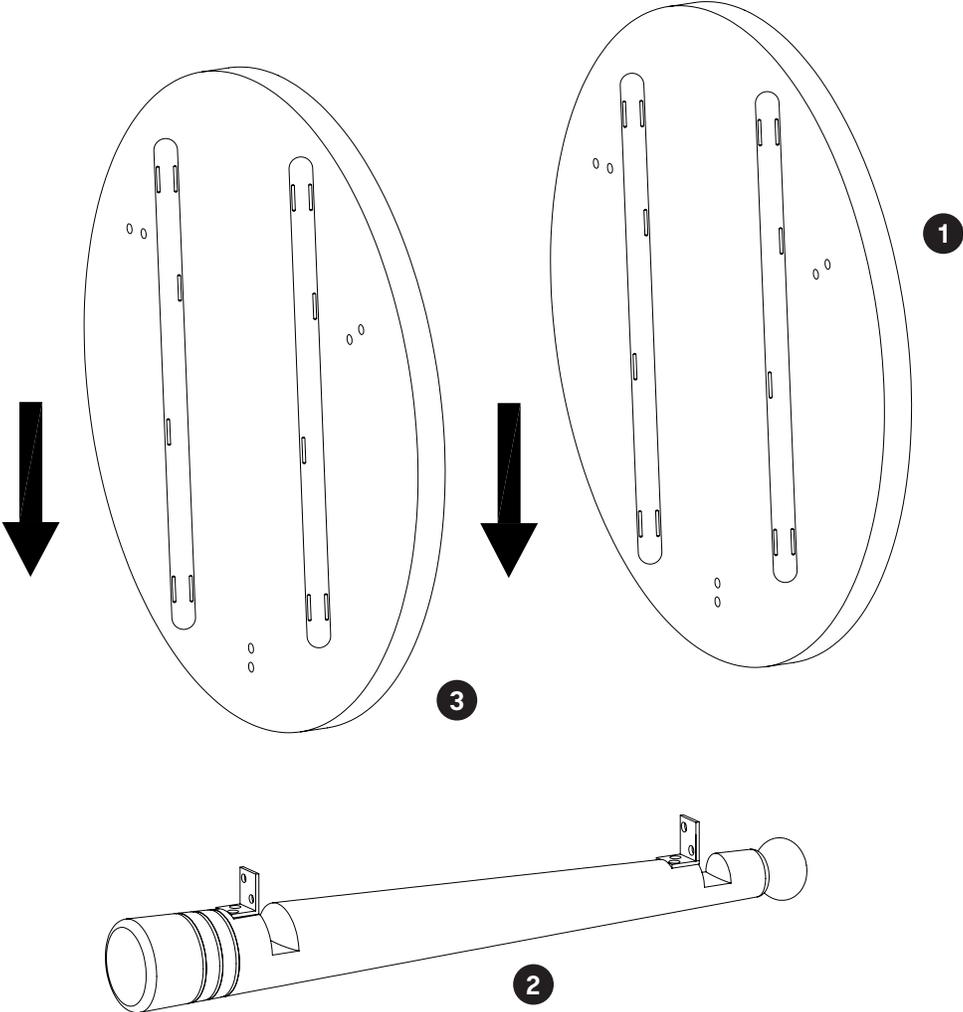

JOON LOLOI

STEP 2


Slide a **FLAT WASHER (B)** onto an **ALLEN BOLT (A)**. Align the bolt holes with the metal clip and secure each **ALLEN BOLT (A)** using the **ALLEN WRENCH (C)**. Repeat this process for all remaining metal clips.

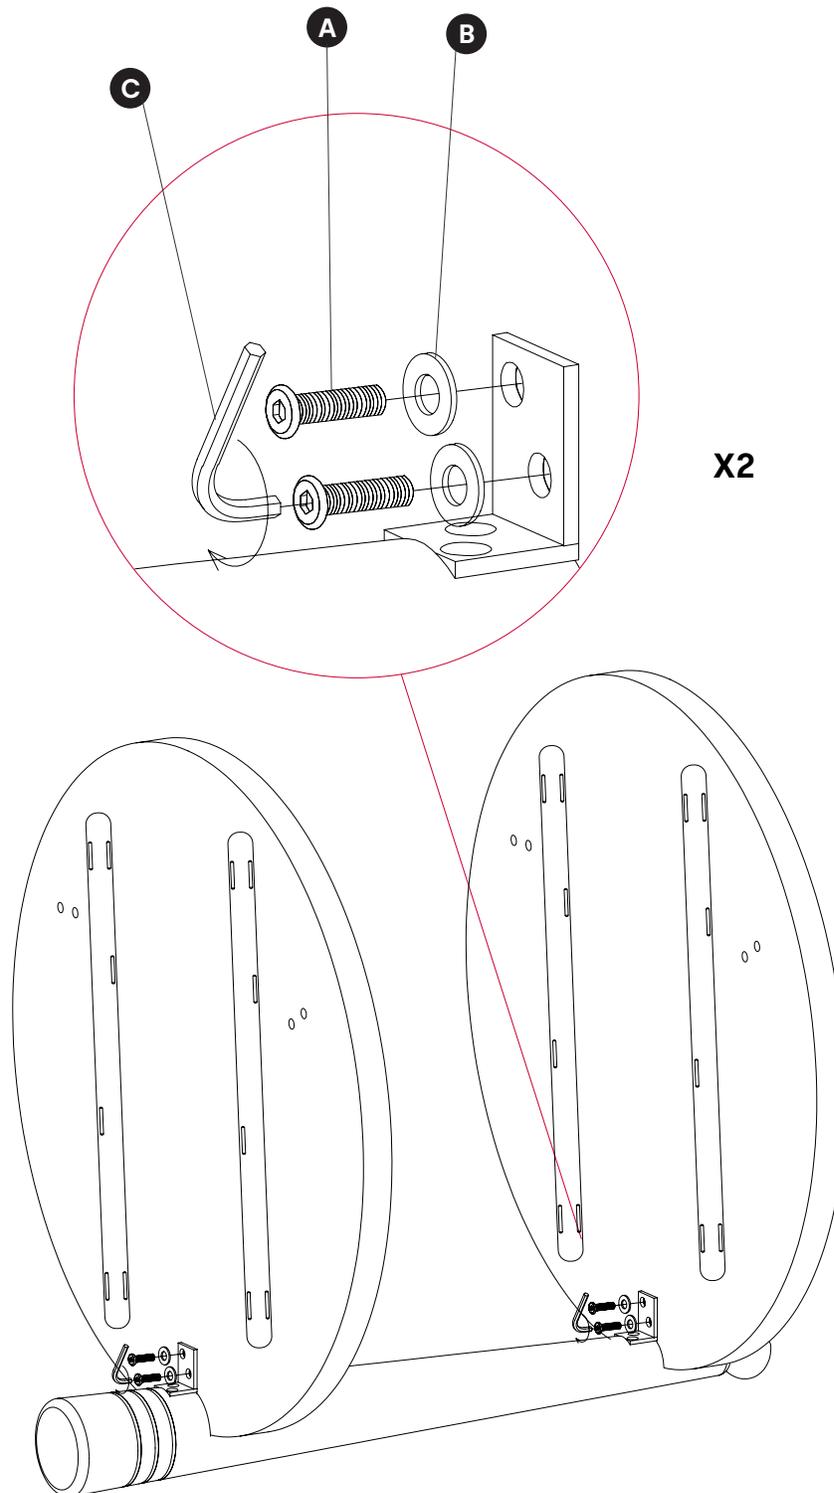

JOON LOLOI

STEP 3


Position the **TOP (1)** and **SHELF (3)** into the grooves of the remaining **TWO LEGS (2)**, ensuring all bolt holes are aligned with the metal clips.

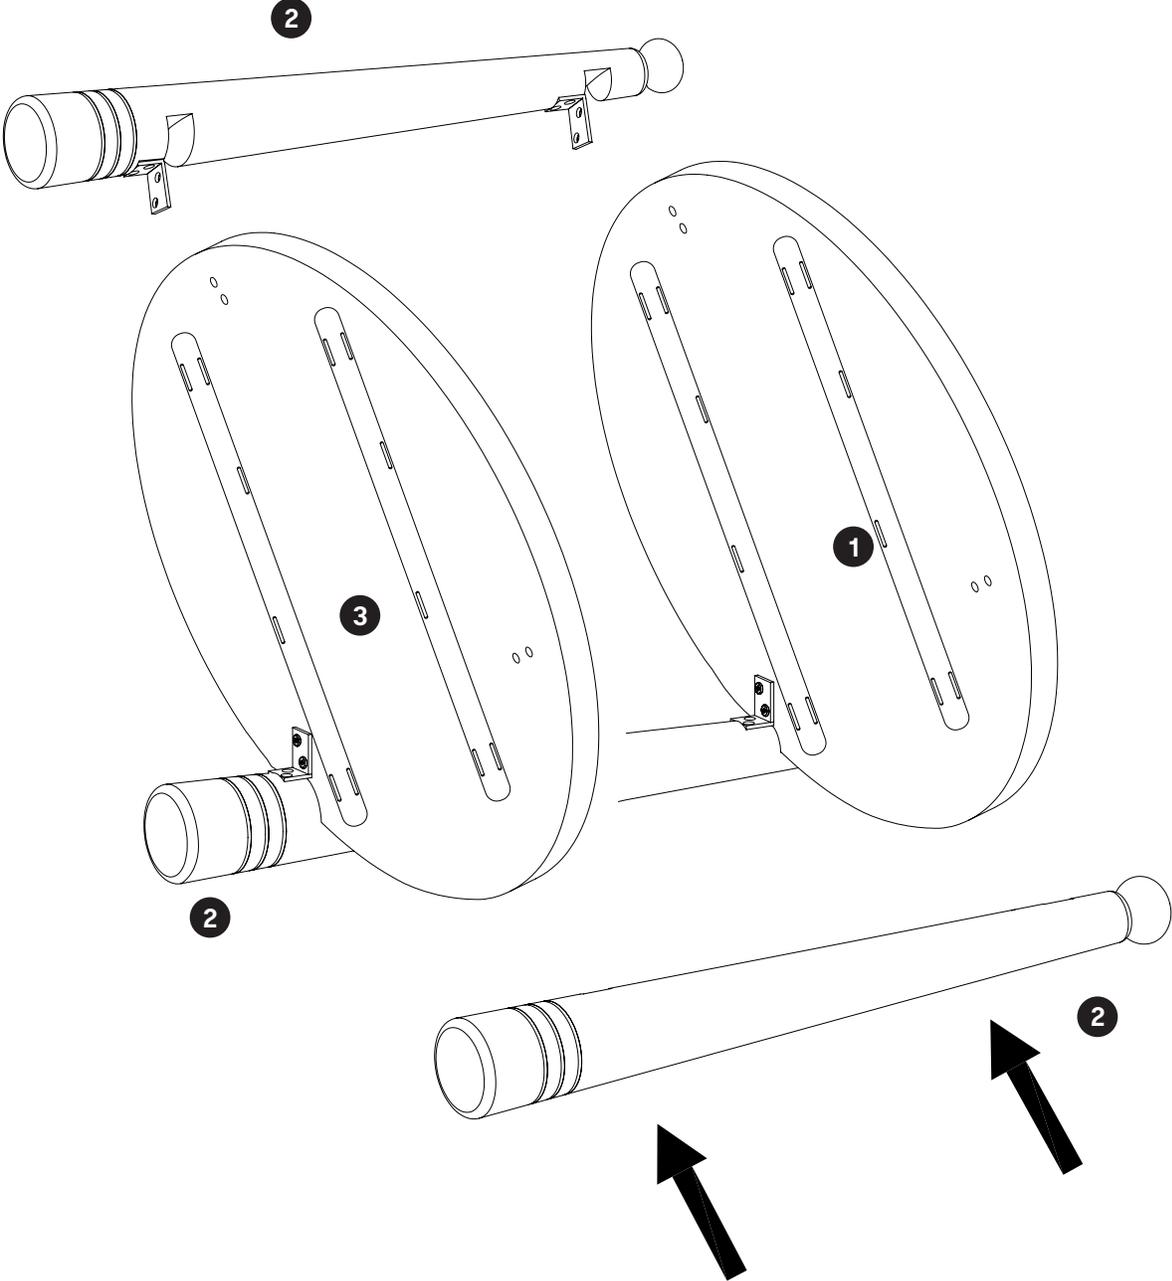

JOON LOLOI

STEP 4

Slide a **FLAT WASHER (B)** onto an **ALLEN BOLT (A)**. Align the bolt holes with the metal clip and secure each **ALLEN BOLT (A)** using the **ALLEN WRENCH (C)**. Repeat this process for all remaining metal clips.

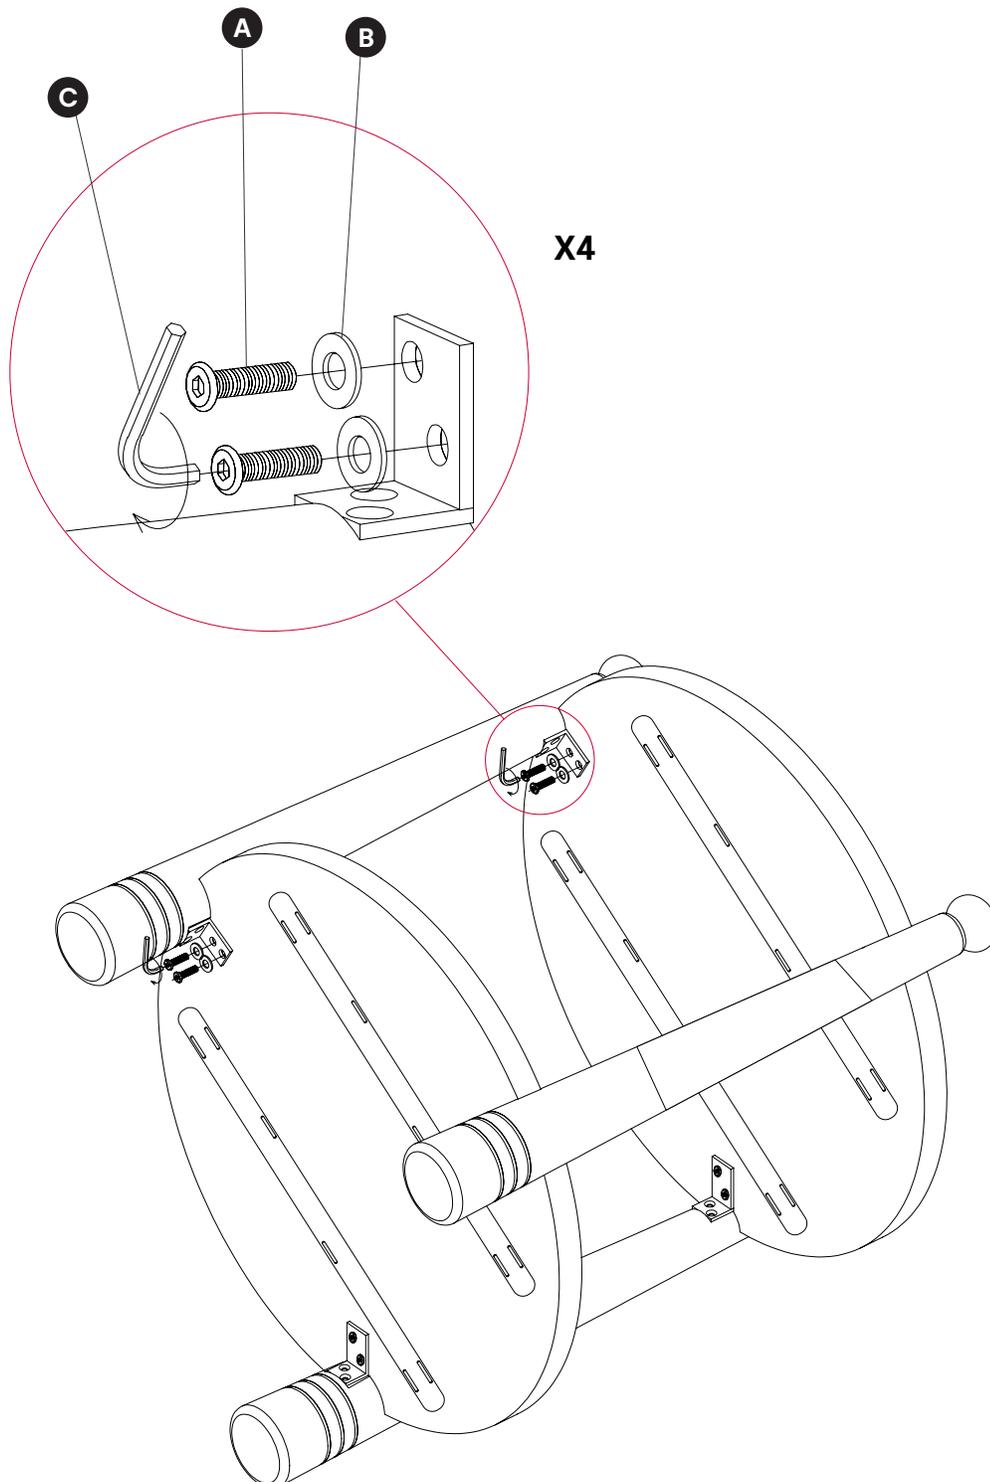

JOON LOLOI

STEP 5

Turn the accent table right side up after tightening all the bolts. Once all components are secured, adjust the levelers. The assembly is now complete.

