









Harrow Coffee Table


ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting. When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

PARTS INVENTORY		
ID	DESCRIPTION	QTY
1	TOP	1
2	LEG A	2
3	LEG B	2
4	STRETCHER	1


HARDWARE INVENTORY				
ID	IMAGE	DESCRIPTION	SIZE	QTY
A		FLAT WASHER	Ø25mm x Ø10mm	8
B		FLAT WASHER	Ø21mm x Ø8mm	2
C		LOCK WASHER	Ø15mm x Ø9mm	12
D		ALLEN BOLT	M8 x 50mm	8
E		ALLEN BOLT	M6 x 30mm	2
F		ALLEN BOLT	M6 x 25mm	2
G		ALLEN KEY	M4 x 110mm	1
G		ALLEN KEY	M5 x 110mm	1

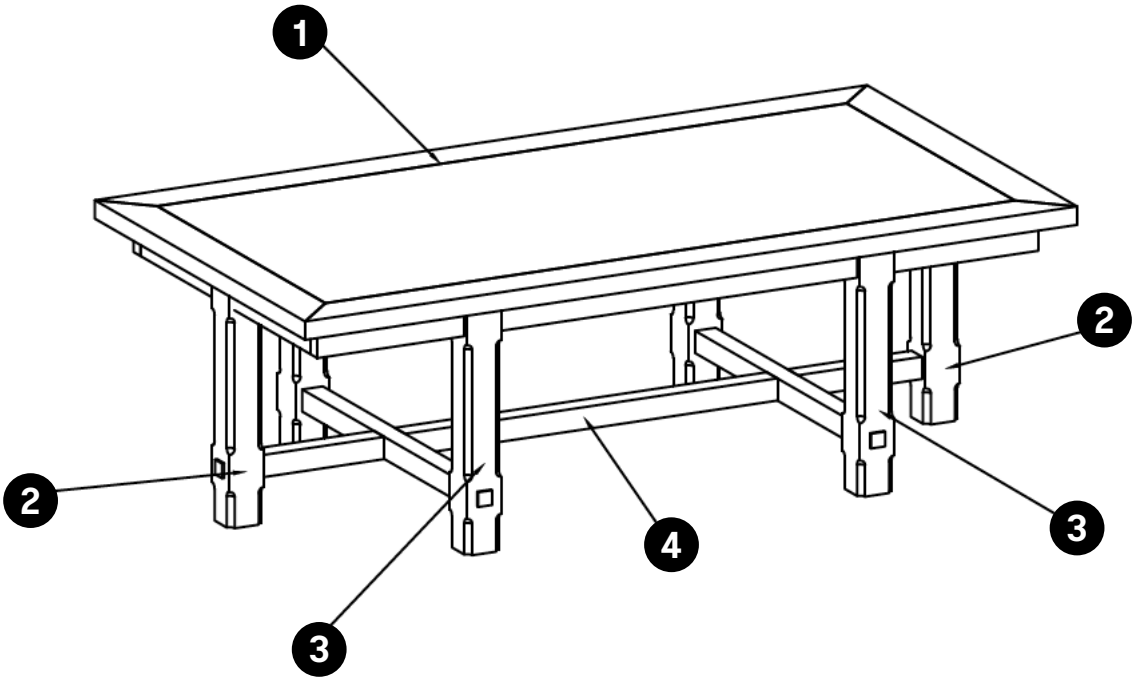

JOON LOLOI


STEP 1

Lay **TOP (1)** upside down on a clean surface.

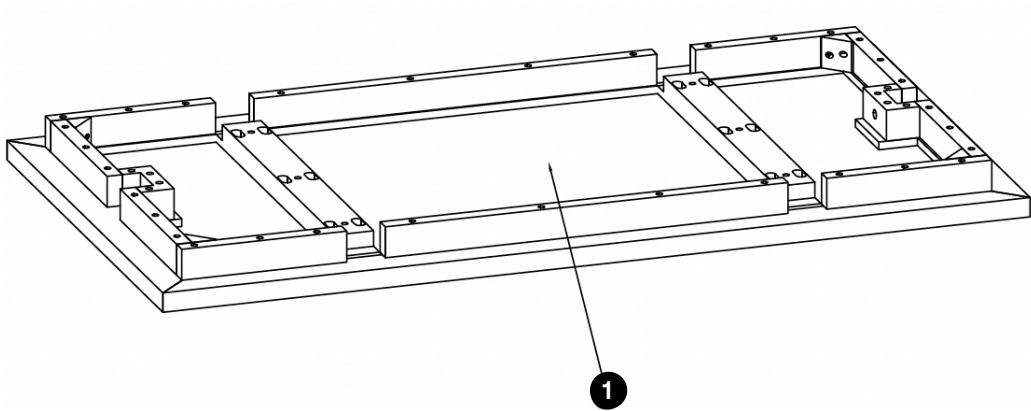


STEP 2

Locate the small labels on the bottom of the **TOP (1)**. Align **LEG A (2)** and **LEG B (3)** with the bolt holes.

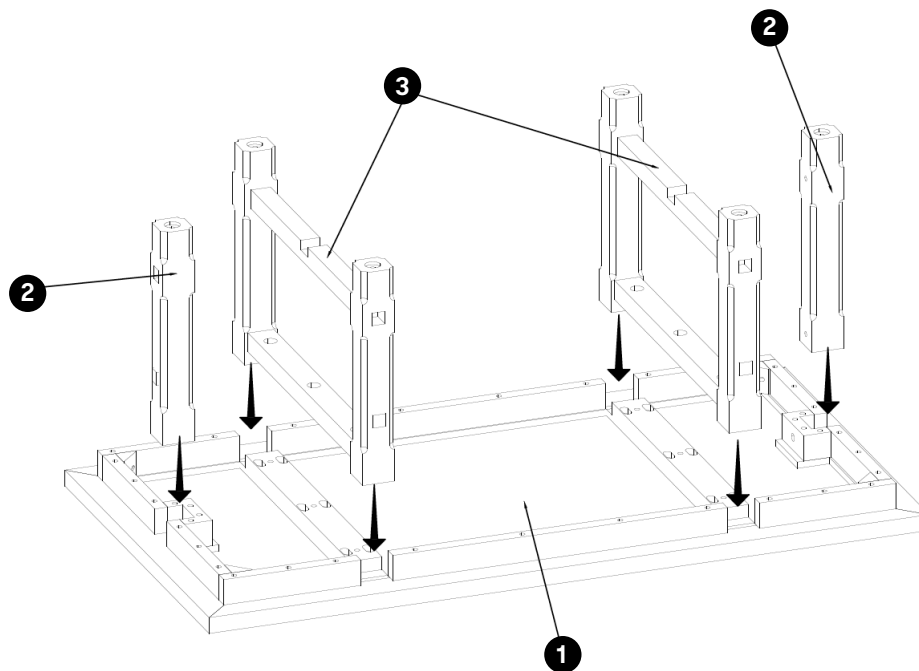


STEP 3

Insert **ALLEN BOLT (D)** with **LOCK WASHER (C)** and **FLAT WASHER (A)** in the bolt hole, then tighten with **ALLEN KEY (H)**. Repeat this for all bolt holes.

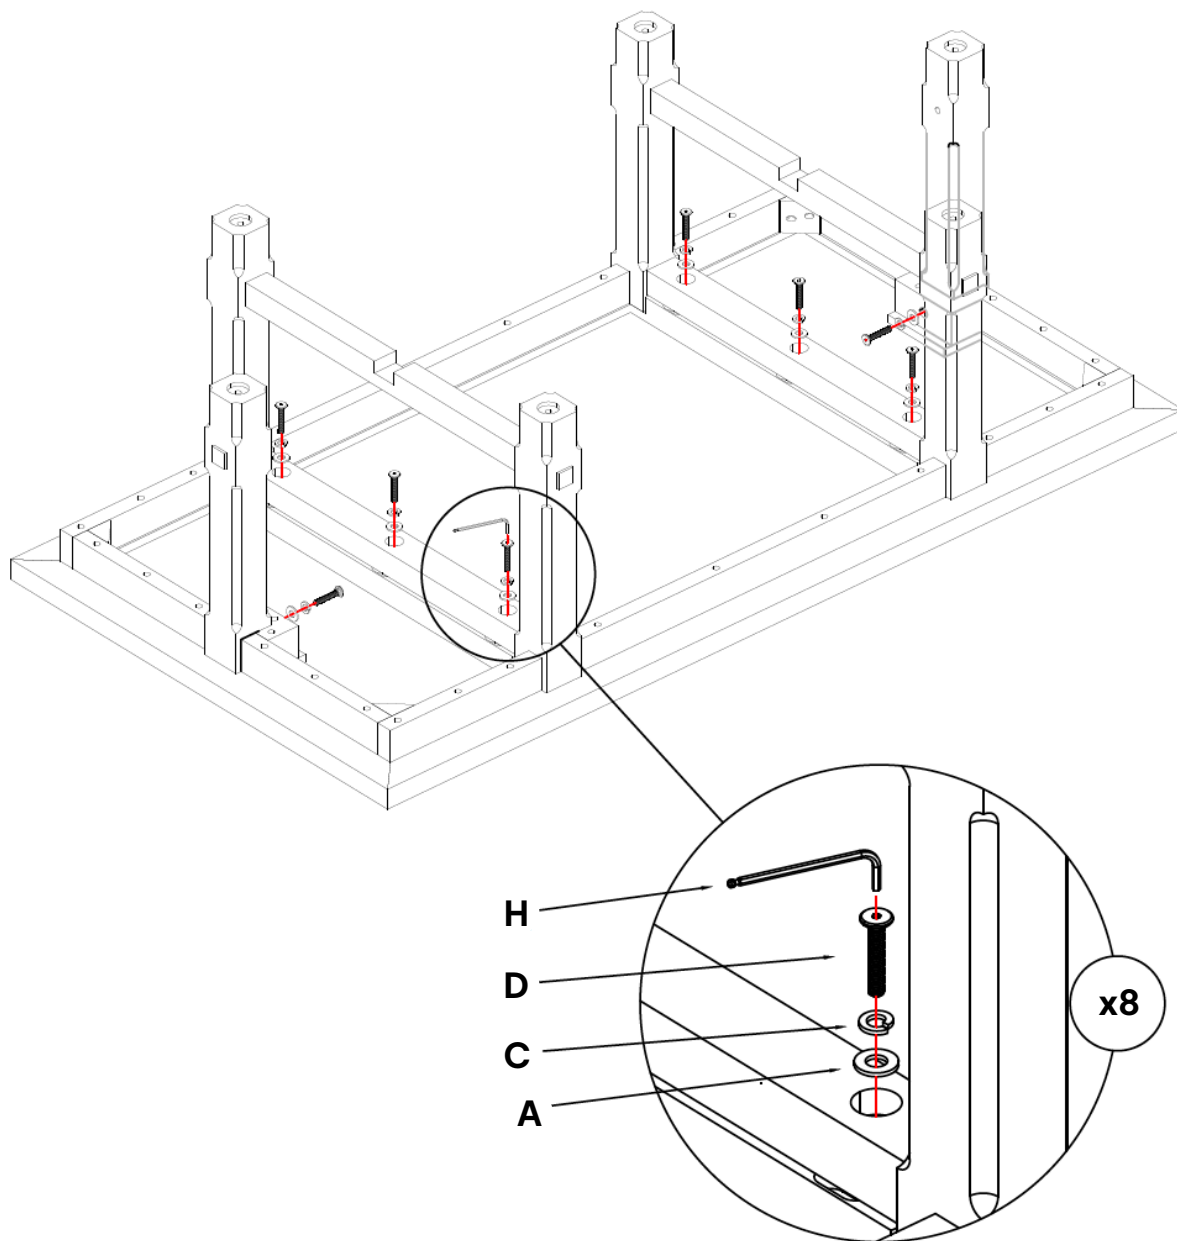


STEP 4

Attached the **STRETCHER (4)** with **LEG B (3)** with the bolt holes.

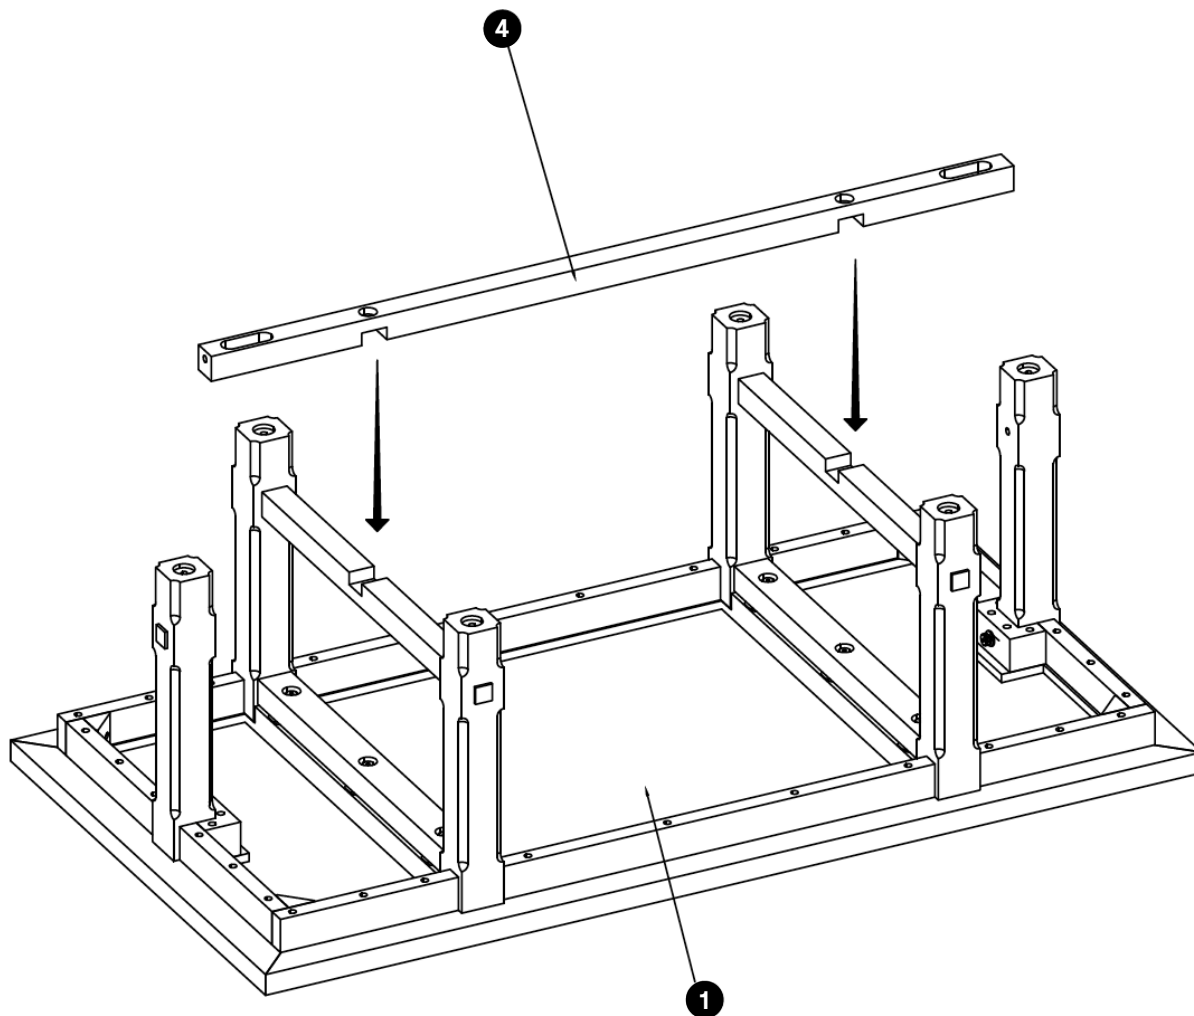

STEP 5

Insert **ALLEN BOLT (F)** with **LOCK WASHER (C)** and **FLAT WASHER (B)** in the bolt hole, then tighten with **ALLEN KEY (G)**. Then Insert **ALLEN BOLT (E)** with **LOCK WASHER (C)** in bolt hole, then tighten with **ALLEN KEY (G)**. Repeat this for all bolt holes.

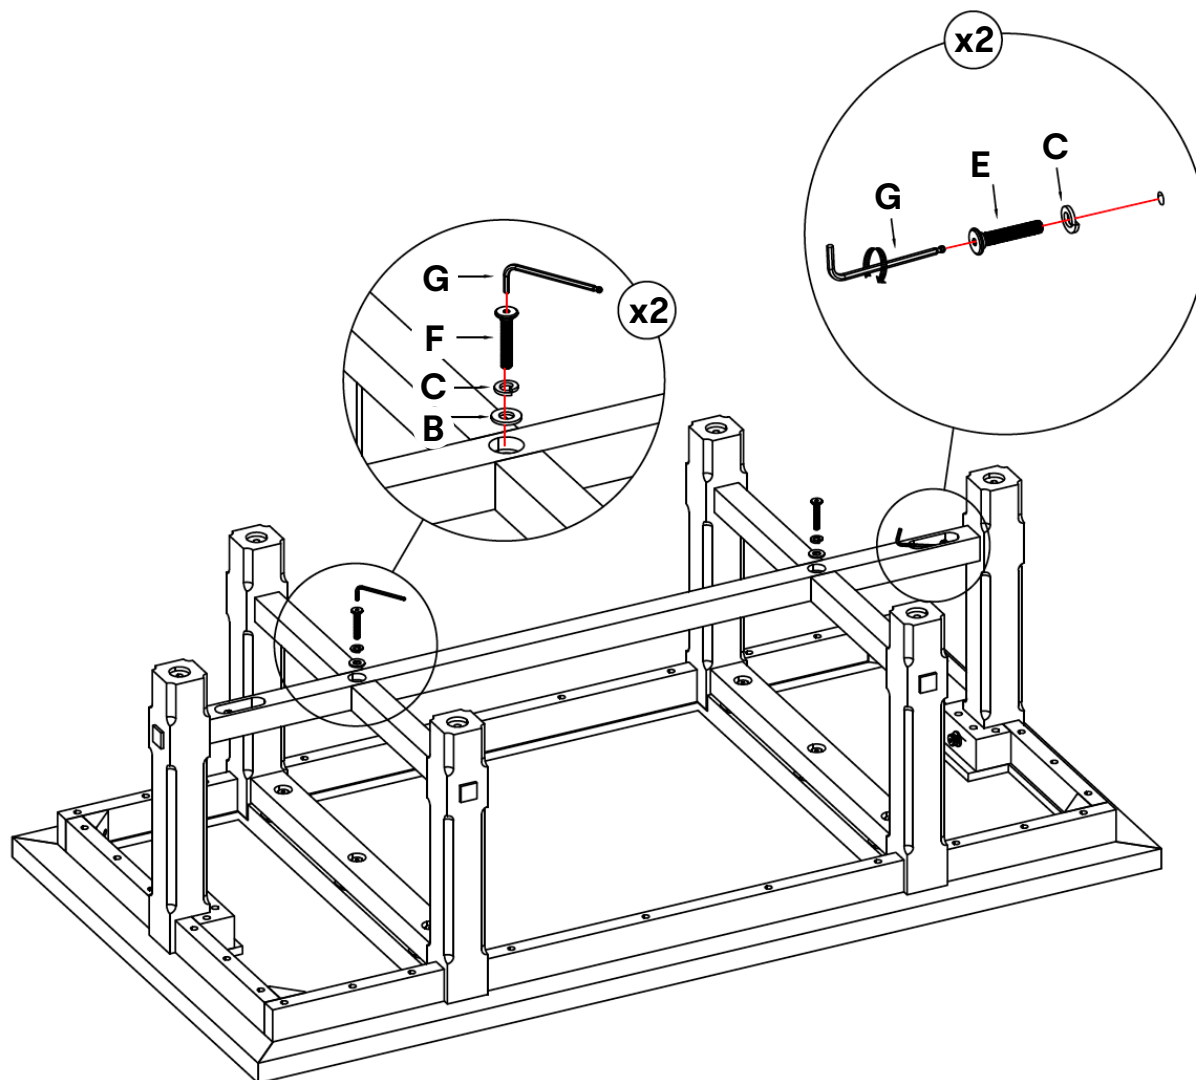

JOON LOLOI

STEP 6

Turn the Harrow Coffee Table right side up after tightening all the bolts. Once all components are secured, adjust the levelers, and the assembly is complete.

