

# Odin Bed Frame

---

ASSEMBLY INSTRUCTIONS


# JOON LOLOI

## ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting. When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

PARTS INVENTORY		
ID	DESCRIPTION	QTY
1	HEADBOARD	1
2	FOOTBOARD	1
3	SIDE RAILS	2
4	CENTER SUPPORT RAIL	1
5	SUPPORT FEET	3
6	ROLL SLATS	2


HARDWARE INVENTORY				
ID	IMAGE	DESCRIPTION	SIZE	QTY
A		TEMPORARY ALIGNEMENT BOTLS	M8 x 90mm	8
B		ALLEN BOLT	M6 x 40mm	3
C		ALLEN BOLT	M6 x 30mm	16
D		LOCK WASHER	12 x 8.5mm	24
E		FLAT WASHER	19 x 8.5mm	16
F		NUT	13 x 8mm	8
G		HALFMOON WASHER	28 x 15 x 7mm	8
H		WRENCH	13 x 110mm	1
I		ALLEN KEY	4 x 110mm	1
J		LOCK WASHER	M8 x 35mm	3
K		FLAT WASHER	10 x 6.5mm	3
M		LEVELING GLIDE	M8 x 36mm	4
N		LEVELING GLIDE	M6 x 20mm	3

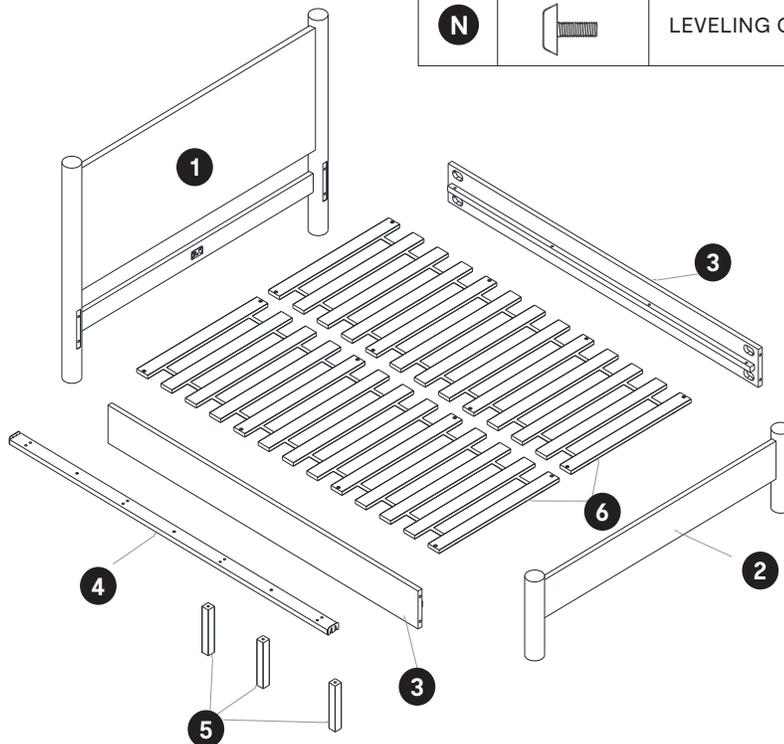

# JOON LOLOI

## STEP 1


Screw the **TEMPORARY ALIGNMENT BOLT (A)** into the **HEADBOARD POST (1)** and **FOOTBOARD (2)**. Repeat this step for all remaining bolts.

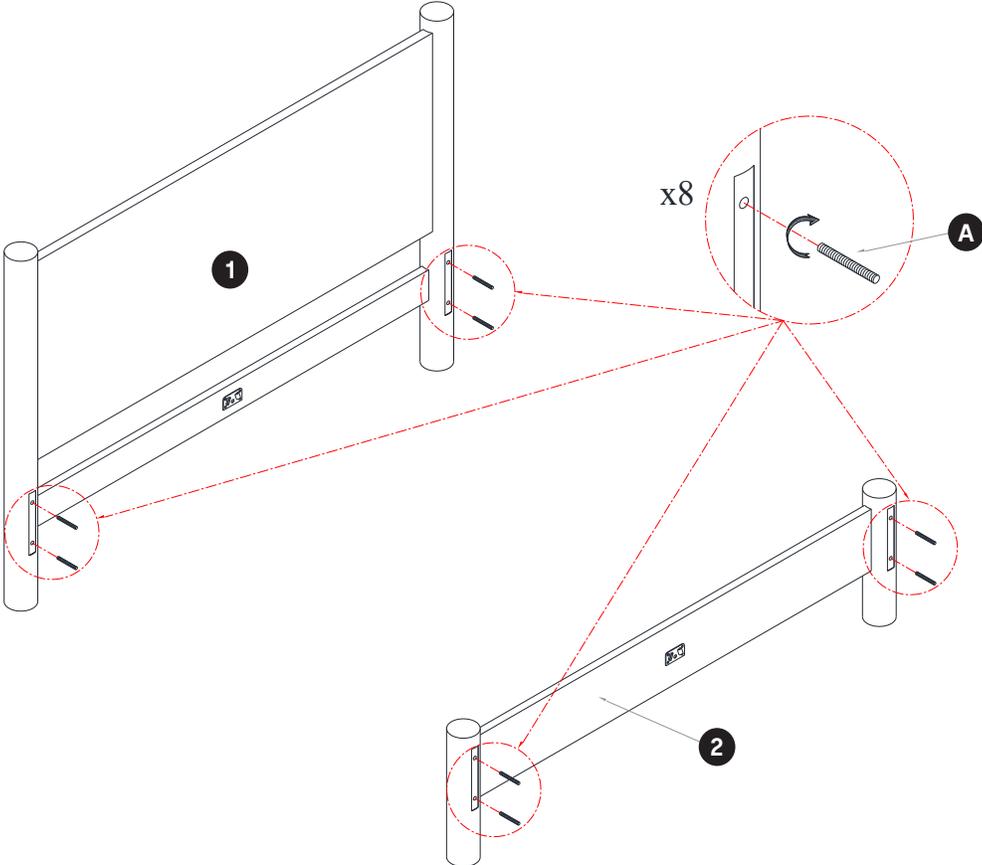

# JOON LOLOI

## STEP 2

Attach the **SIDE RAILS (3)** to the **HEADBOARD (1)**, ensuring the bolt holes are properly aligned. Confirm that the bolt holes on the **HEADBOARD (1)** match those on the **SIDE RAILS (3)**. Slide on the **HALFMOON WASHER (G)**, followed by the **LOCK WASHER (D)**, and then the **NUT (F)**. Use the **WRENCH (H)** to tighten the **NUT (F)** securely. Repeat this process for all remaining bolt holes.

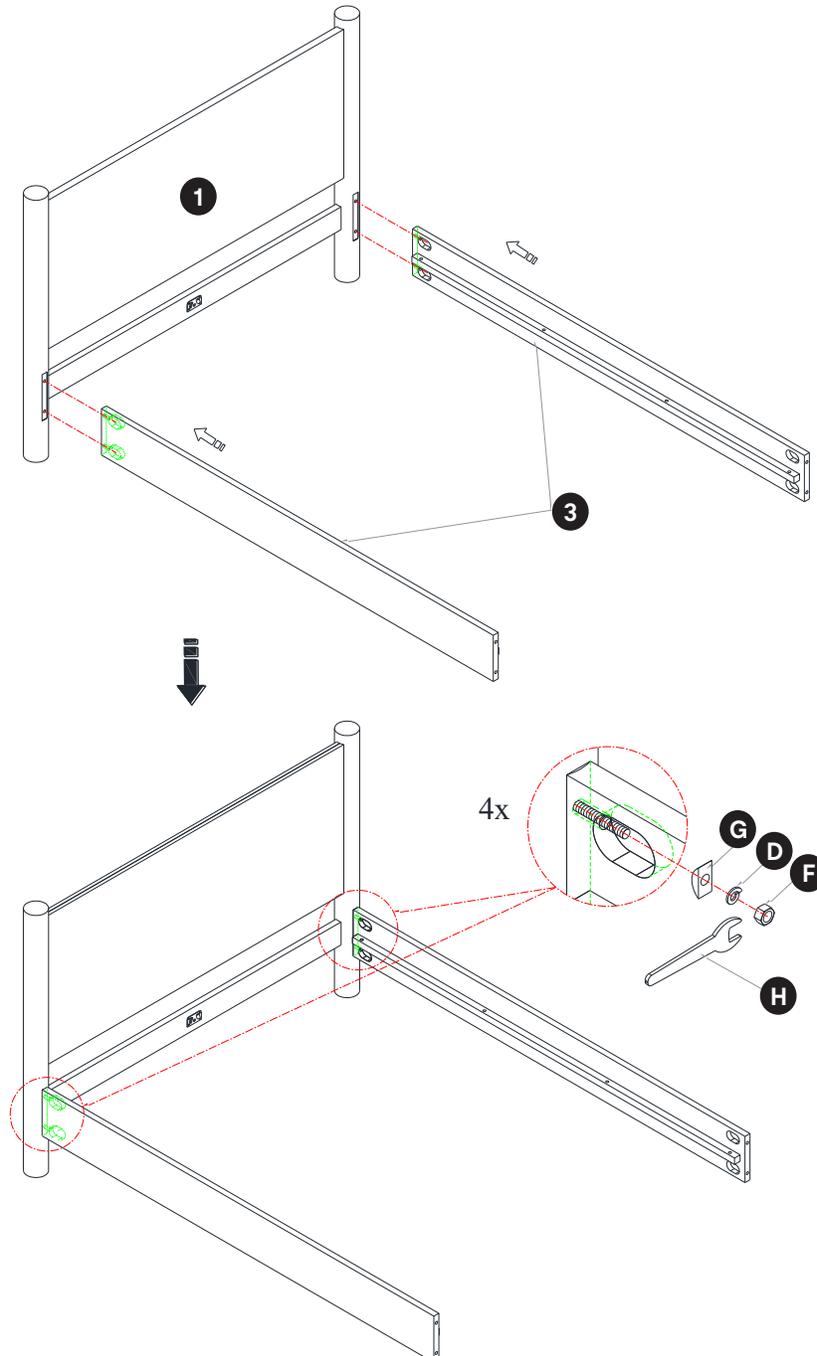


# JOON LOLOI

---

## STEP 3

Attach the **FOOTBOARD (2)** to the **SIDE RAILS (3)**, ensuring the bolt holes are properly aligned. Confirm that the bolt holes on the **FOOTBOARD (2)** match those on the **SIDE RAILS (3)**. Slide on the **HALFMOON WASHER (G)**, followed by the **LOCK WASHER (D)**, and then the **NUT (F)**. Use the **WRENCH (H)** to tighten the **NUT (F)** securely. Repeat this process for all remaining bolt holes.

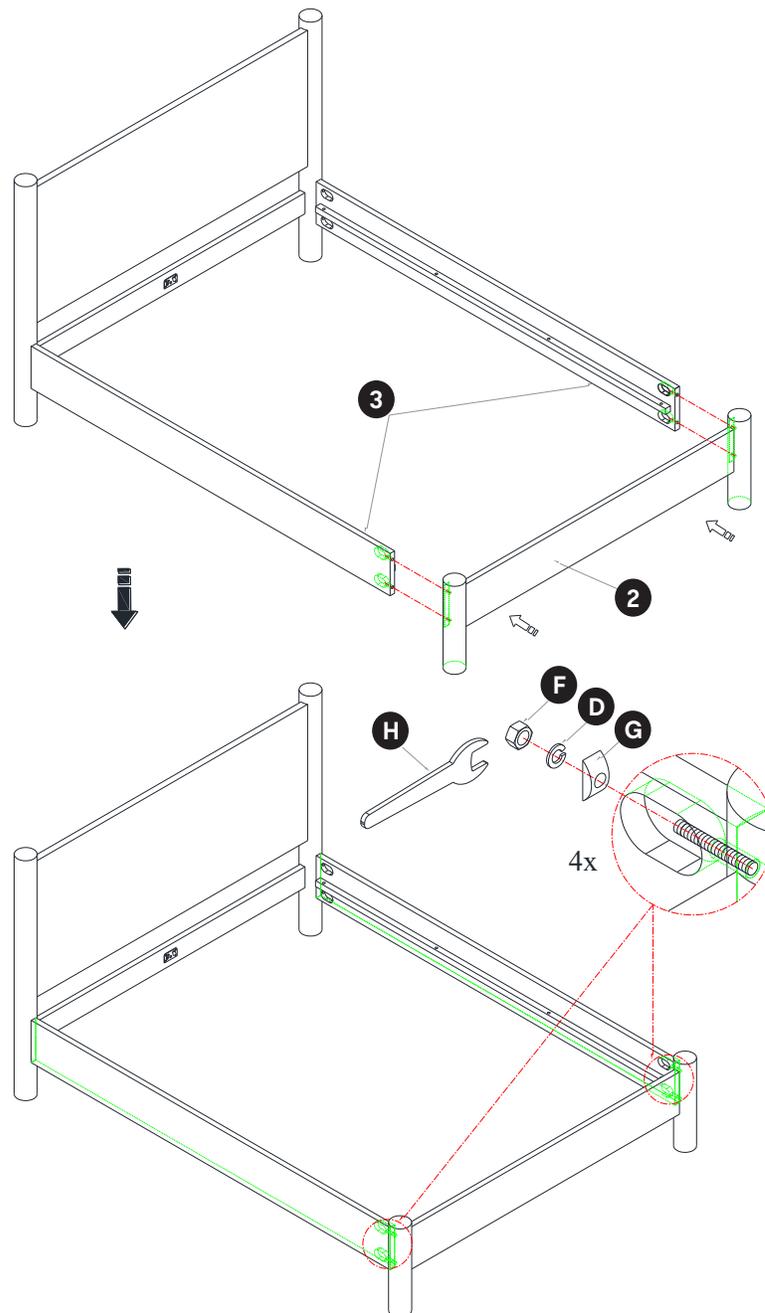


# JOON LOLOI

---


## STEP 4

Place the **SUPPORT FEET (5)** onto the **CENTER SUPPORT RAIL (4)**, ensuring the bolt holes are properly aligned. Slide the **LOCK WASHER (J)**, followed by the **FLAT WASHER (K)**, onto the **BOLT (B)**. Use the **ALLEN KEY (I)** to tighten the **BOLT (B)**. Repeat this process for all remaining bolts.

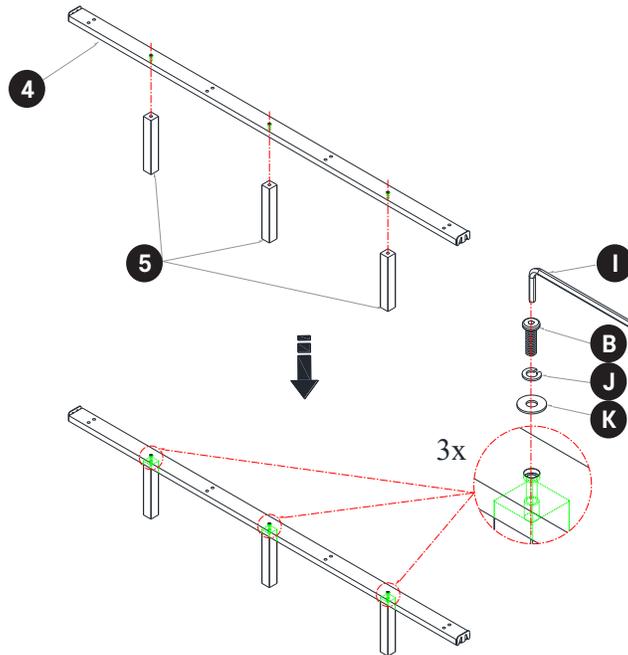

## STEP 5


Place the **CENTER SUPPORT RAIL (4)** onto the **HEADBOARD POST (1)** and the **FOOTBOARD (2)**.

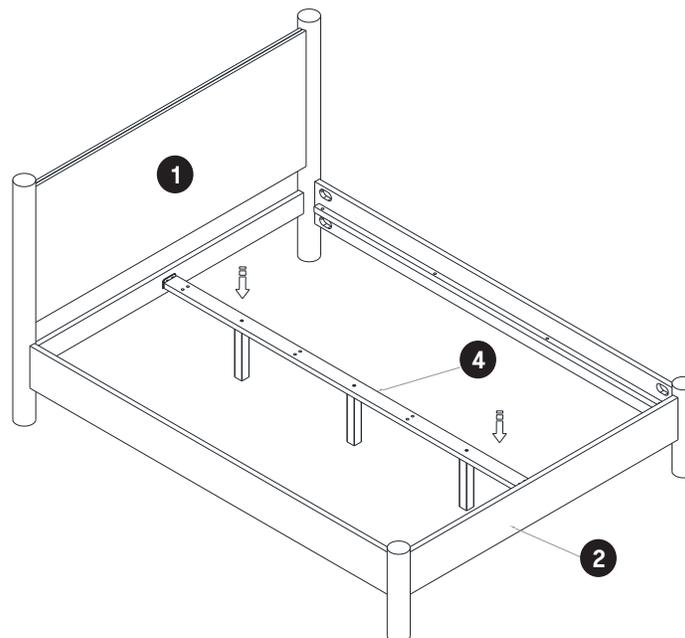

# JOON LOLOI

## STEP 6

Place the **ROLL SLATS (6)** onto the **CENTER SUPPORT RAIL (4)** and **SIDE RAILS (3)**, making sure the bolt holes are aligned. Slide the **LOCK WASHER (D)**, followed by the **FLAT WASHER (E)**, onto the **BOLT (C)**, and use the **ALLEN KEY (I)** to tighten the **BOLT (C)**. Repeat this process for all remaining bolts.

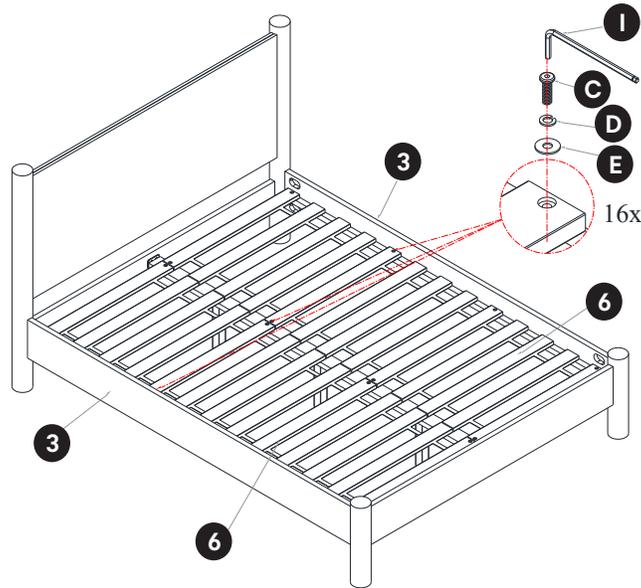

## STEP 7

The **LEVELING GLIDES (M)** are located at the bottom of the legs of the **HEADBOARD (1)**, **FOOTBOARD (2)**, and the **LEVELING GLIDE (N)** is located at the **SUPPORT FEET (5)**. Once the bed frame is positioned correctly, you can adjust the **LEVELING GLIDES (M & N)** to suit the surface beneath. Make sure the bed is level and stable. Once it is, the assembly is complete.

