

Ona Sideboard


ASSEMBLY INSTRUCTIONS


JOON LOLOI

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting. When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

| PARTS INVENTORY | | |
|-----------------|------------------|-----|
| ID | DESCRIPTION | QTY |
| 1 | SIDE BOARD | 1 |
| 2 | ADJUSTABLE SHELF | 2 |

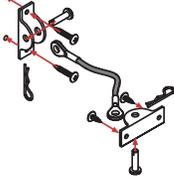
| PARTS INVENTORY | | | |
|-----------------|--|------------------|-----|
| ID | IMAGE | DESCRIPTION | QTY |
| A |  | VACCUM SHELF PIN | 8 |
| B |  | ANTI TIP KIT | 2 |

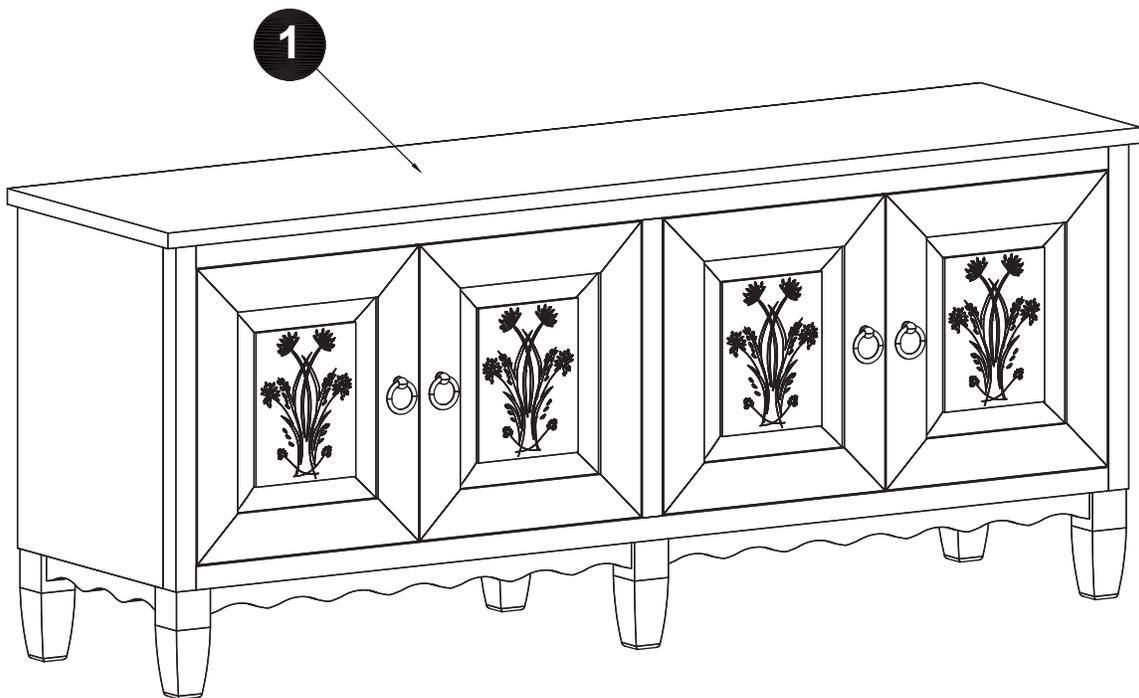

JOON LOLOI

STEP 1


Open the **SIDEBOARD DOOR (1)**, remove the empty carton, and then carefully lift the shelf upward to locate the hole.

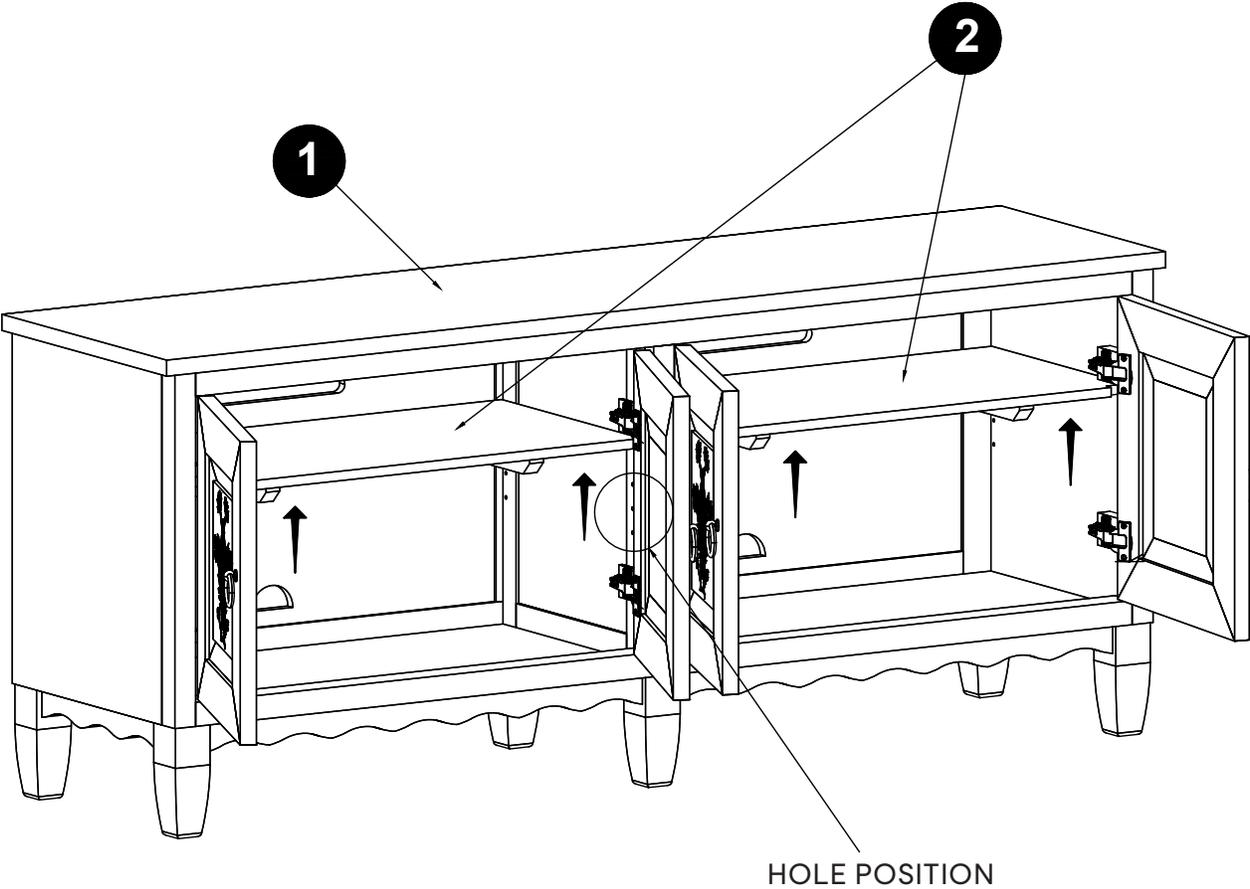

JOON LOLOI

STEP 2


Insert the **SHELF PIN (A)** into the desired hole, then lower **SHELF (2)** onto the pin so it rests securely.

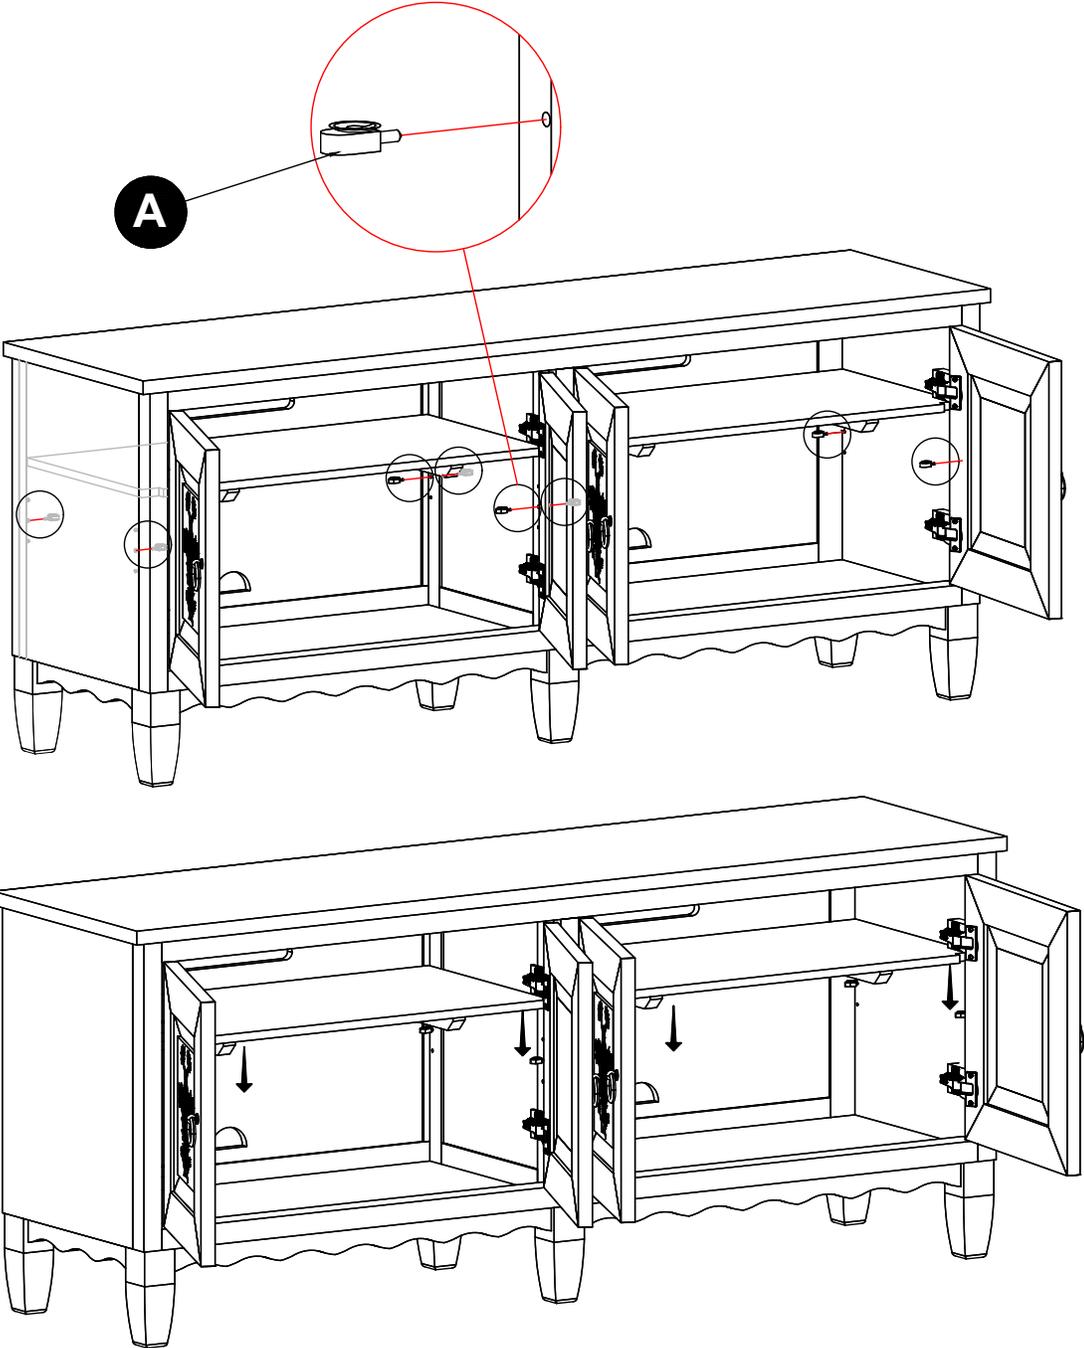

JOON LOLOI

STEP 3


The levelers are located at the bottom of the legs. Once the furniture is in the desired position, you can adjust the levelers based on the surface. Make sure the furniture is level and stable.

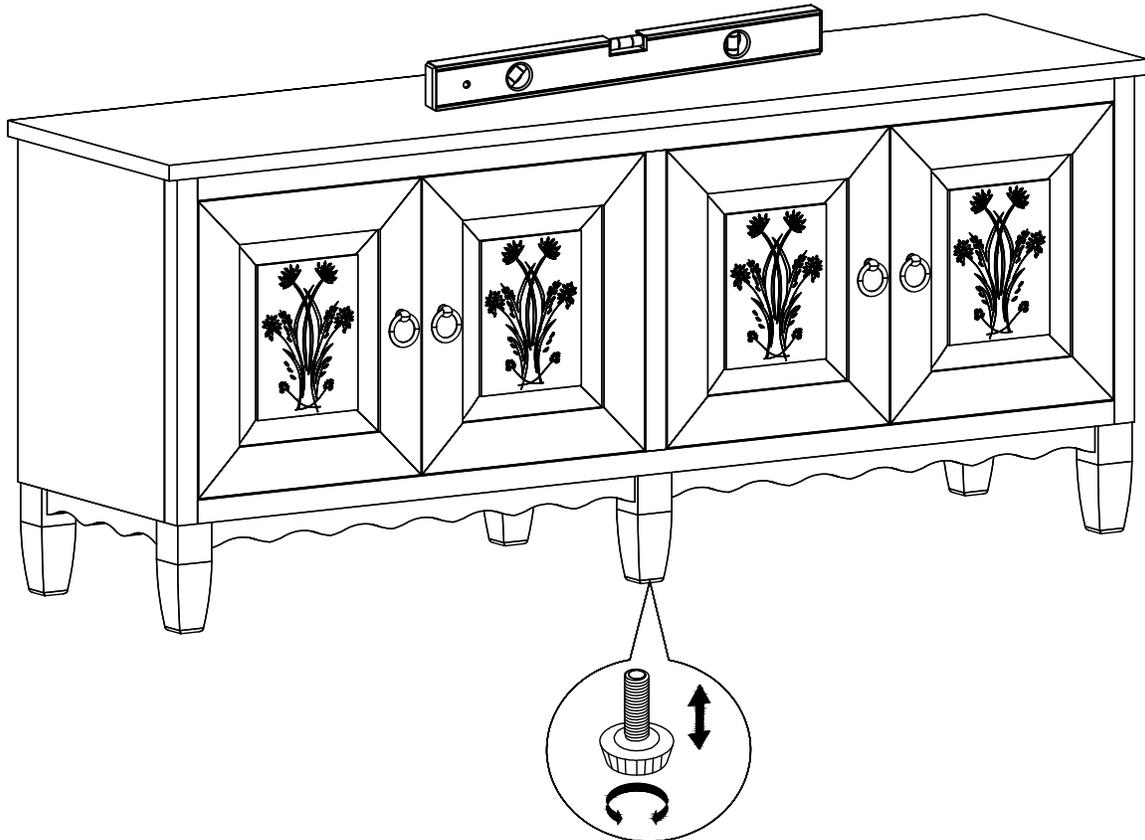


JOON LOLOI

STEP 4


Now adjust the soft-close hinges to align with the door gap, following Step 1, Step 2, and Step 3.

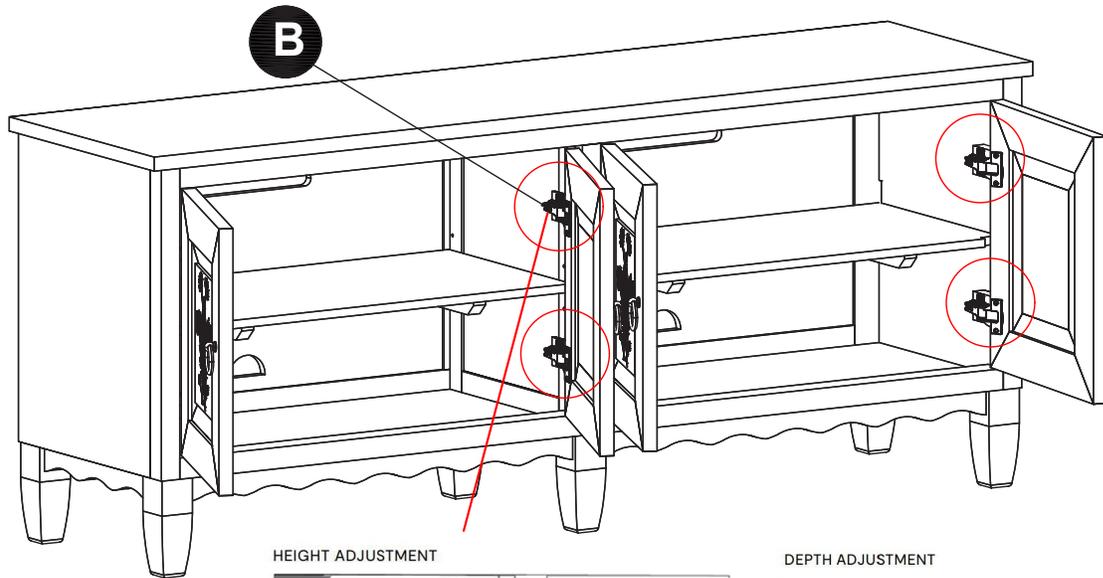


HEIGHT ADJUSTMENT

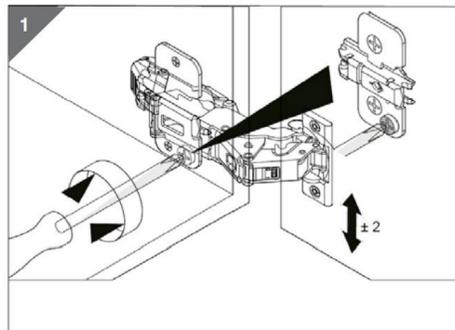

DEPTH ADJUSTMENT

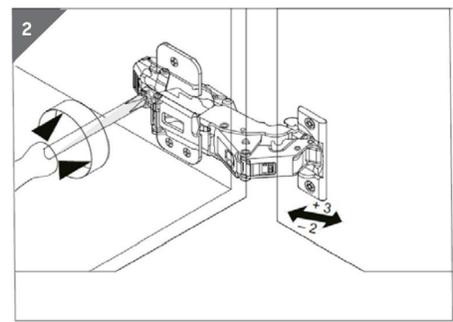

SIDE ADJUSTMENT

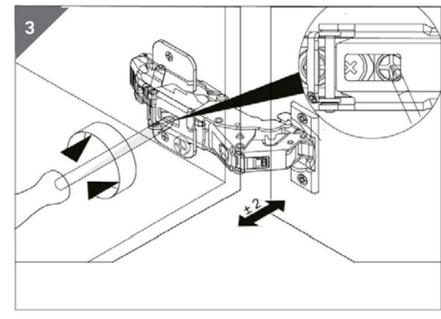

1. Side adjustment.

To move the door towards the side panel, loosen screw ① and To move the door away from the side panel, tighten screw ①.

2. Depth adjustment.

Loosen screw ② (just one turn), adjust door to desired position, re-tighten screw.

3. Height adjustment

Loosen screw ③, adjust door to desired position, re-tighten screw.

HANGMAN ANTI-TIP-KIT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT INSTRUCTIONS

Young children may be injured by tipping furniture. The use of a tipping restraint is highly recommended.

When properly installed, this restraint could provide protection against the unexpected tipping of furniture due to small tremors, bumps or climbing. We recommend mounting this restraint to a wall stud. **WARNING:** This product is only a deterrent. It is not a substitute for proper adult supervision.

ANTI-TIP-KIT INSTALLATION INSTRUCTION

⚠ WARNING: Always mount metal brackets to solid wood of furniture. Do not attach to plywood of back panels.

ATTACH THE ANTI-TIP KIT TO A WALL STUD IF POSSIBLE OR HAVE A PROFESSIONAL ATTACH THE KIT TO MASONRY OR A CONCRETE WALL.

1. Attach mounting brackets (A) near the middle-top back edge of the furniture piece by inserting the shorter screws (E).
2. Determine the final position of the furniture piece. Mark locations on the wall approximately 2" below the brackets mounted to the back of the furniture.
3. Attach the second brackets to stud wall by inserting the longer screw (F) (see **FIGURE 1 & FIGURE 2**) or toggle bolt (G) through the drywall (see **FIGURE 3**).
4. Place the furniture so that the brackets on the back edge are in line with the brackets in the wall.
5. Insert the clevis pin (B) through holes on brackets and hole on steel aircraft cable (C). Use hair pin (D) to go through small hole on clevis pin (B) to lock it.
6. Repeat above step to attach the end of aircraft cable (C) to the bracket on the wall.
7. Check to make sure the steel aircraft cable is securely laced and locked to the brackets.

TYPE SECURING FURNITURE AND ASSEMBLY INSTRUCTIONS BY WALL TYPE:

1. Attach to top back frame of cabinet, ideal installation for dressers and chests. See detail in **FIGURE 1**.

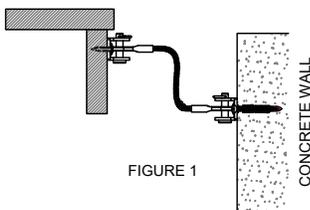


FIGURE 1

- **CONCRETE:** Drill pilot hole on and then insert plastic screwdriver to attach the metal bracket to the wall with screws. See **FIGURE 1**.

2. Attach to underside of top when there is no back rail, drill through plywood back panel. Ideal installation for file cabinets and console table. See detail in **FIGURE 2**.

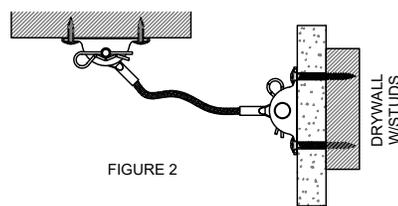


FIGURE 2

- **DRYWALL WITH STUDS:** Use screws to affix to studs, and use hollow wall anchors and screws to affix to drywall. See **FIGURE 2**.

3. Attach to top of tall furniture such as curio cabinets. See detail in **FIGURE 3**.

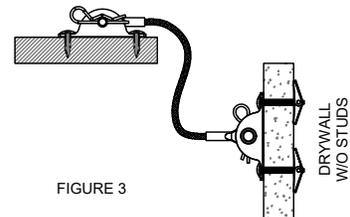


FIGURE 3

- **DRYWALL WITHOUT STUDS:** Use toggle bolt and screws to affix to drywall. See **FIGURE 3**.

| HARDWARE INVENTORY | | | |
|--------------------|---|----------------|---|
| A |  | METAL BRACKET | 4 |
| B |  | CLEVIS PIN | 4 |
| C |  | AIRCRAFT CABLE | 2 |
| D |  | HAIR PIN | 4 |
| E |  | SHORT SCREW | 4 |
| F |  | LONG SCREW | 4 |
| G |  | LONG SCREW | 4 |

