

Rosamund Slipcover Bed Frame

ASSEMBLY INSTRUCTIONS


JOON LOLOI

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting. When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

PARTS INVENTORY		
ID	DESCRIPTION	QTY
1	HEADBOARD	1
2	FOOTBOARD	1
3	SIDE RAILS	2
4	CENTER RAIL	1
5	BED SLATS	16


HARDWARE INVENTORY				
ID	IMAGE	DESCRIPTION	SIZE	QTY
A		HEX BOLTS	1" - 7/16"	12
B		WOOD SCREWS	1 1/2"	8
C		HEX WRENCH	7/16"	1
D		PHILLIPS HEAD SCREWDRIVER (NOT INCLUDED)		1

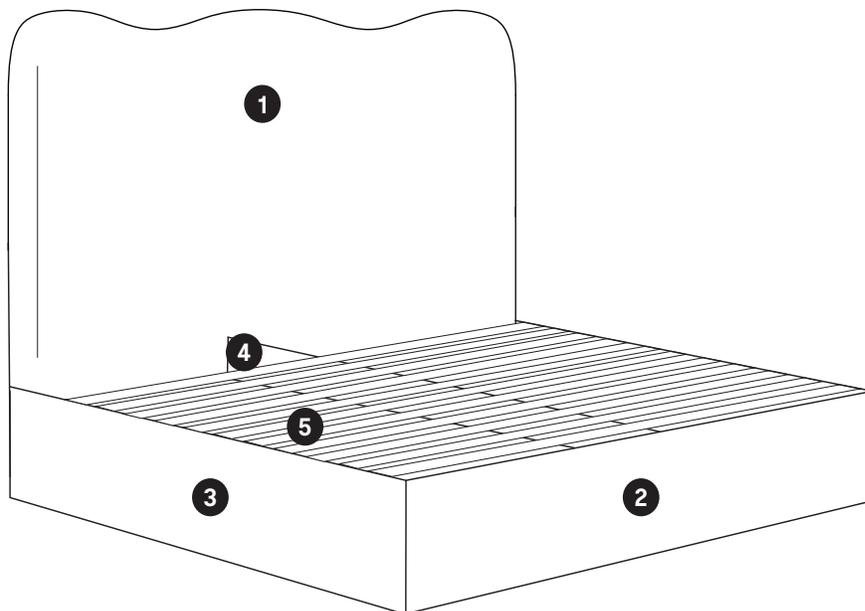

JOON LOLOI


STEP 1

Attach the first **SIDE RAIL (3)** to the **HEADBOARD (1)** by positioning it on the outside of the bracket. NOTE: Ensure **SIDE RAILS (3)** are right side up, with the upholstered side out.

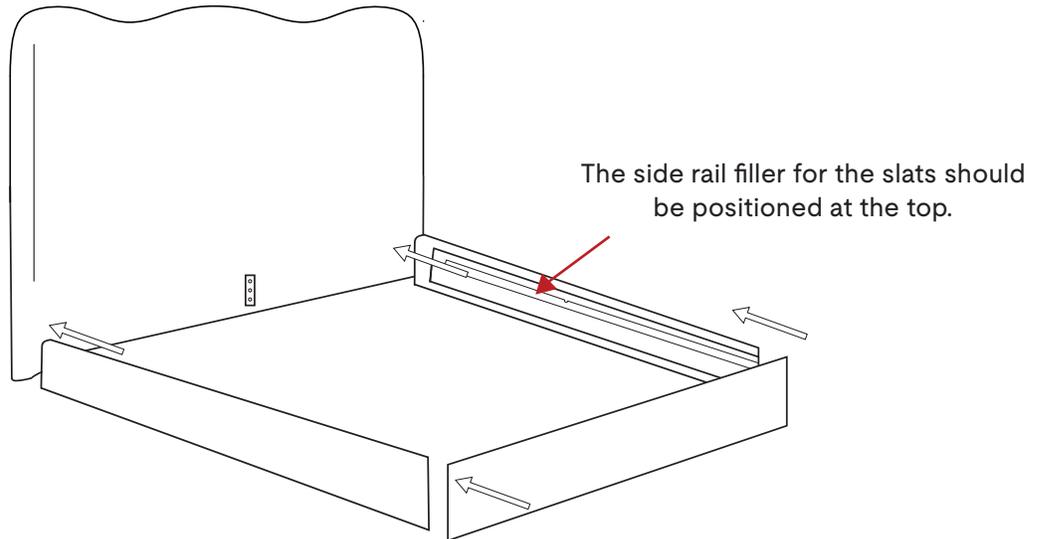

STEP 2

Line up top and bottom holes of the **SIDE RAIL (3)** to the top and bottom holes of the bracket. Screw in and tighten **HEX BOLTS (A)** into the top and bottom holes. NOTE: Loosely hand thread all bolts and screws first while putting each piece together. When each is aligned, securely tighten bolts and screws in place. If screws/bolts don't thread in, try loosening metal brackets to align.

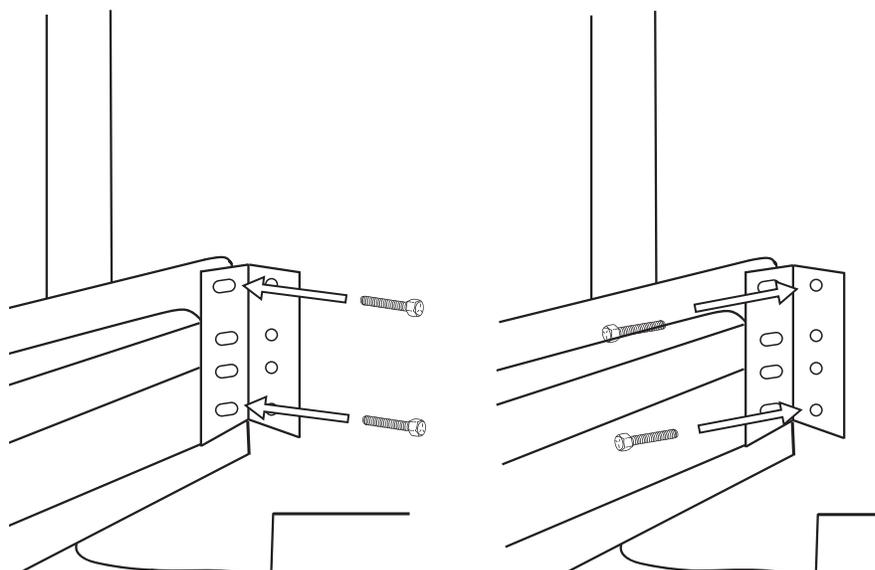


JOON LOLOI

STEP 3

Repeat Step 2 on the opposite side with remaining **SIDE RAIL (3)**.


STEP 4

Repeat Steps 2 through 3 on the **FOOTBOARD (2)**.

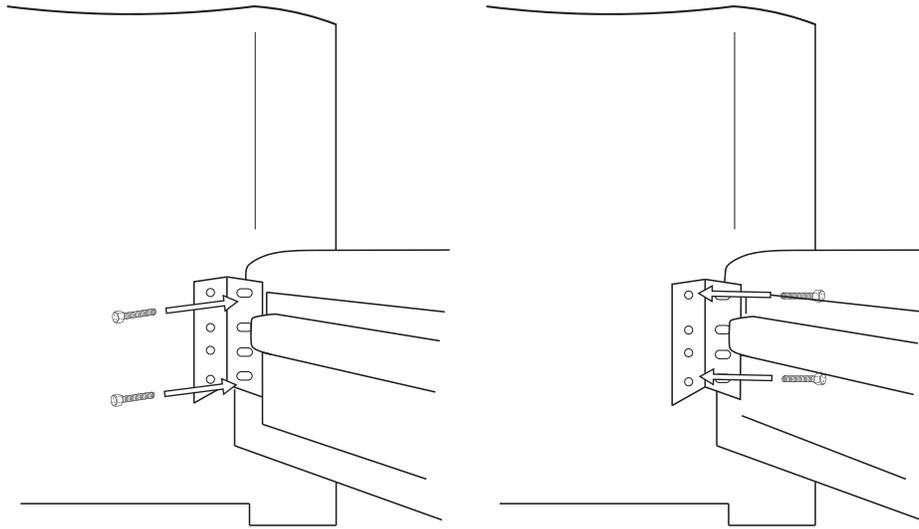

STEP 5


Line up top and bottom holes of the **CENTER RAIL (4)** with the top and bottom holes of the center bracket. Center rail mounts to the outside of the “L” shaped plate.

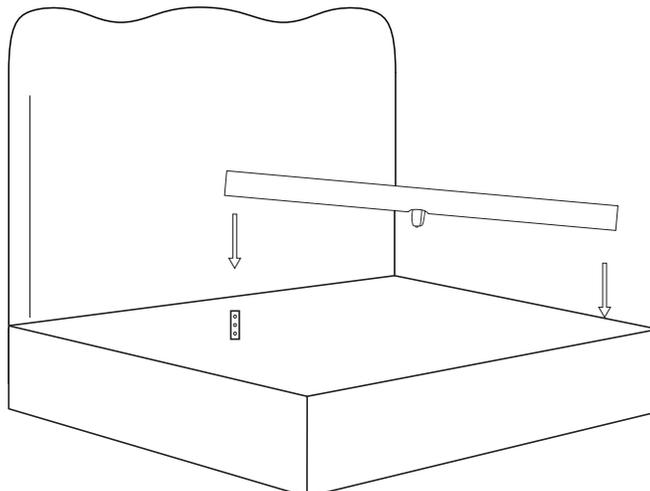

JOON LOLOI

STEP 6


Screw in and tighten **HEX BOLTS (A)** into the top and bottom oblong holes on the **CENTER RAIL (4)**.

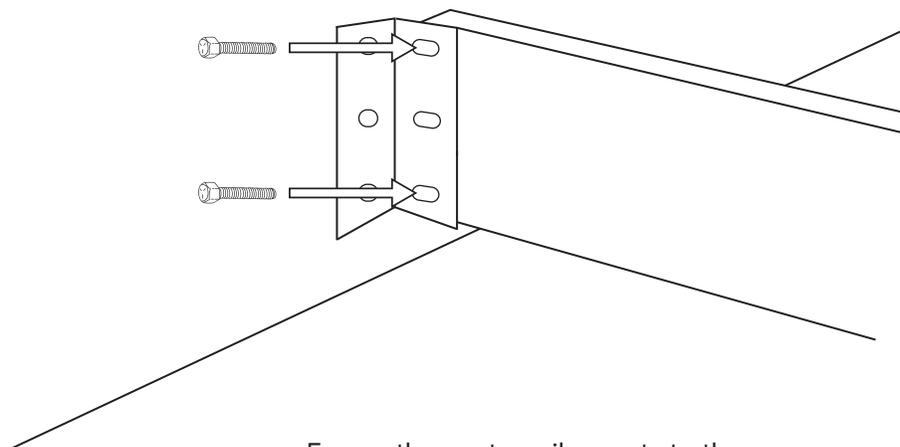

Ensure the center rail mounts to the outside of the "L" plate.

STEP 7


After mounting the **HEADBOARD (1)**, ensure the **CENTER RAIL (4)** foot is extended to the floor. Then repeat Step 6 on the **FOOTBOARD (2)**.

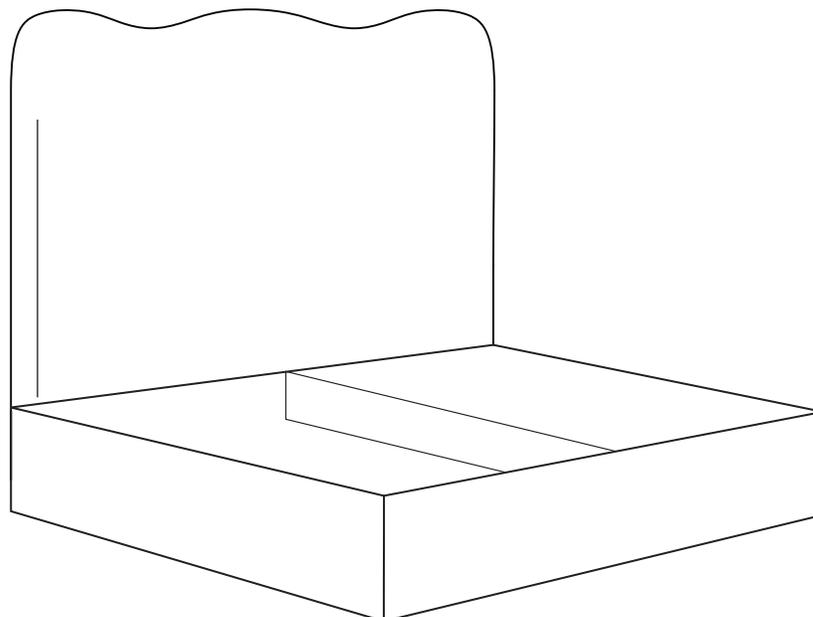

JOON LOLOI


STEP 8

Locate the locator blocks inside of each **SIDE RAIL (3)**. Note: There are four locator blocks – two near the headboard and two near the foot of the bed.

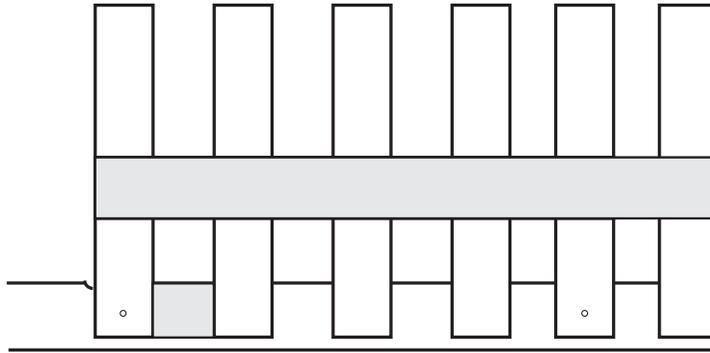

STEP 9

Start by placing the first slat in front of the locator block, located inside each **SIDE RAIL (3)** near the **HEADBOARD (1)**. Then insert a wood screw through the slat into each side rail to secure it in place.

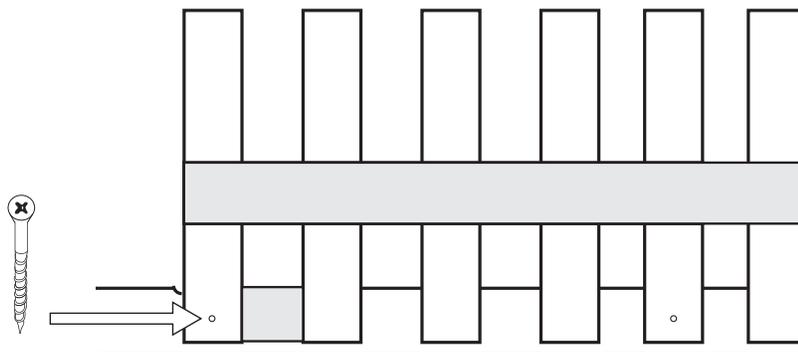

Do not over tighten screws.

JOON LOLOI

STEP 10

Stretch out the slats until fully extended.

STEP 11

Place the last slat on the outside of the locator block nearest the footboard. Then insert a wood screw through the slat into each **SIDE RAIL (3)** to secure it in place.

STEP 12

Align the slipcover's corner seam with the corner of the footboard, and secure it by adjusting the Velcro on the side rails.

