






Smythe Console Table


ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting. When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

PARTS INVENTORY		
ID	DESCRIPTION	QTY
1	TOP	1
2	LEG	2
3	LEG SUPPORT TOP	1
4	LEG SUPPORT BOTTOM	1


HARDWARE INVENTORY				
ID	IMAGE	DESCRIPTION	SIZE	QTY
A		ALLEN BOLT	M6 x 45mm	2
B		ALLEN BOLT	M6 x 40mm	2
C		ALLEN BOLT	M6 x 16mm	16
D		FLAT WASHER	16 x 8mm	20
E		ALLEN WRENCH	4mm	1

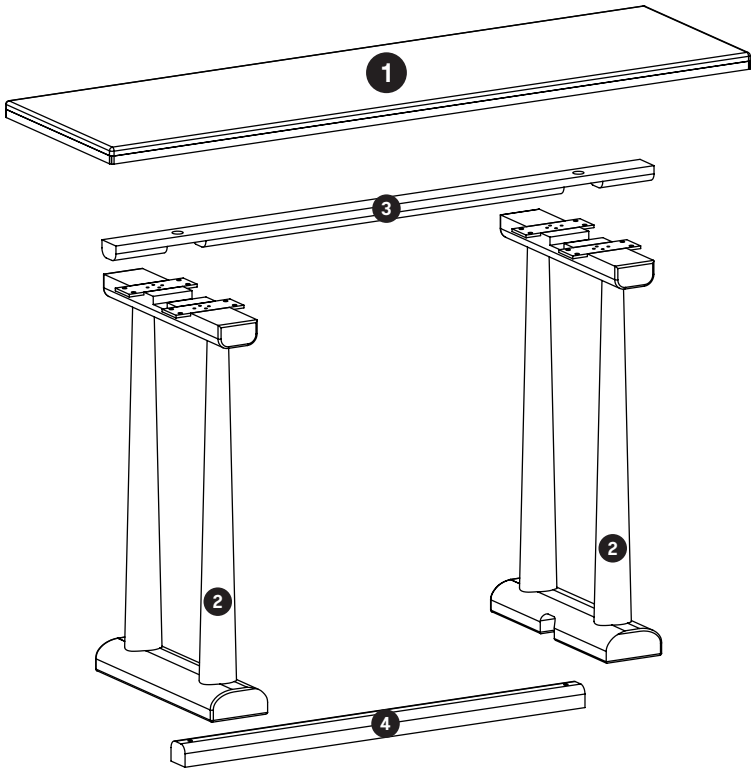

JOON LOLOI

STEP 1


Turn the **LEGS (2)** upside down and place the **LEG SUPPORT BOTTOM (4)** on **LEGS (2)**. Ensure all bolt holes are aligned.

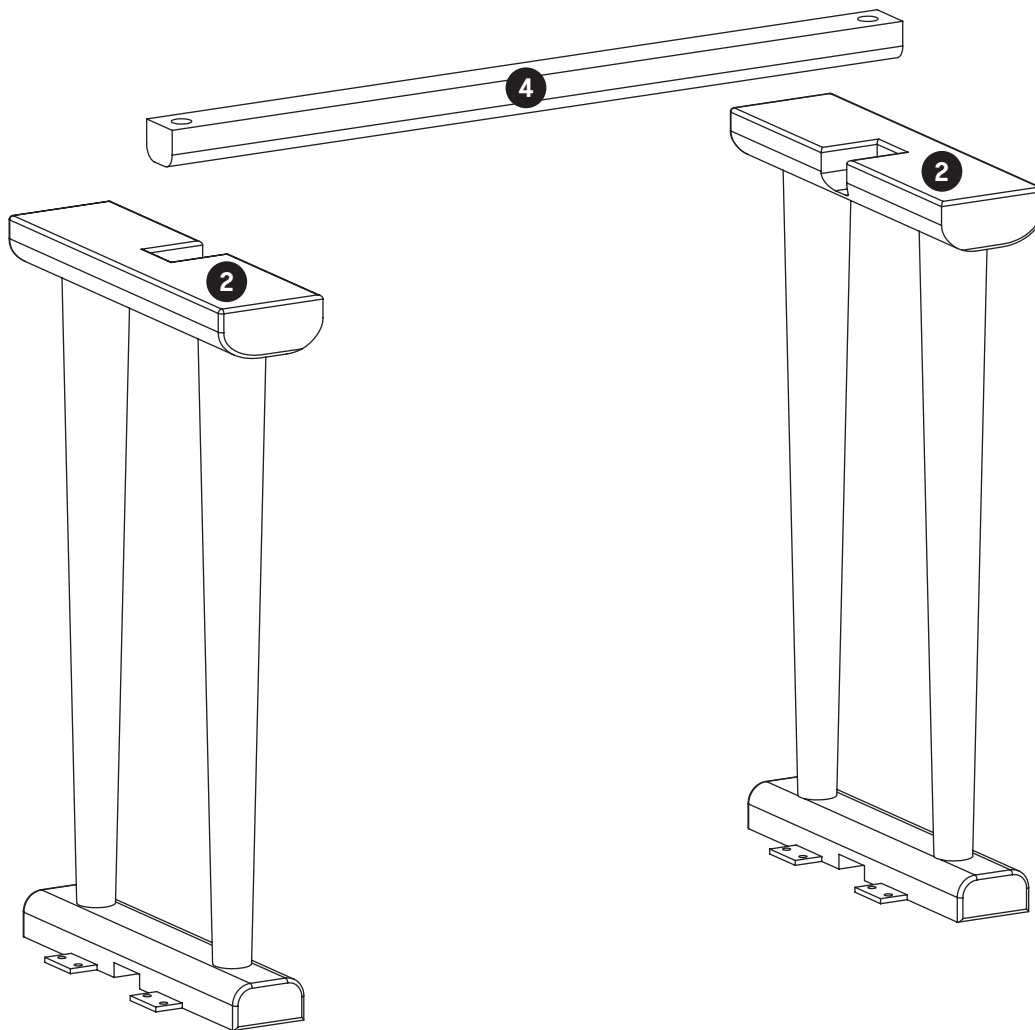

JOON LOLOI


STEP 2

Slide the **FLAT WASHER (D)** onto the **ALLEN BOLT (A)** and align the bolt holes on the **LEGS (2)** with the **LEG SUPPORT BOTTOM (4)**. Attach the **LEG SUPPORT BOTTOM (4)** using the **ALLEN WRENCH (E)**. Ensure that both legs are securely fastened.

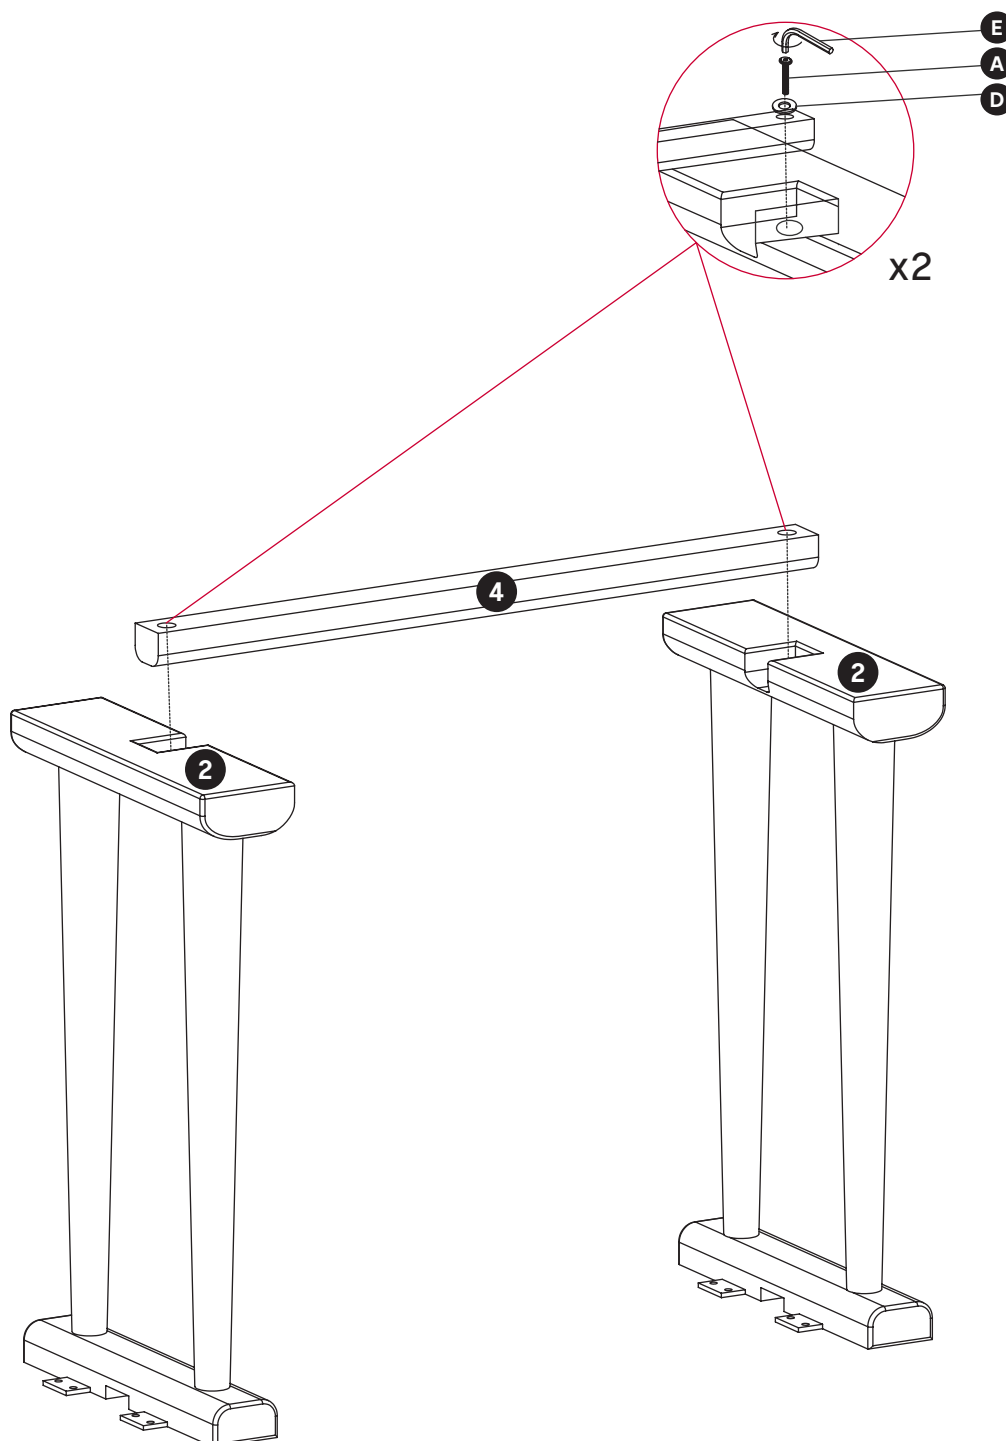

STEP 3


Turn the console base right side up after tightening both bolts.

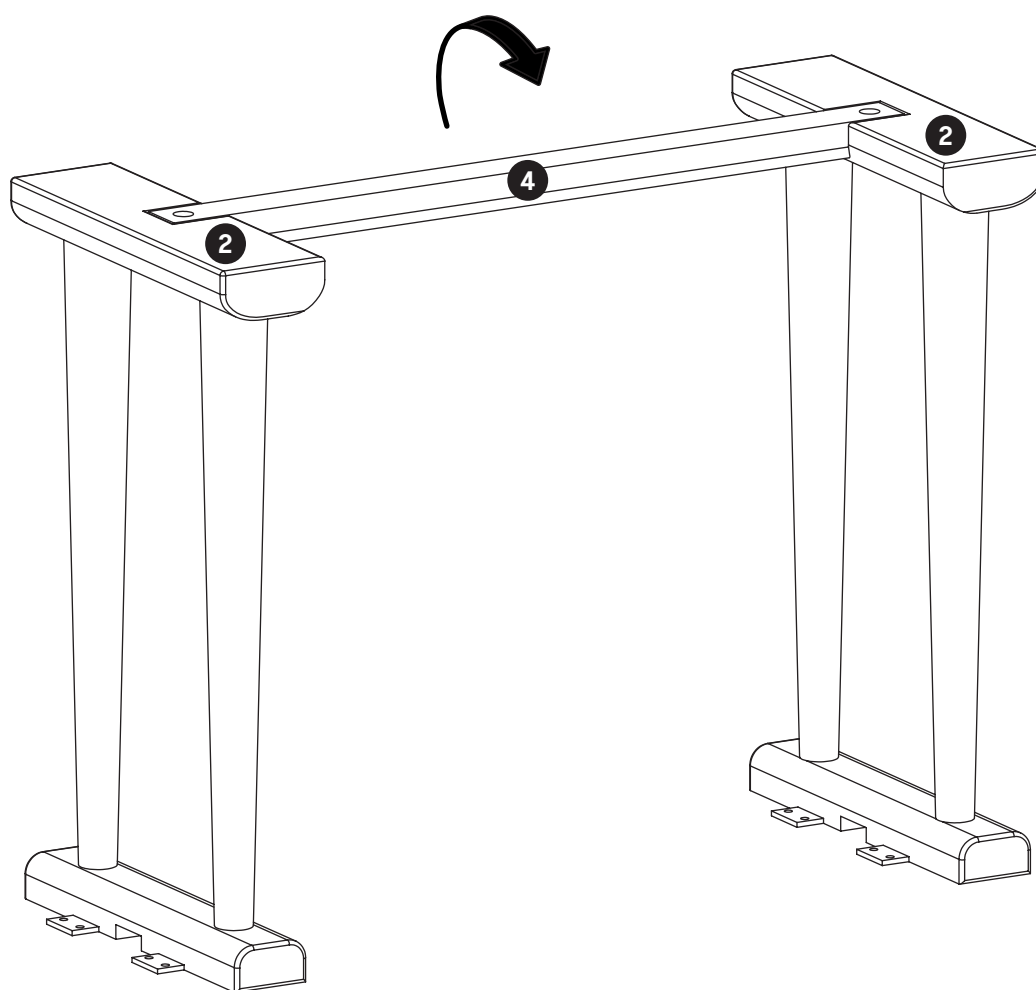

JOON LOLOI

STEP 4


Place the **LEG SUPPORT TOP (3)** on the legs and ensure that the bolt holes are aligned.

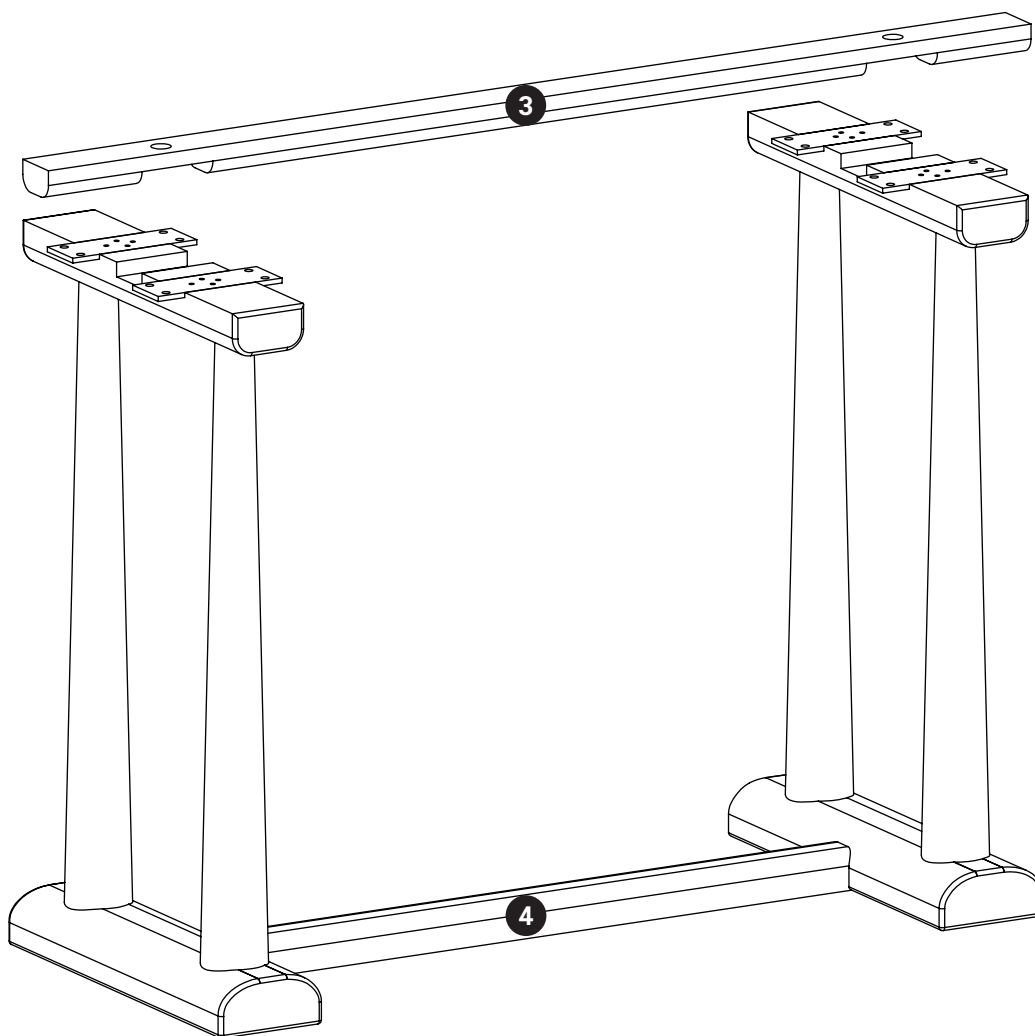

JOON LOLOI


STEP 5

Slide the **FLAT WASHER (D)** onto the **ALLEN BOLT (B)** and align the bolt holes on the **LEGS (2)** with the **LEG SUPPORT TOP (3)**. Attach the **LEG SUPPORT TOP (3)** using the **ALLEN WRENCH (E)**. Ensure that both legs are securely fastened.

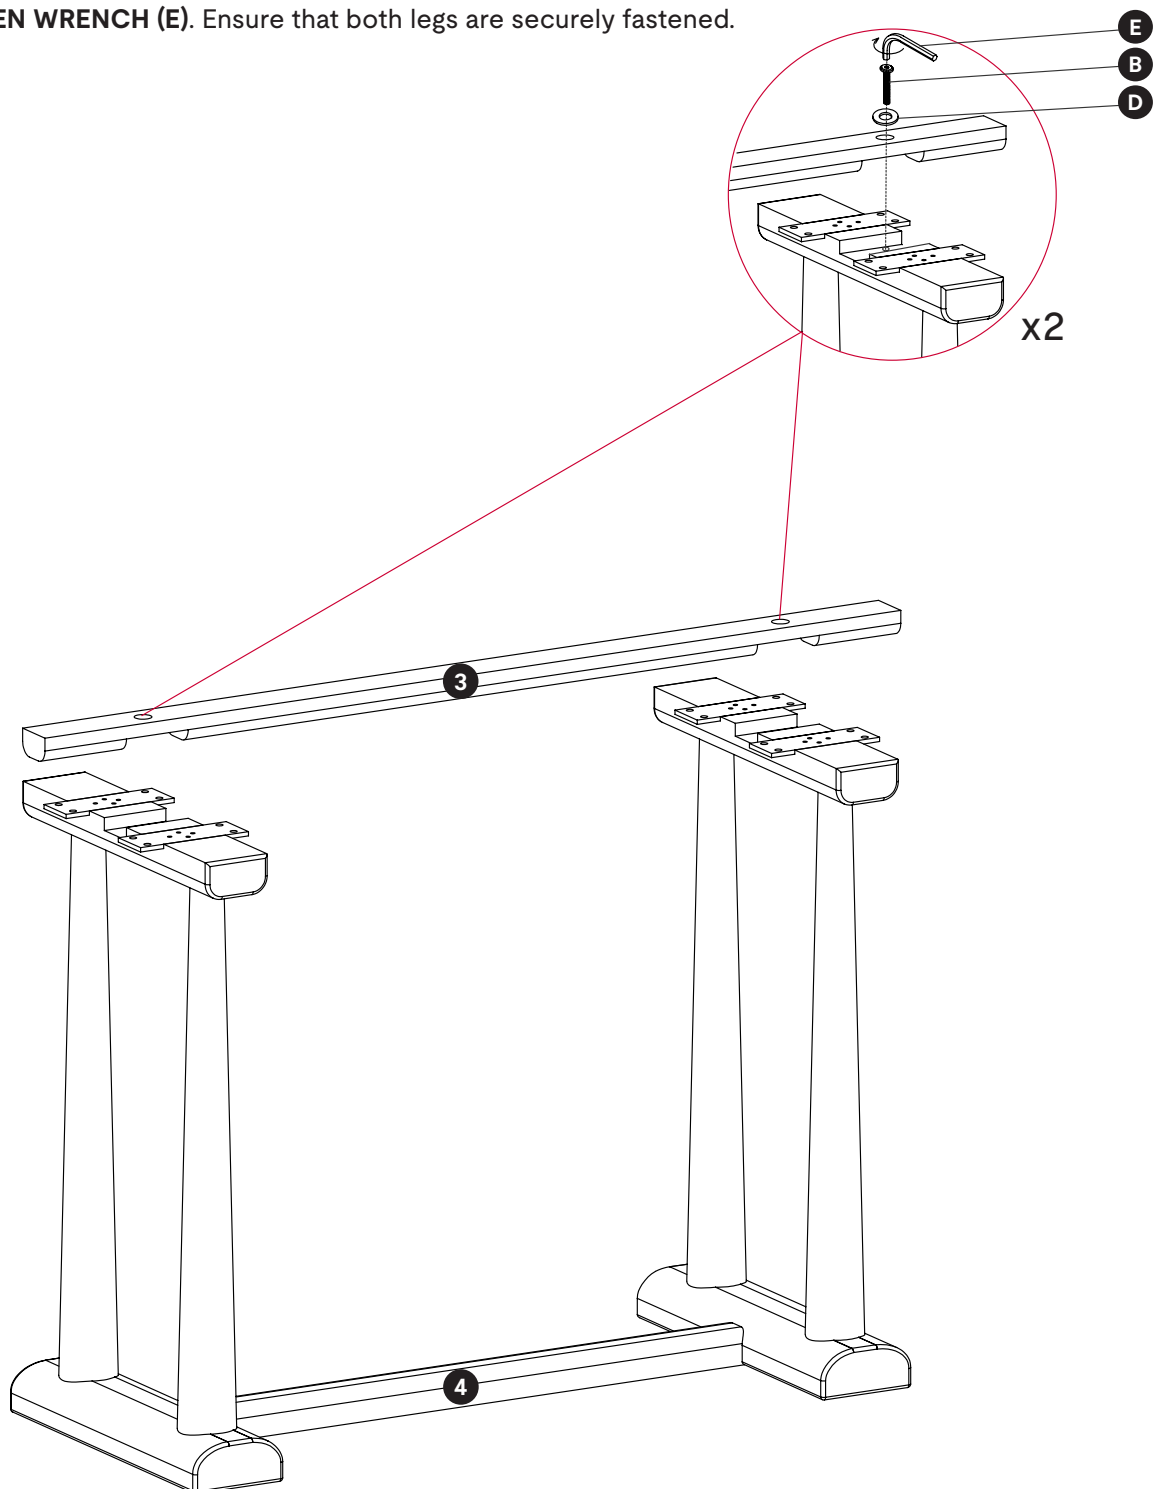


STEP 6

Turn the console base right side down after tightening both bolts.

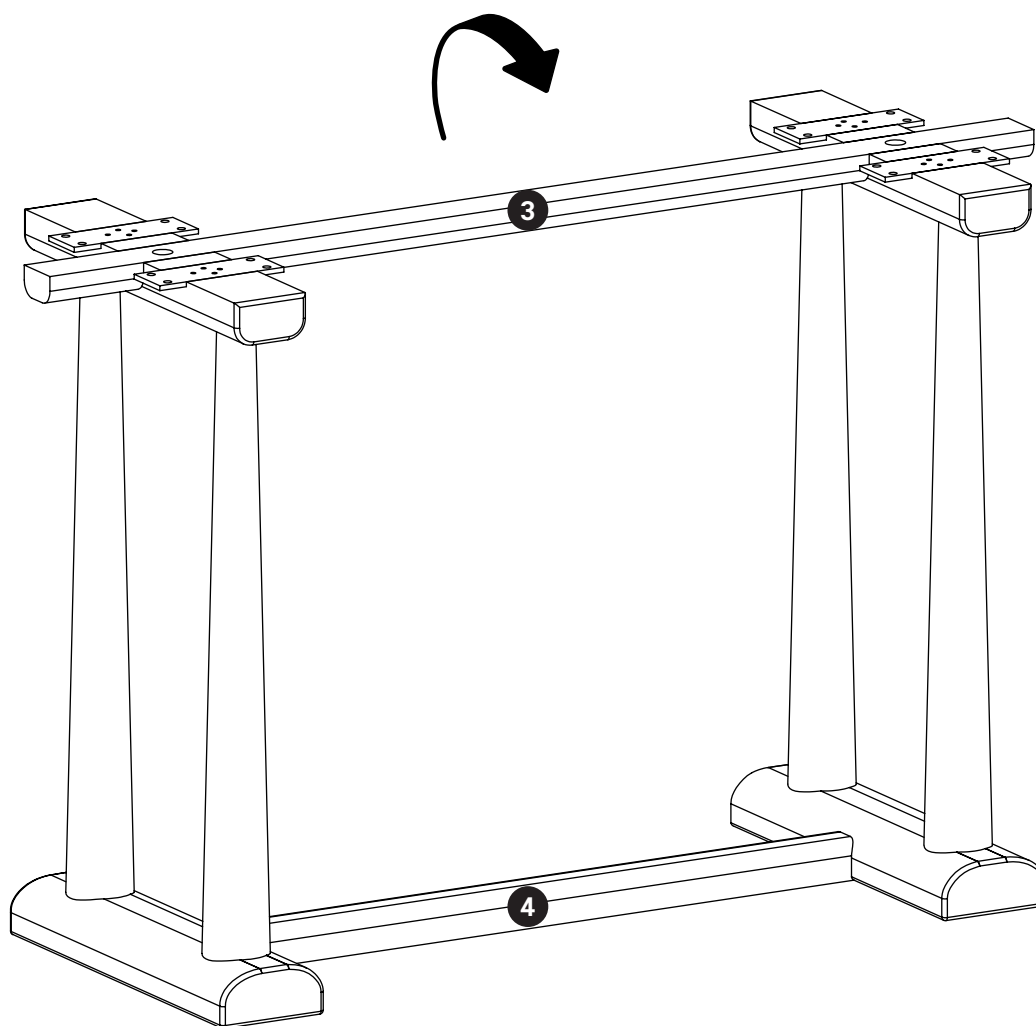

STEP 7


Place the assembled console base on the **TOP (1)**, ensuring all bolt holes are aligned with the metal plate.

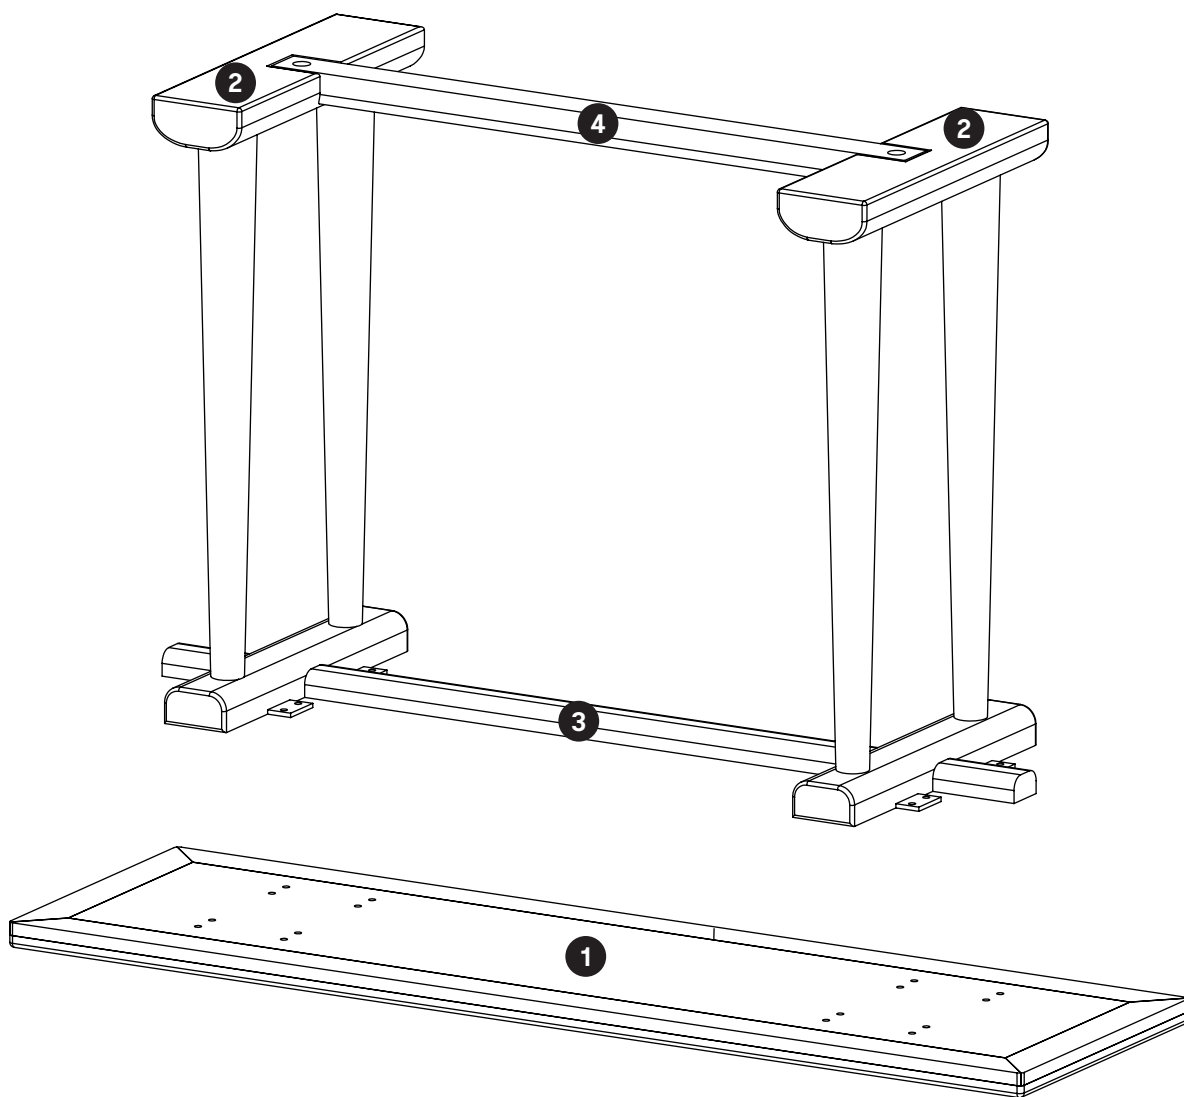

JOON LOLOI


STEP 8

Slide the **FLAT WASHER (D)** onto the **ALLEN BOLT (B)** and align the bolt holes on the **LEGS (2)** with the **LEG SUPPORT TOP (3)**. Attach the **LEG SUPPORT TOP (3)** using the **ALLEN WRENCH (E)**. Ensure that both legs are securely fastened.

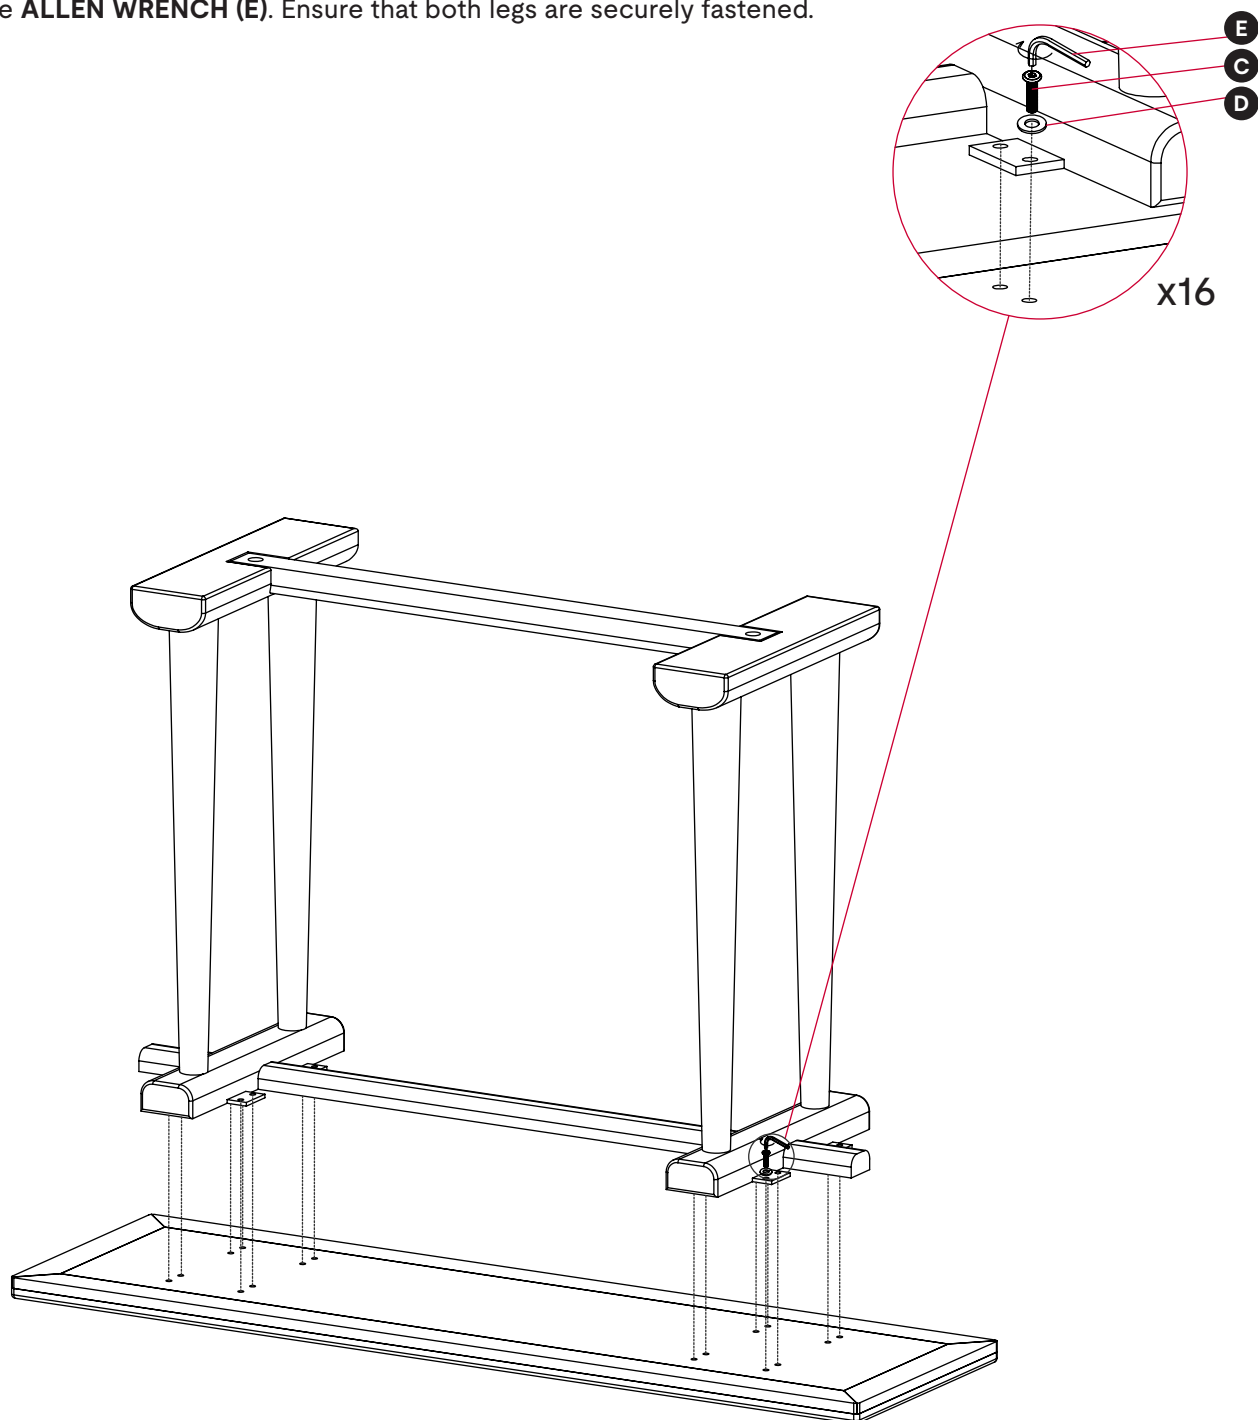


STEP 9

Turn the console table right side up after tightening all the bolts.

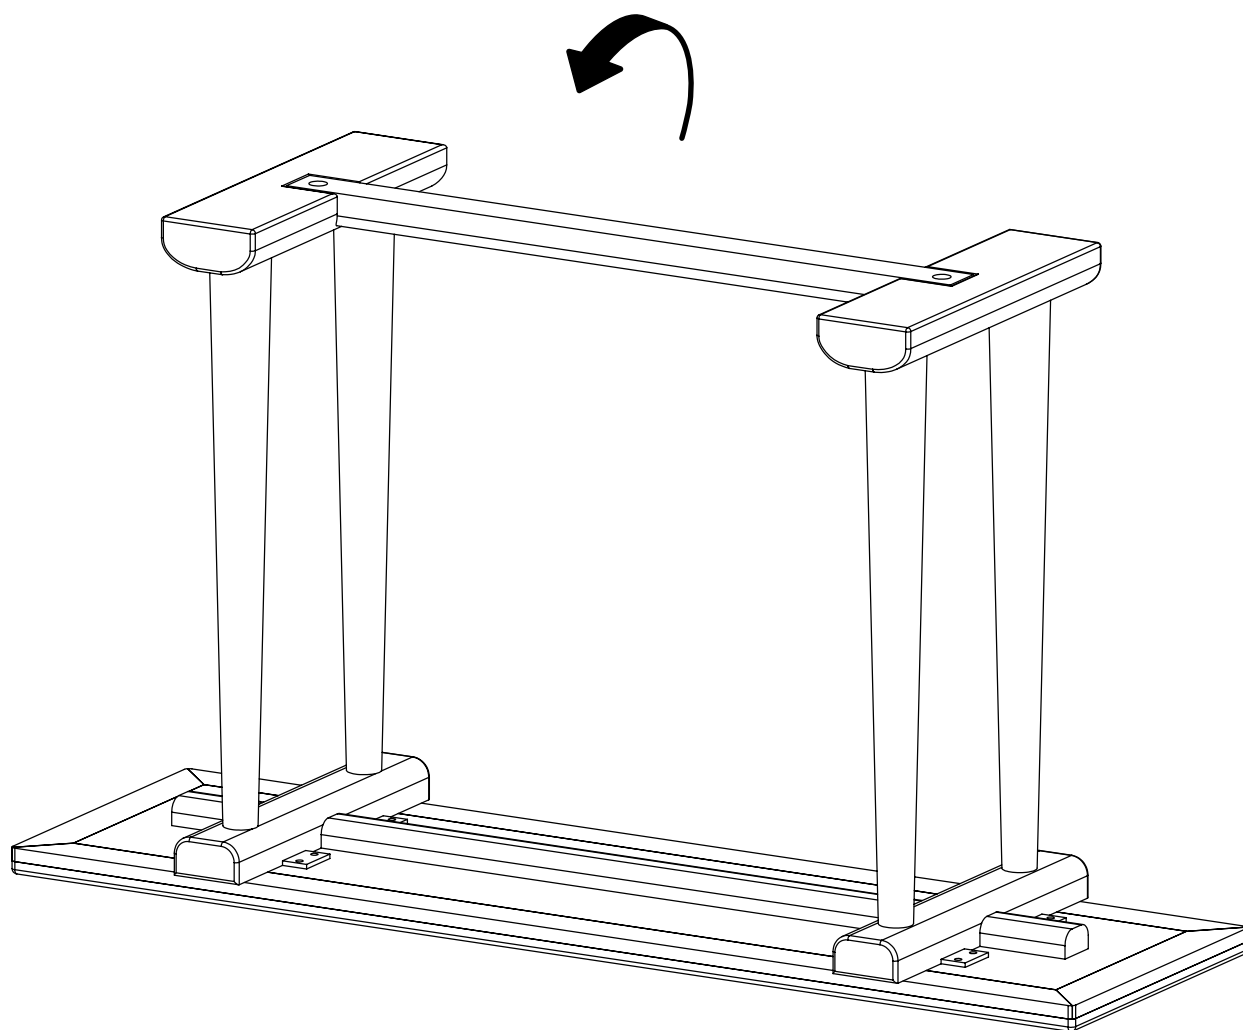

STEP 10

Once all components have been secured, adjust levelers, and the assembly is complete.

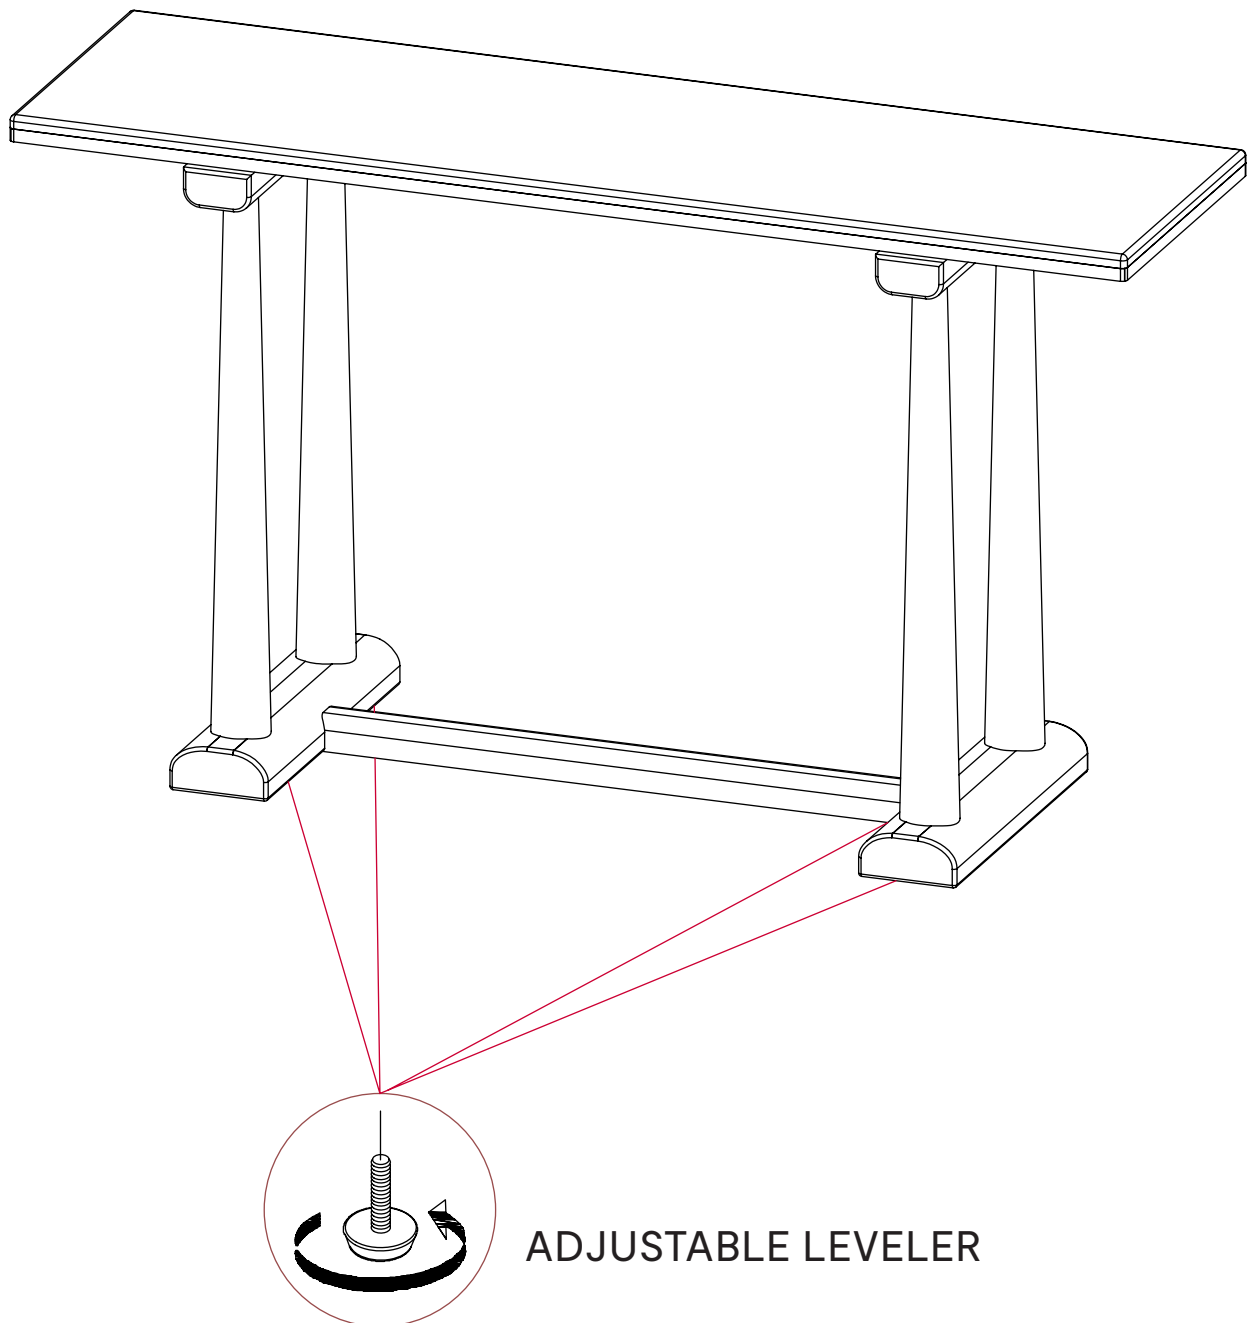


HANGMAN ANTI-TIP-KIT INSTRUCTIONS

FURNITURE TIPPING RESTRAINT INSTRUCTIONS

Young children may be injured by tipping furniture. The use of a tipping restraint is highly recommended.

When properly installed, this restraint could provide protection against the unexpected tipping of furniture due to small tremors, bumps or climbing. We recommend mounting this restraint to a wall stud. **WARNING:** This product is only a deterrent. It is not a substitute for proper adult supervision.

ANTI-TIP-KIT INSTALLATION INSTRUCTION


 **WARNING:** Always mount metal brackets to solid wood of furniture. Do not attach to plywood of back panels.

ATTACH THE ANTI-TIP KIT TO A WALL STUD IF POSSIBLE OR HAVE A PROFESSIONAL ATTACH THE KIT TO MASONRY OR A CONCRETE WALL.

1. Attach mounting brackets (A) near the middle-top back edge of the furniture piece by inserting the shorter screws (E).
2. Determine the final position of the furniture piece. Mark locations on the wall approximately 2" below the brackets mounted to the back of the furniture.
3. Attach the second brackets to stud wall by inserting the longer screw (F) (see **FIGURE 1 & FIGURE 2**) or toggle bolt (G) through the drywall (see **FIGURE 3**).
4. Place the furniture so that the brackets on the back edge are in line with the brackets in the wall.
5. Insert the clevis pin (B) through holes on brackets and hole on steel aircraft cable (C). Use hair pin (D) to go through small hole on clevis pin (B) to lock it.
6. Repeat above step to attach the end of aircraft cable (C) to the bracket on the wall.
7. Check to make sure the steel aircraft cable is securely laced and locked to the brackets.


TYPE SECURING FURNITURE AND ASSEMBLY INSTRUCTIONS BY WALL TYPE:

1. Attach to top back frame of cabinet, ideal installation for dressers and chests. See detail in **FIGURE 1**.

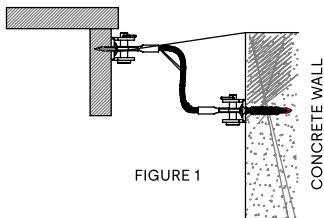


• **CONCRETE:** Drill pilot hole on each marking, and then insert plastic anchor. Use a screwdriver to attach the metal bracket to the wall with screws. See **FIGURE 1**.

2. Attach to underside of top when there is no back rail, drill through plywood back panel. Ideal installation for file cabinets and console table. See detail in **FIGURE 2**.

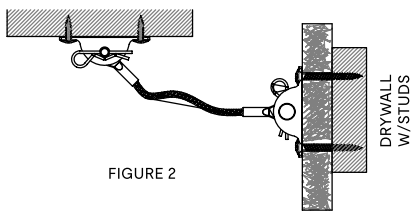

• **DRYWALL WITH STUDS:** Use screws to affix to studs, and use hollow wall anchors and screws to affix to drywall. See **FIGURE 2**.

3. Attach to top of tall furniture such as curio cabinets. See detail in **FIGURE 3**.

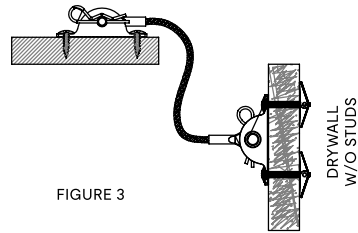

• **DRYWALL WITHOUT STUDS:** Use toggle bolt and screws to affix to drywall. See **FIGURE 3**.

HARDWARE INVENTORY			
ID	IMAGE	DESCRIPTION	QTY
A		METAL BRACKET	4
B		CLEVIS PIN	4
C		AIRCRAFT CABLE	2
D		HAIR PIN	4
E		SHORT SCREW	4
F		LONG SCREW	4

