

# Stefano Console Table

---

## ASSEMBLY INSTRUCTIONS


# JOON LOLOI

## ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting. When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

PARTS INVENTORY		
ID	DESCRIPTION	QTY
<b>1</b>	TOP	1
<b>2</b>	LEG 1	2
<b>3</b>	STRECHER	1
<b>4</b>	LEG 2	2


HARDWARE INVENTORY				
ID	IMAGE	DESCRIPTION	SIZE	QTY
<b>A</b>		FLAT WASHER	25 x 10mm	14
<b>B</b>		LOCK WASHER	15 x 9mm	14
<b>C</b>		HALFMOON WASHER	18 X 18mm	2
<b>D</b>		ALLEN BOLT	M6 x 20mm	4
<b>E</b>		ALLEN BOLT	M6 x 40mm	8
<b>F</b>		ALLEN BOLT	M6 x 25mm	8
<b>G</b>		ALLEN KEY	M4 X 110mm	1
<b>H</b>		METAL PLATE	127mm SQUARE	2

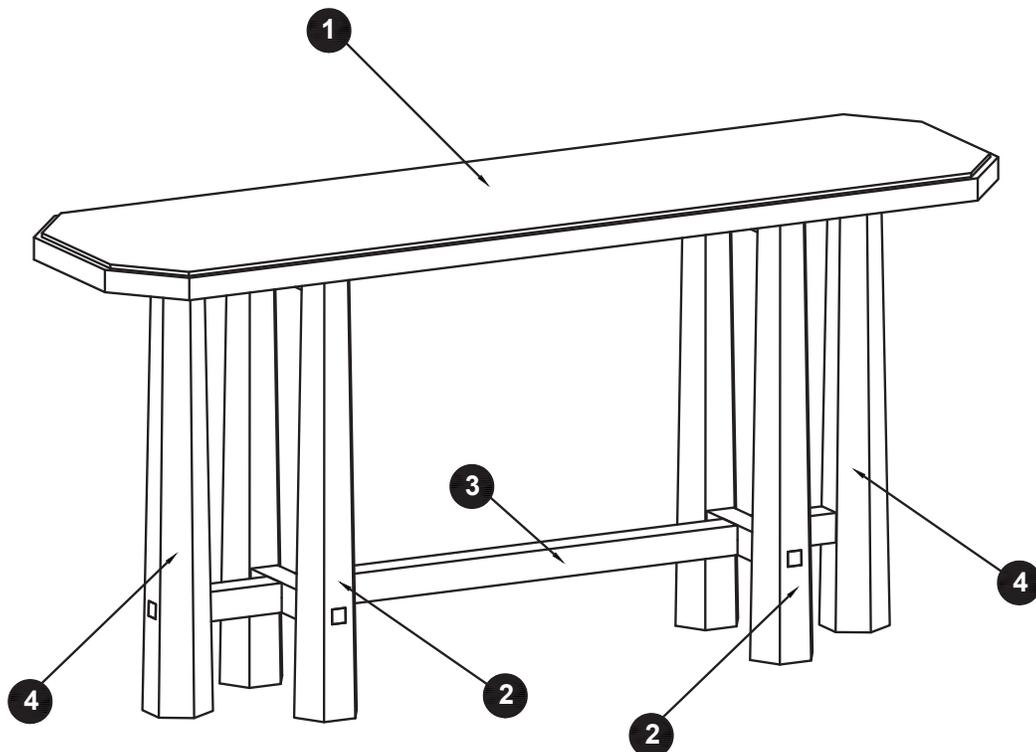

# JOON LOLOI

## STEP 1

Place the **TOP (1)** upside down on a clean surface. Using the **ALLEN KEY (G)**, detach the metal plate by turning it in a counterclockwise direction.

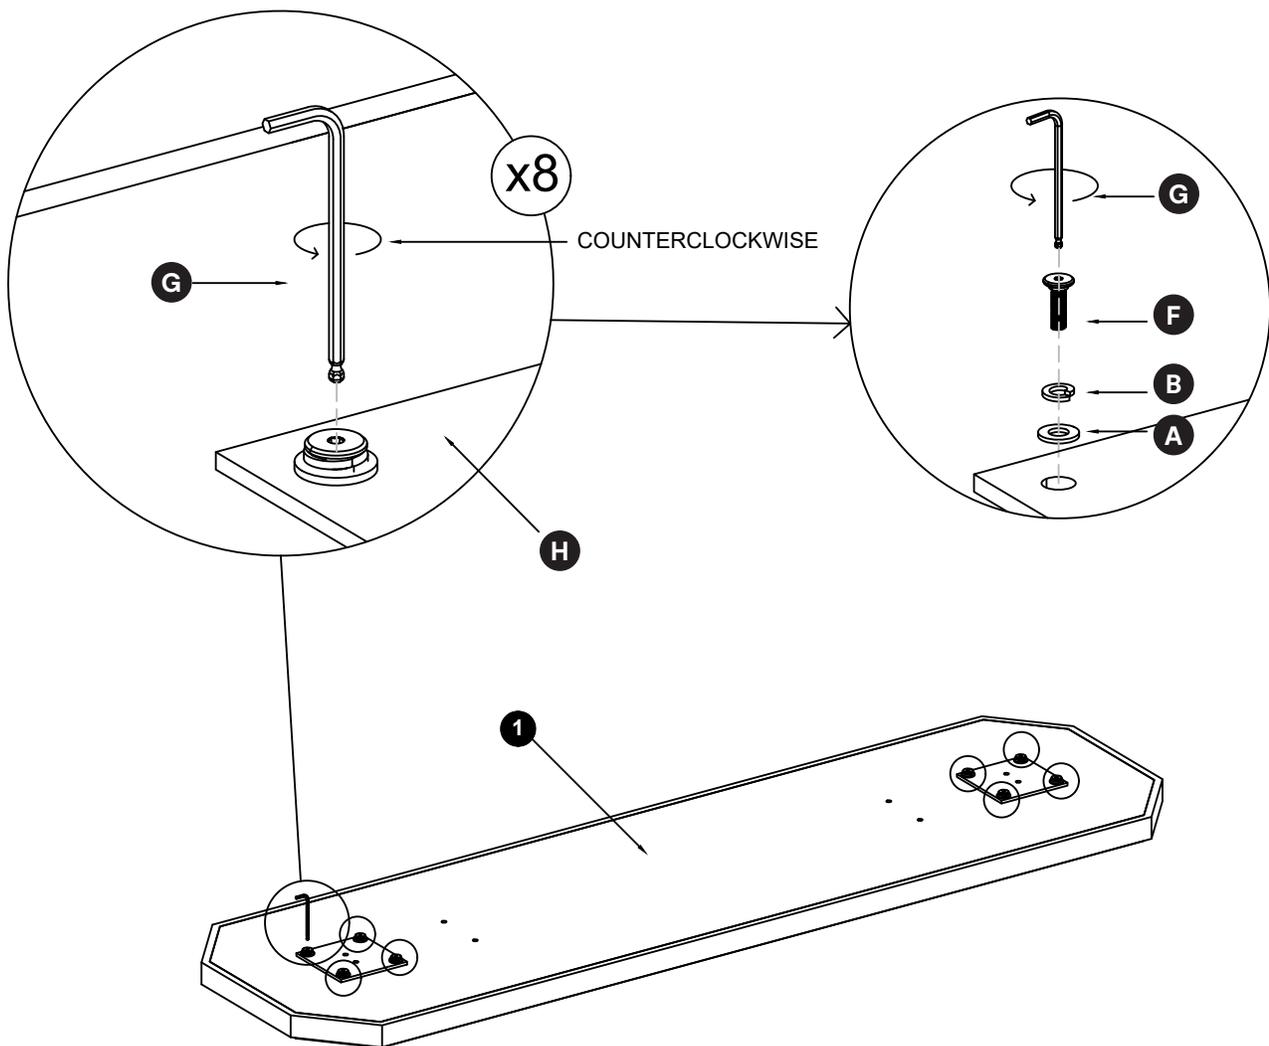


# JOON LOLOI

---

## STEP 2


Attach the metal plate to **LEG 2 (4)**. Insert an **ALLEN BOLT (D)** into each bolt hole, then tighten using the **ALLEN KEY (G)**. Repeat this process for all bolt holes.

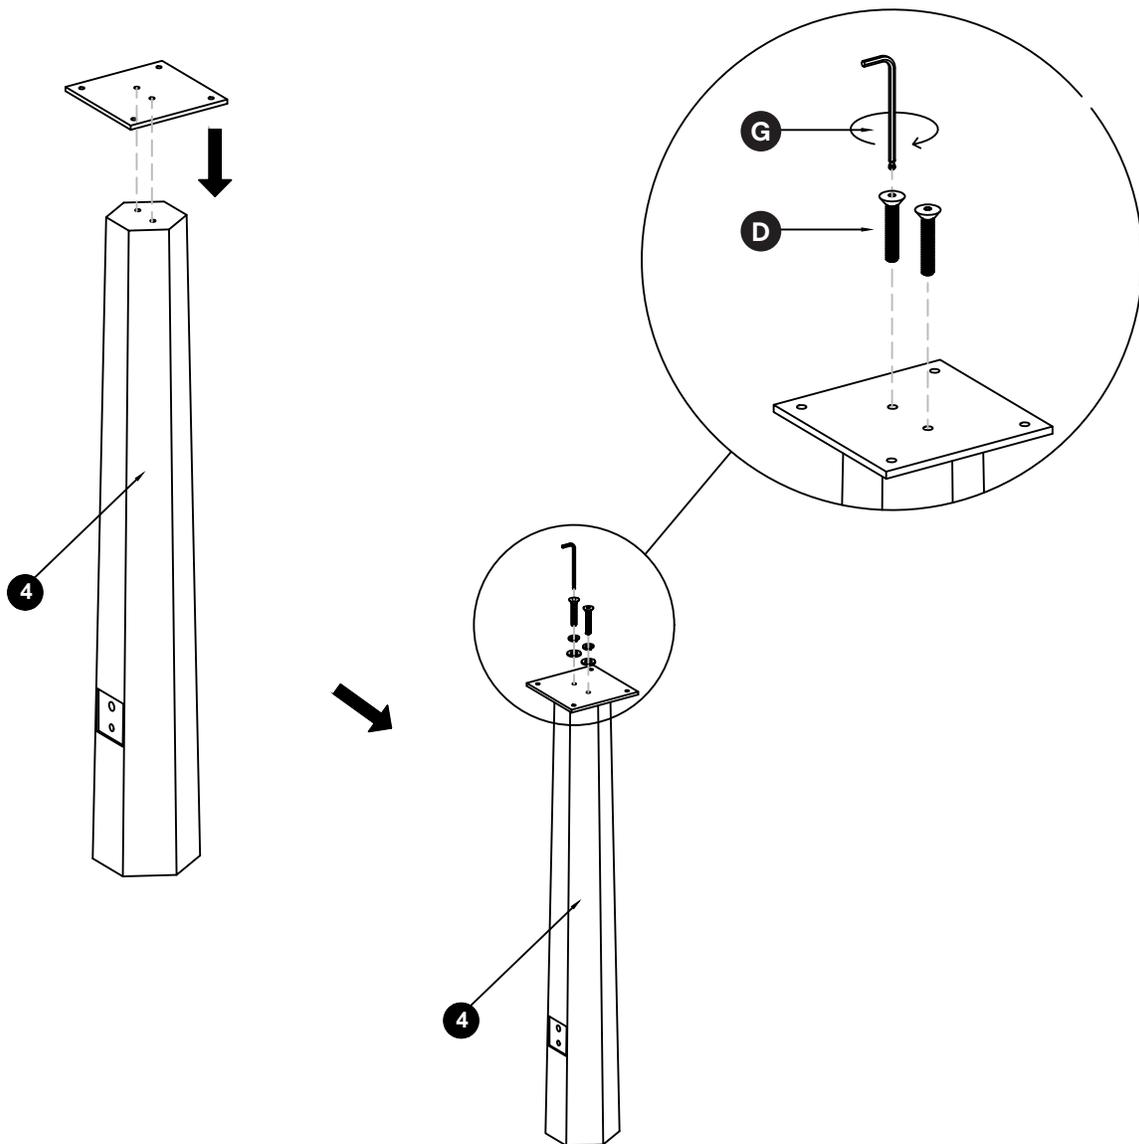

# JOON LOLOI

## STEP 3


Place **LEG 2 (4)** upside down on a clean surface. Attach the **STRETCHER (3)** using the guide pin. Insert an **ALLEN BOLT (E)** with a **HALFMOON WASHER (C)** into the bolt hole, then tighten using the **ALLEN KEY (G)**. Repeat this process for all bolt holes.

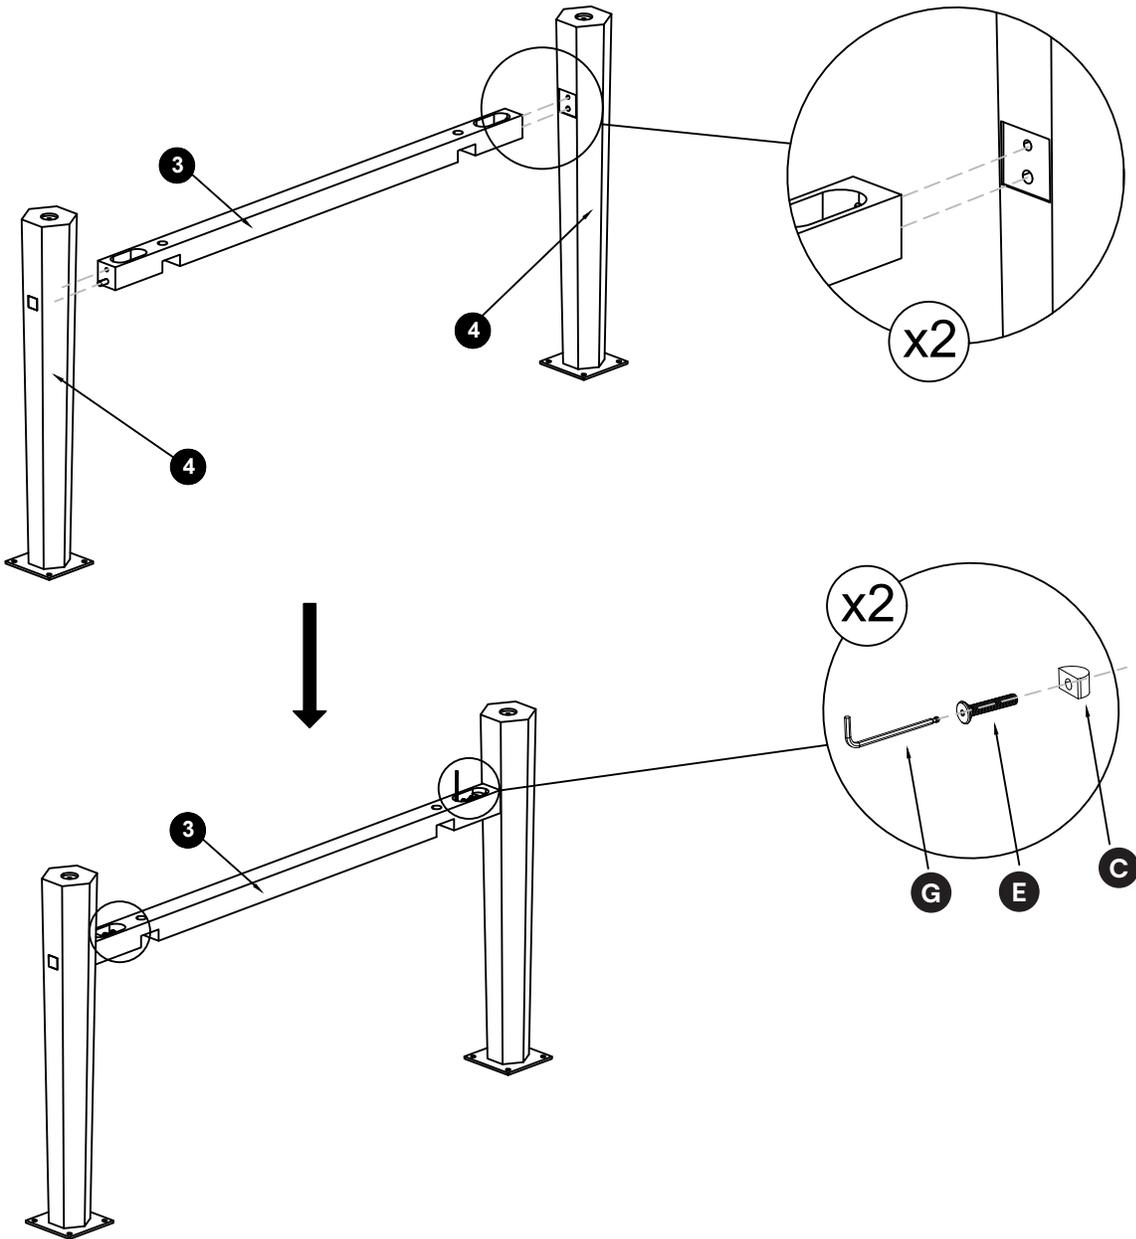

# JOON LOLOI

## STEP 4


Place the **TOP (1)** upside down on a clean surface. Align **LEG 1 (2)** with the bolt holes on the underside of the **TOP (1)**.

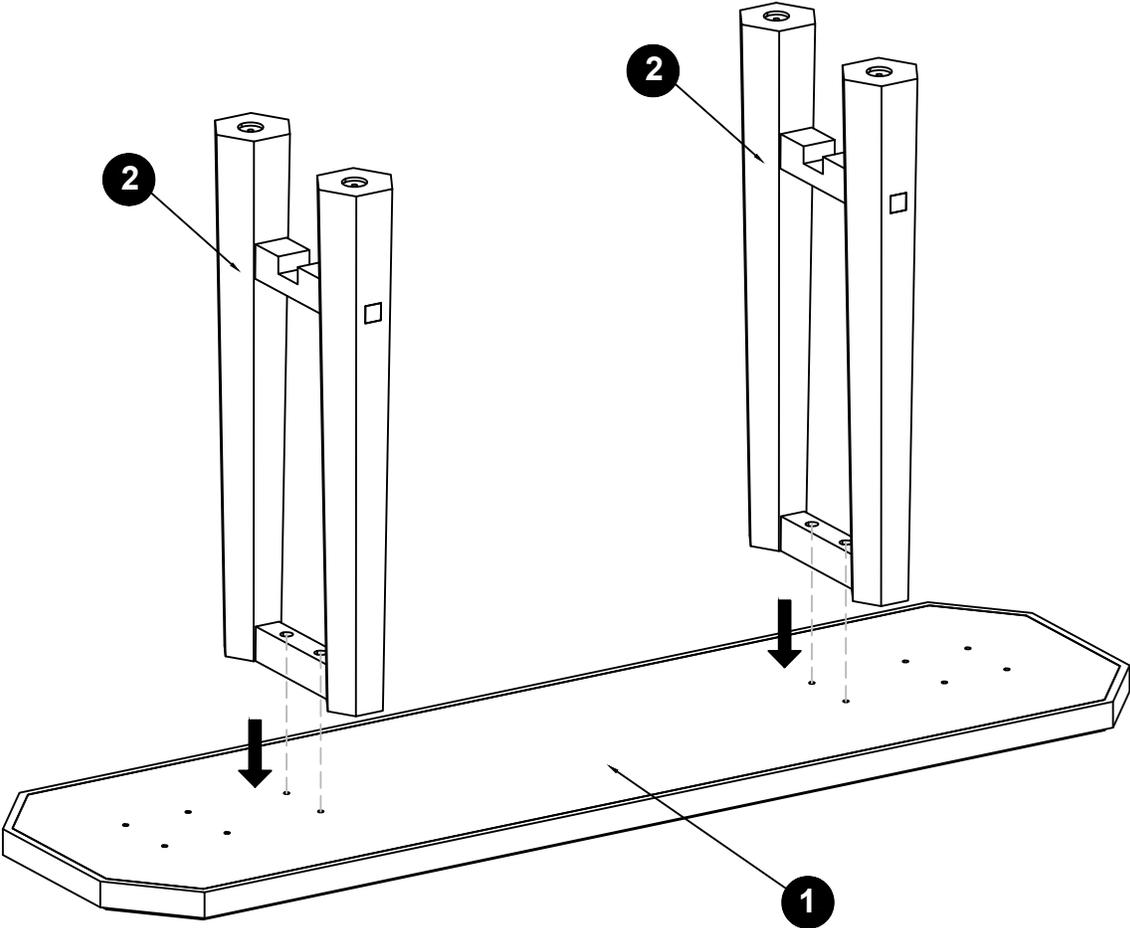

# JOON LOLOI

## STEP 5

Insert an **ALLEN BOLT (E)** with a **LOCK WASHER (B)** and a **FLAT WASHER (A)** into the bolt hole, then tighten using the **ALLEN KEY (G)**. Repeat this process for the remaining bolt holes.

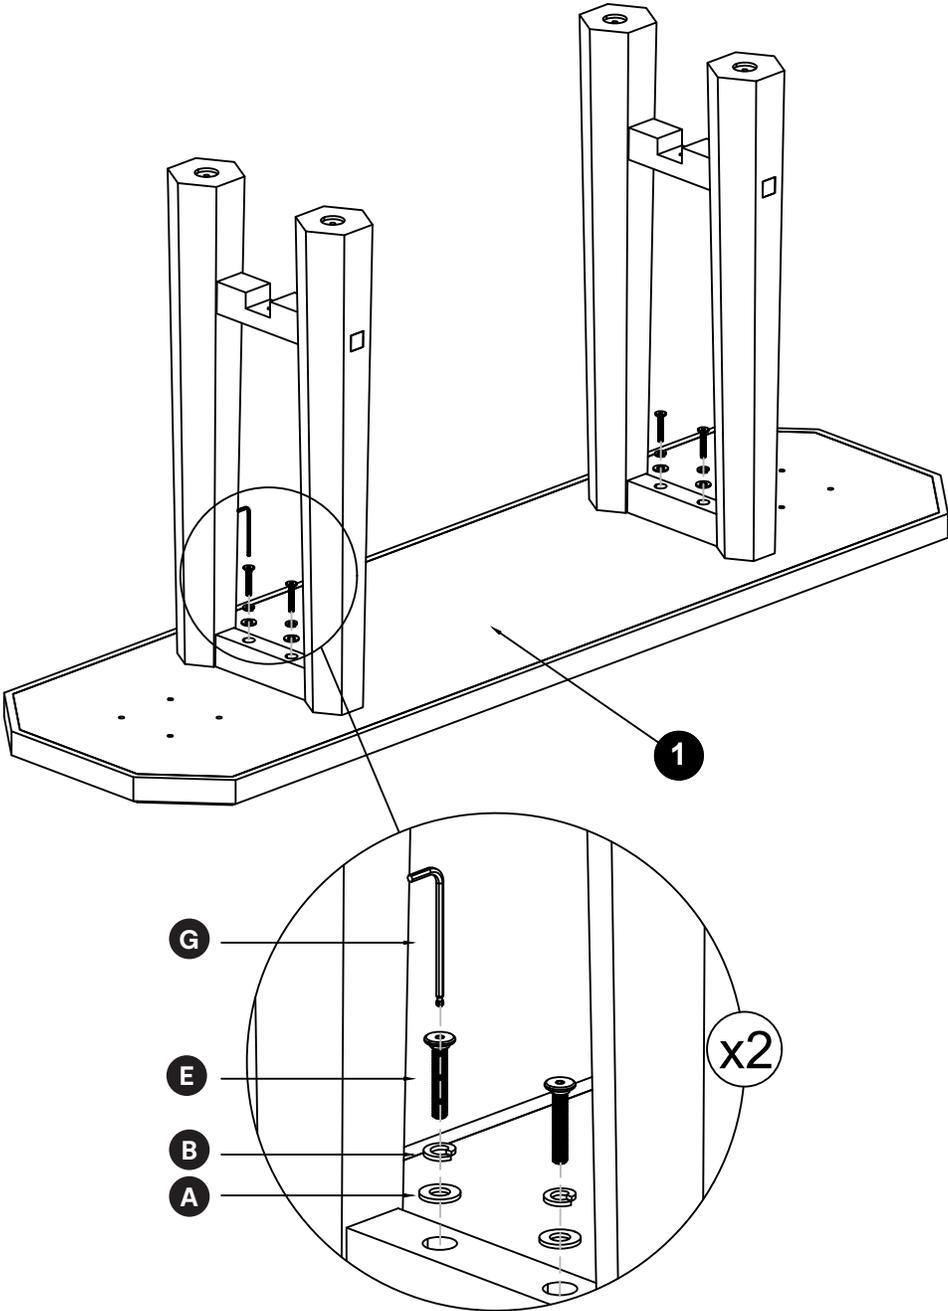


# JOON LOLOI

---

## STEP 6


Position **LEG 2 (4)** with the **STRETCHER (3)** onto **LEG 1 (2)**, ensuring the grooves are aligned with the bolt holes.

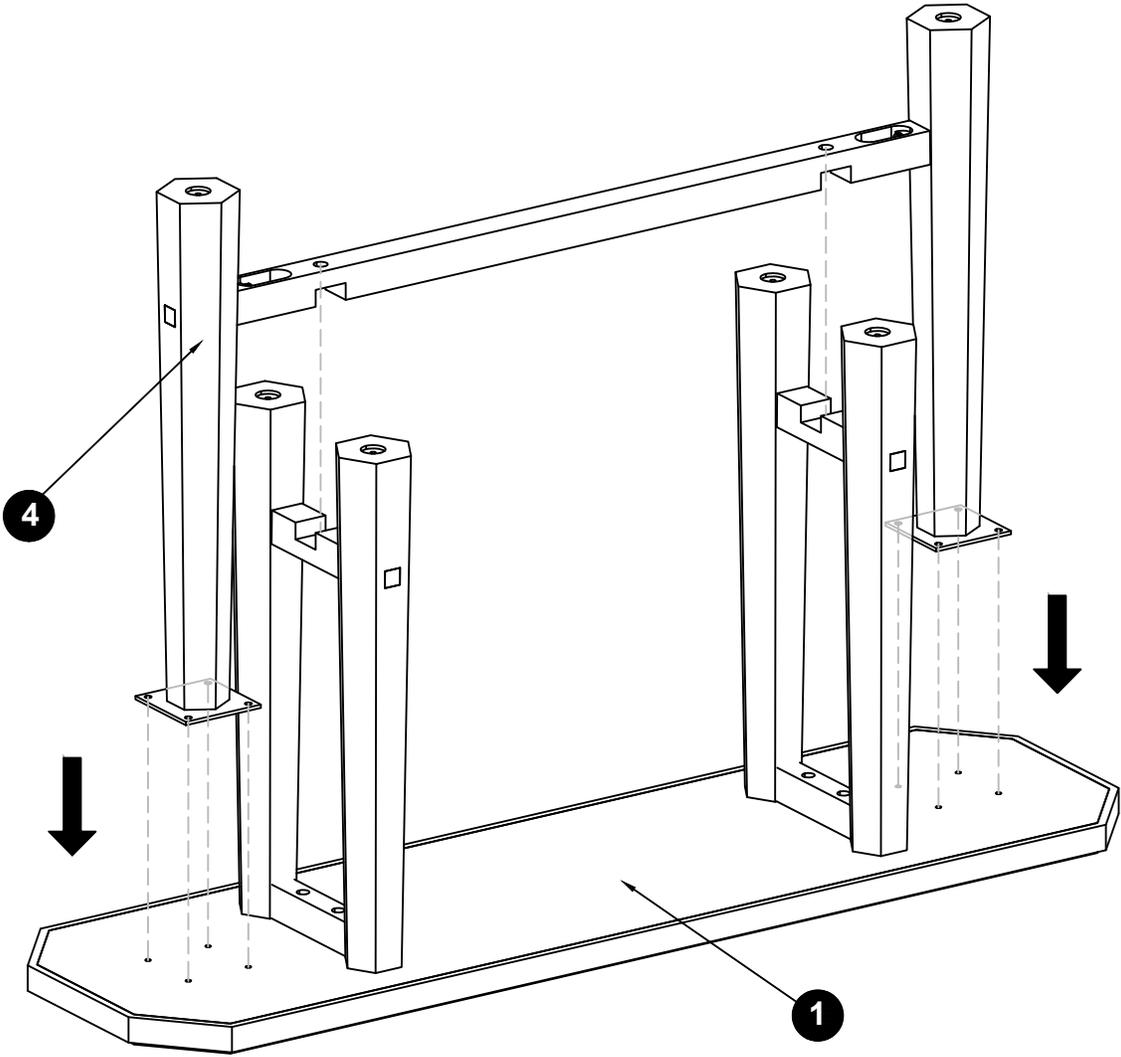

# JOON LOLOI

## STEP 7

Insert an **ALLEN BOLT (F)** with a **LOCK WASHER (B)** and a **FLAT WASHER (A)** into the bolt hole to secure the metal plates to the **TOP (1)**, then tighten using the **ALLEN KEY (G)**. For the **STRETCHER (3)**, insert an **ALLEN BOLT (E)** with a **LOCK WASHER (B)** and a **FLAT WASHER (A)** into the bolt hole, then tighten using the **ALLEN KEY (G)**.

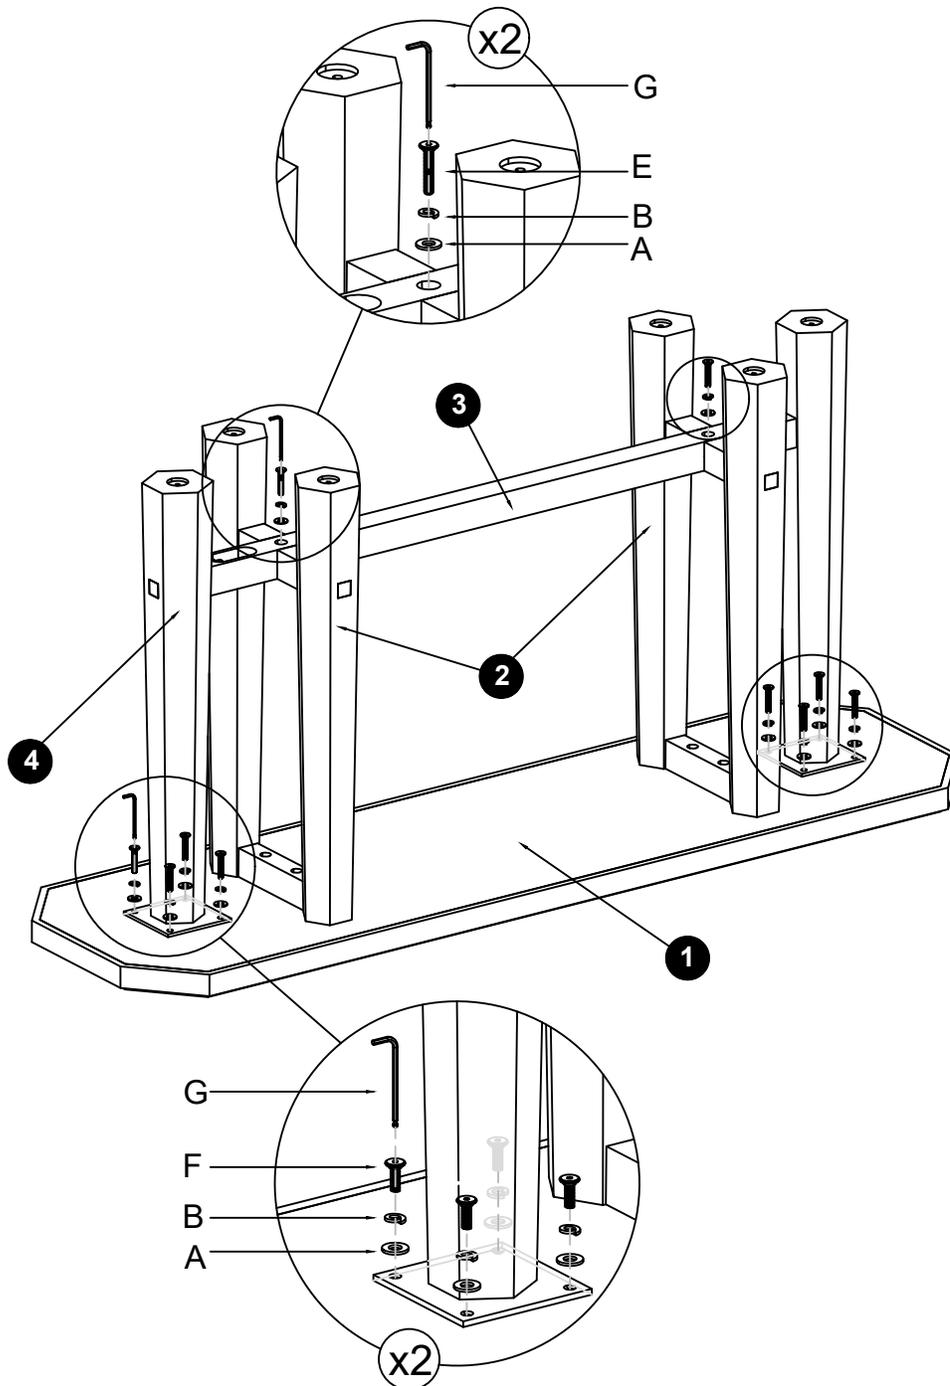


# JOON LOLOI

---

## STEP 8

Repeat the instructions in STEP 7 for the remaining bolt holes.

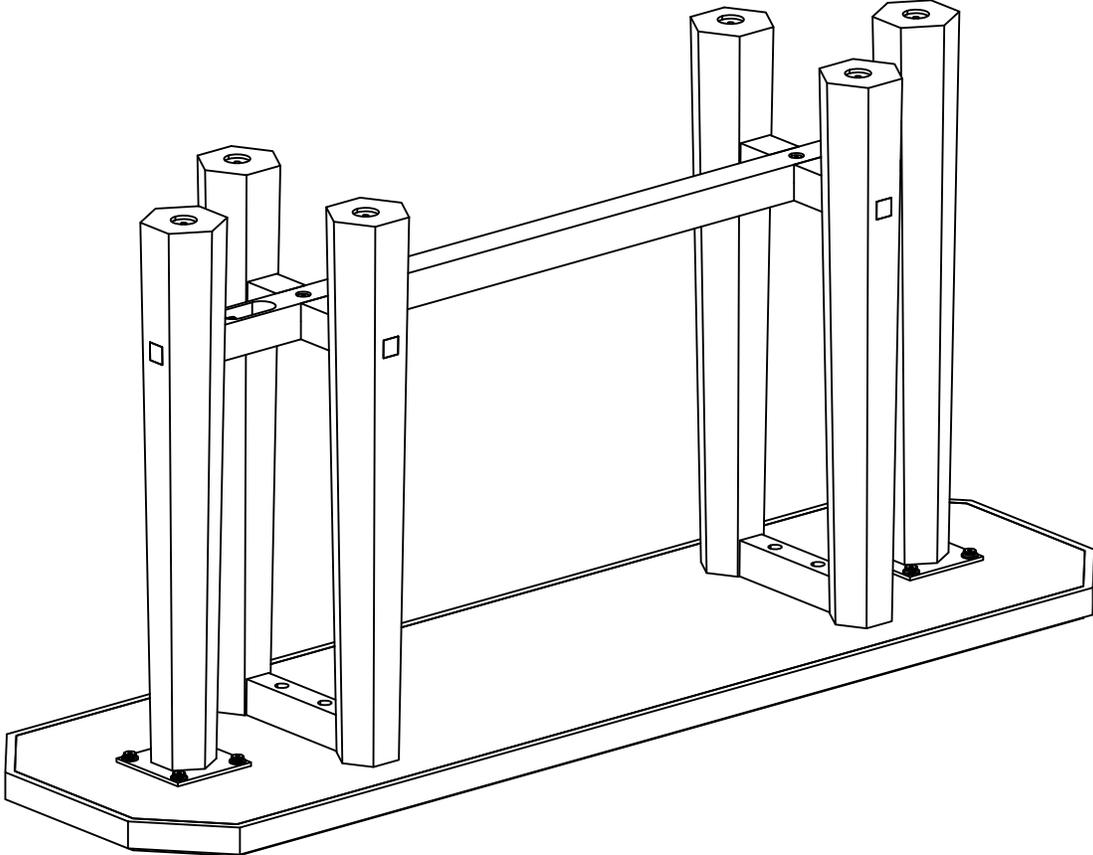

# JOON LOLOI

---

## STEP 9

Turn the Stefano Console Table right side up after tightening all the bolts. Once all components are secured, adjust the levelers. The assembly is now complete.

