


Aviva Accent Table


ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting. When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

PARTS INVENTORY		
ID	DESCRIPTION	QTY
1	WOODEN TOP	1
2	PEDESTAL	1
3	BASE	1


HARDWARE INVENTORY				
ID	IMAGE	DESCRIPTION	SIZE	QTY
A		ALLEN BOLT	16 x 6mm	8
B		ALLEN BOLT	25 x 6mm	4
C		WASHER	16 x 8mm	12
D		ALLEN WRENCH	4mm	1

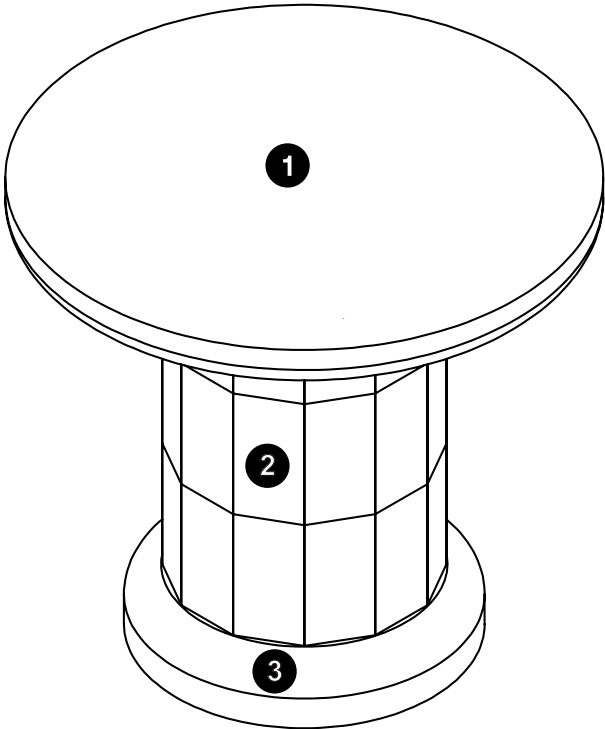

JOON LOLOI


STEP 1

Place the **WOODEN TOP (1)** face down on a flat surface, then position the **PEDESTAL (2)** on top of the **WOODEN TOP (1)**, ensuring that all bolt holes align with the metal plates.

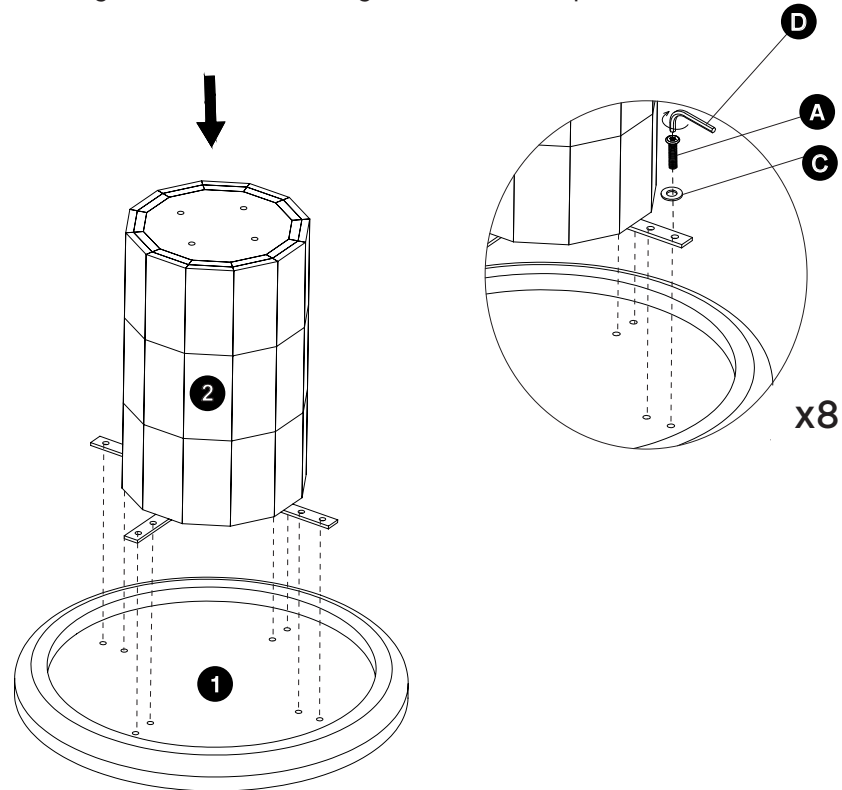

STEP 2


Slide a **FLAT WASHER (C)** onto the **ALLEN BOLT (A)**, align the bolt holes on the **PEDESTAL (2)** with those on the **WOODEN TOP (1)**, and attach them using the **ALLEN WRENCH (D)**. Repeat this process for all bolt holes.

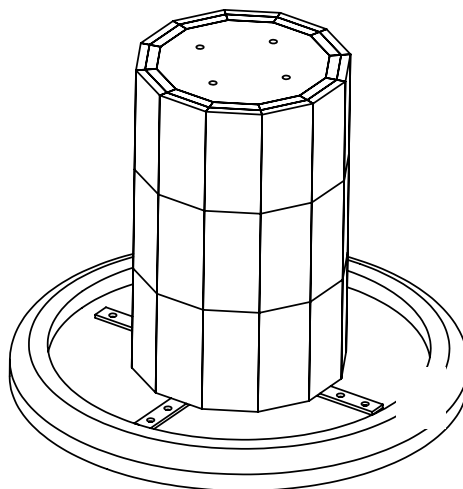

JOON LOLOI


STEP 3

Now place the **BASE (3)** on the **PEDESTAL (2)**, ensuring that all bolt holes are aligned with the **PEDESTAL (2)**. Slide a **FLAT WASHER (C)** onto the **ALLEN BOLT (B)**, align the bolt holes on the **PEDESTAL (2)** with those on the **BASE (3)**, and attach them using the **ALLEN WRENCH (D)**. Repeat this process for all bolt holes.

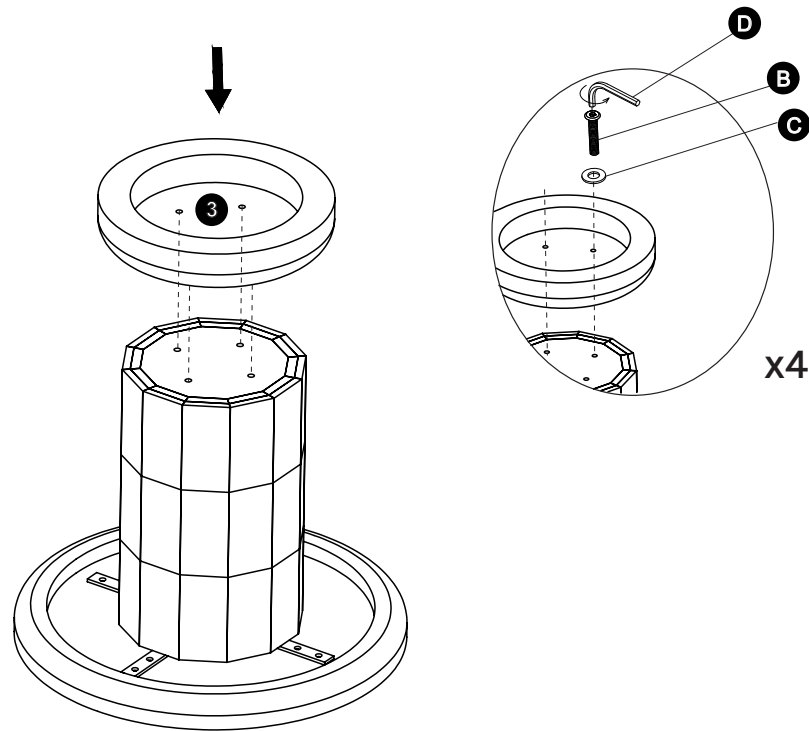

STEP 4

Ensure that all bolts are securely tightened.

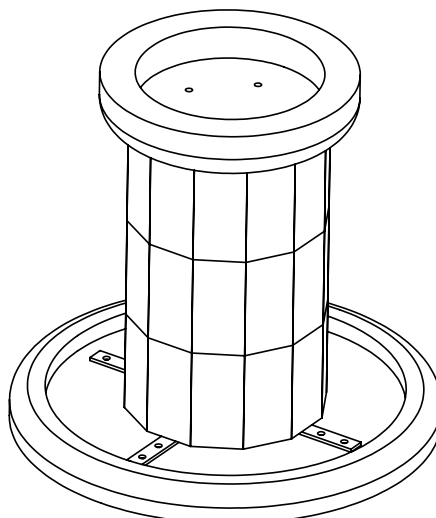

JOON LOLOI

STEP 5

Once all bolts are secured, turn the accent table right-side up and adjust the levelers as needed.
Your assembly is now complete.

