




# Ivo Floor Mirror

---

ANTI-TIP KIT INSTRUCTIONS

## ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting. When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

HARDWARE INVENTORY			
ID	IMAGE	DESCRIPTION	QTY
<b>A</b>		DRYWALL ANCHORS	2
<b>B</b>		M4 X 25MM SCREWS	4
<b>C</b>		ANTI-TIP KIT	1

## ⚠ WARNING!


Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.

## STEP 1

Determine the type of wall you'll be hanging the mirror against. Make sure the placement of the **ANTI-TIP BRACKET (C)** is level and use a pencil to mark the two holes through the **ANTI-TIP BRACKET (C)**. Use a drill to drill the holes in the marks you created with the pencil. If you can find a stud in the wall to screw the **ANTI-TIP BRACKET (C)** into, then you only need to use the screws. If you cannot locate a stud, you will need to use the **DRYWALL ANCHORS (A)** to secure the **ANTI-TIP BRACKET (C)** safely to the wall. Then use the **SCREWS (B)** to attach the **ANTI-TIP BRACKET (C)** to the wall.

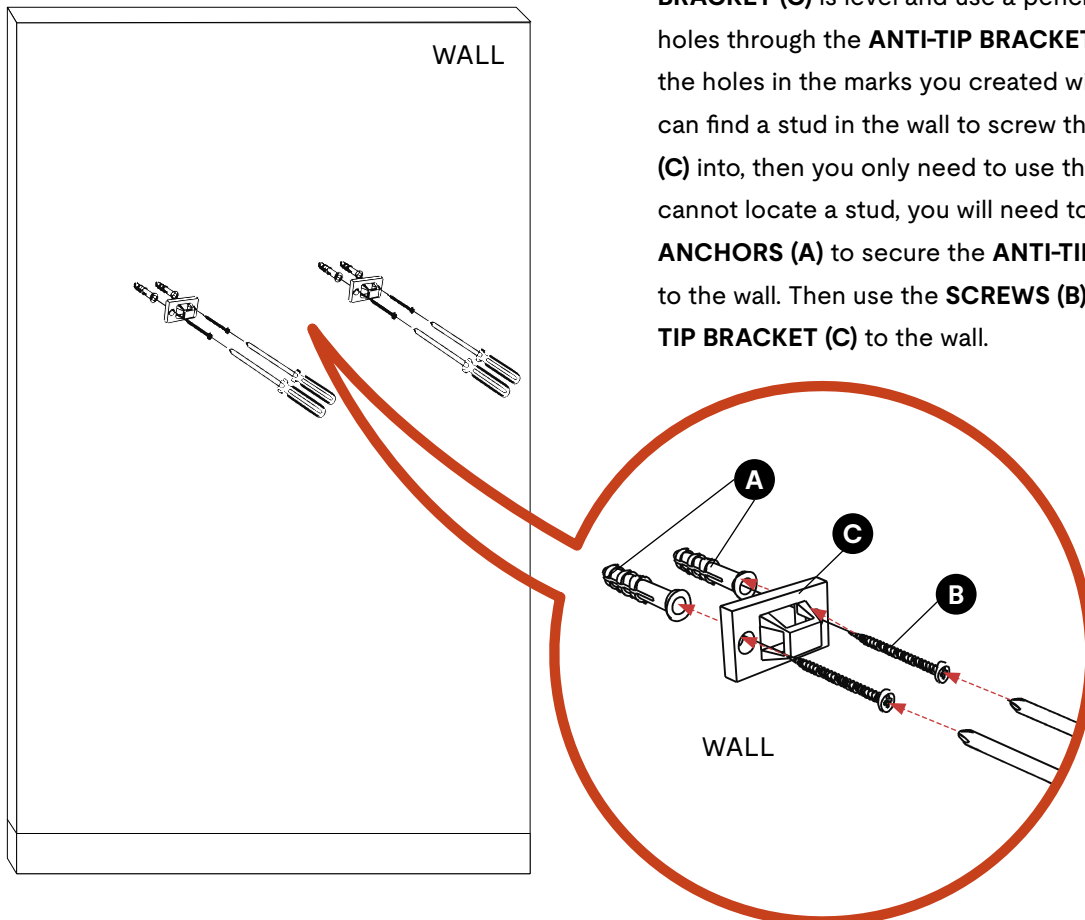

# JOON LOLOI

## STEP 2


Once the **ANTI-TIP BRACKETS (C)** have been attached to the wall, next attach the the other side of the kit to the furniture frame a the top of the mirror. To do this, temporarily move the mirror into its final position and mark the location of the wall bracket on the furniture frame.

## STEP 3

Make sure the brackets of the **ANTI-TIP KIT BRACKETS (C)** are secure on the wall and the frame. Now, move the furniture to it's final display against the wall and align the wall brackets to the mirror brackets. Then thread the strap of the **ANTI-TIP KIT (C)** and tighten until snug. **DO NOT OVER TIGHTEN.** Check to make sure the brackets are firmly installed and the strap is secure.

## CARE INSTRUCTIONS

Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents. Wipe ideally with a soft cotton cloth. Do not use harsh chemicals. Before cleaning any part, test a small spot in a hidden area. You may need to re-tighten all screws after inital use.

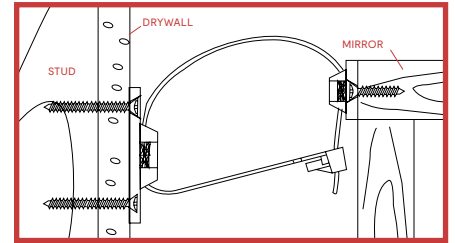

COMPLETED ANTI-TIP KIT INSTALLED

