## JOON LOLOI

# Kajel Rectangular Mirror

**ASSEMBLY INSTRUCTIONS** 

### JOON LOLOI

#### **ASSEMBLY INSTRUCTIONS**

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting. When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

PARTS INVENTORY				
ID	DESCRIPTION	QTY		
0	MIRROR	1		


#### STEP 1


Determine the type of wall you'll be hanging the mirror on (a stud finder could be needed), after insuring the CLEAT (C) is level, mark the location of the CLEAT (C) holes on the wall. Insert ANCHORS (A) if no stud is available in desired wall location and you are hanging onto drywall. Tighten ANCHORS (A) into wall with screwdriver or drill (not included) if needed.

#### STEP 2

Place the **CLEAT** (**C**) on the wall matching the holes you marked and created in step one, or matching the the holes over the **ANCHORS** (**A**) that are in the wall. Then insert **SCREWS** (**B**) through the **CLEAT** (**C**) holes and into the holes in the wall or into the **ANCHORS** (**A**) in the wall. Tighten with a phillips head screwdriver.

HARDWARE INVENTORY				
ID	IMAGE	DESCRIPTION	QTY	
A	DIMINITARE -	ANCHORS	3	
B	{ <del>  www</del> >	SCREWS	3	
0	0000	CLEAT	1	

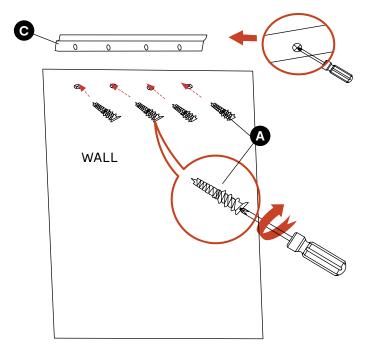


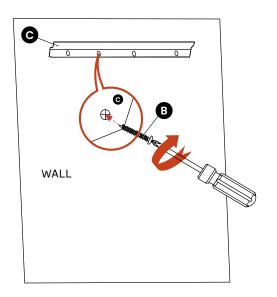

## JOON LOLOI

#### STEP 3

With help, hang the MIRROR (1) onto the CLEAT (C) that is attached to the wall, via the CLEAT (C) already attached to the MIRROR (1) to complete assembly.

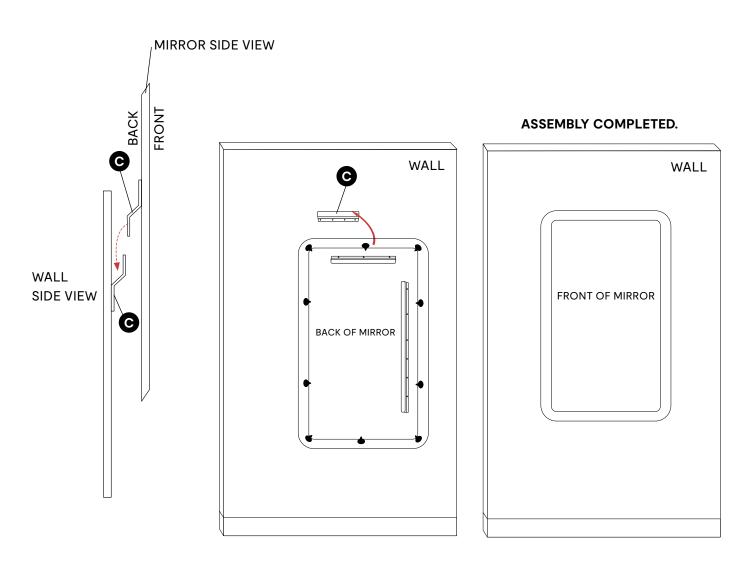

#### **CARE INSTRUCTIONS**

Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents. Wipe ideally with a soft cotton cloth. Do not use harsh chemicals. Before cleaning any part, test a small spot in a hidden area. You may need to re-tighten all screws after inital use.