





Nikita Floor Mirror

ANTI-TIP KIT INSTRUCTIONS

JOON LOLOI

ASSEMBLY INSTRUCTIONS

Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting. When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.

HARDWARE INVENTORY			
ID	IMAGE	DESCRIPTION	QTY
A		MOUNTING BRACKET	2
B		NYLON STRAP	1
C		SMALL SCREW	2
D		LARGE SCREW	2

⚠ WARNING!


Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Install tip-over restraint provided.
- Do not set heavy objects on top of this product, unless the product is specifically designed to accommodate them.
- Never allow children to climb or hang on mirrors, shelves, consoles, or cabinets with doors and/or drawers.

Use of tip-over restraints may only reduce but not eliminate, the risk of tip-over.

STEP 1

Determine the type of wall you'll be hanging the mirror against. Make sure the placement of the **MOUNTING BRACKET (A)** is level and use a pencil to mark the two holes through the **MOUNTING BRACKET (A)**. Use a drill to drill the holes in the marks you created with the pencil. If you can find a stud in the wall to screw the **MOUNTING BRACKET (A)** into, then you only need to use the screws. If you cannot locate a stud, you will need to use the **DRYWALL ANCHORS** to secure the **MOUNTING BRACKET (A)** safely to the wall. Then use the **LARGE SCREWS (D)** to attach the **MOUNTING BRACKET (A)** to the wall.

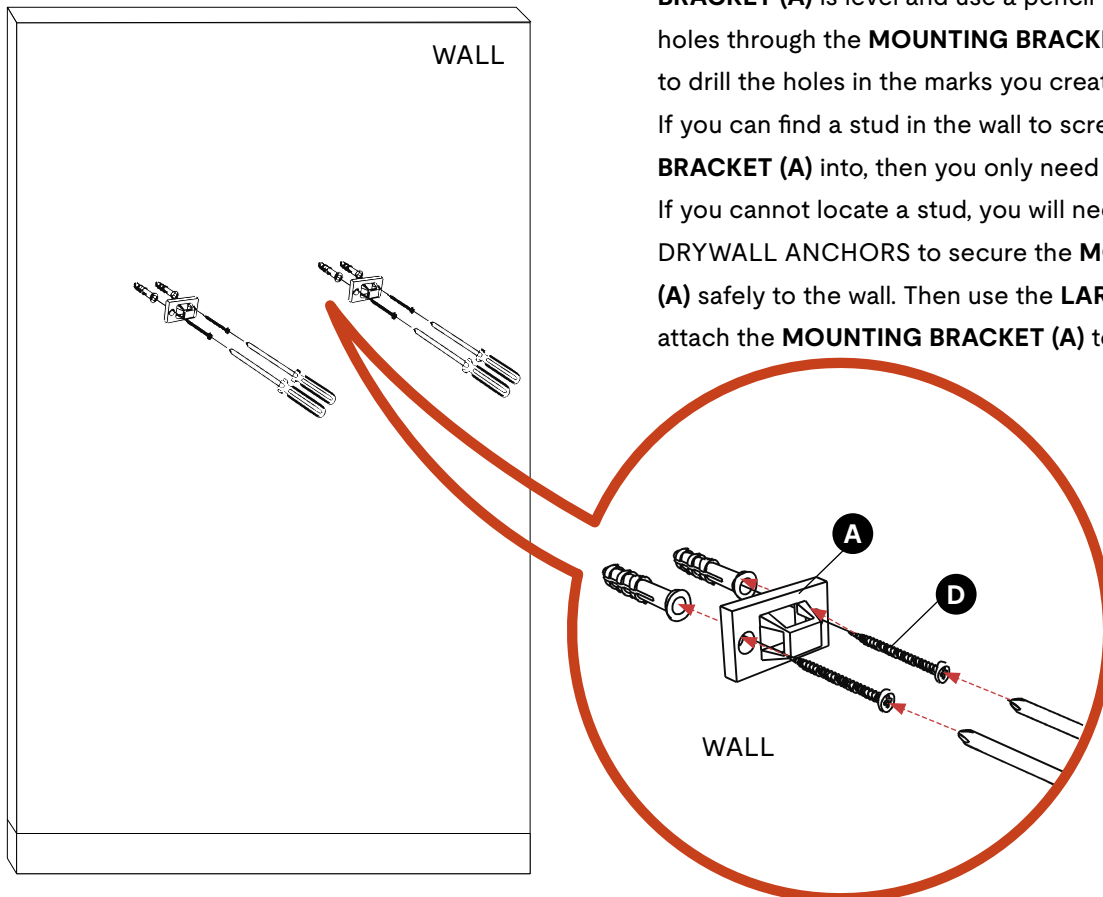

JOON LOLOI

STEP 2

Once the **MOUNTING BRACKET (A)** have been attached to the wall, next attach the the other side of the kit to the furniture frame on the top of the mirror using the **SMALLER SCREWS (C)**. To do this, temporarily move the furniture into its final position and mark the location of the wall bracket on the furniture frame.


STEP 3

Make sure the brackets of the **MOUNTING BRACKET (A)** are secure on the wall and the frame. Now, move the furniture to it's final display against the wall and align the wall brackets to the furniture brackets. Then thread the **NYLON STRAP (B)** of the **MOUNTING BRACKET (A)** and tighten until snug.

DO NOT OVER TIGHTEN. Check to make sure the brackets are firmly installed and the strap is secure.

CARE INSTRUCTIONS

Avoid direct exposure to sunlight. Do not place over heat or air conditioning vents. Wipe ideally with a soft cotton cloth. Do not use harsh chemicals. Before cleaning any part, test a small spot in a hidden area. You may need to re-tighten all screws after initial use.

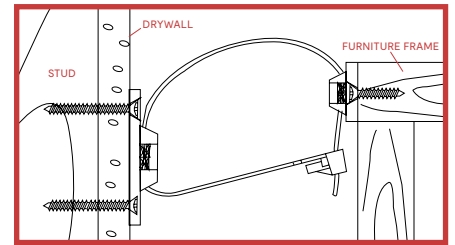

COMPLETED ANTI-TIP KIT INSTALLED

